



Portable BT Speaker

**ZEB** **SOUND**  
**FEAST 45**



**User Manual**

[www.zebronics.com](http://www.zebronics.com)

Thank you for purchasing the **“ZEB-SOUND FEAST 45”** Portable BT Speaker. Please read this user manual carefully before usage & save it for future reference.

**Note:**

- Avoid the usage of this product at high-temperature and high-humidity .
- Avoid the self-disassembling of the product or it will result in voiding the Product’s warranty.

**Caution:**

- There is a risk of explosion if the product is disposed in the fire.
- To know more about Terms and conditions for warranty policy, please visit

*<https://zebronics.com/pages/warranty-policy>*

**Features:**

- Upto 5h\* backup
- 6.6cm Driver
- 4 RGB Modes
- Deep Bass
- BT v5.4 | USB | mSD
- FM radio
- TWS Function
- Type-C Charging
- Built-in Battery
- Carry Handle
- 20W RMS Output

## Specifications:


Model No.	: ZEB-PSPK 78
BT Version	: v5.4
Driver Size	: 6.6cm x 1
Speaker Impedance	: 3Ω
Frequency Response	: 60Hz-20kHz
S/N Ratio	: ≥85dB
Max Supported USB/ mSD memory size	: 32GB
Supported Audio formats	: MP3,WAV,FLAC,APE
Charging time	: 4h
Playback time	: 5h*
Product Dimension (W x D x H)	: 23.2 x 9.2 x 12.3 cm
Net. Weight	: 628g

\* (LED off)

## Package Content:

Speaker	: 1 U
Charging Cable	: 1 U
QR Code Guide	: 1 U

## Port & Button Description:

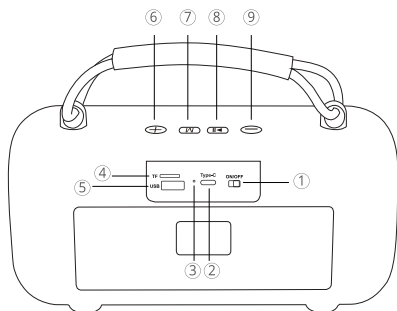

1. On/Off Switch
2. Type C Charging Port
3. LED Indicator
4. Micro SD Card Slot
5. USB Input port
6. Volume Increase/Next track/Next FM channel
7. Mode Switch
8. Play/Pause
9. Volume Decrease/Previous track/Previous FM channel.

## Button Functions:

1. **Volume Decrease/Previous track/Previous FM channel**
  - Short press to decrease volume level.
  - Long Press to change the media(Previous track).
  - In FM mode long press to change the previous channel.

## **2. Play/Pause**

- Short Press to play/pause the music.
- Long press to activate the TWS function.

## **3. Mode Switch**

- Short press to switch between modes.
- Long press to change the LED modes of the speaker.

## **4. Volume Increase/ Next track/ Next FM channel**

- Short Press to increase the volume level.
- Long press to change the media(Next track).
- In FM mode long press to change the next channel.

## **Instructions for Use:**

### **Bluetooth Instructions:**

- Make sure you are in BT discovery mode.
- In your source device settings, search for the BT name **“ZEB-SoundFeast 45”**
- Once the BT name is visible in the settings, tap on it and click pair.

### **USB/mSD Instructions:**

- This mode activates upon inserting the drive into its respective ports.
- The Supported file formats starts to play.

### **FM Radio Mode:**

Once the speaker is in FM mode, Long press the Play/Pause ►|| Button to start scanning for FM channels. Once scanning is complete, Press the +/- button to change the channels.

### **TWS Connectivity:**

- TWS mode requires two units of **“ZEB-Sound Feast 45”** speakers after entering the BT mode, long press Play/Pause ►|| Button (on either of the two speakers) after which, a pairing tone will be heard, indicating the inter-connection between the two speakers. Now check the phone’s BT setting for **“ZEB-SoundFeast 45”** and connect to experience True Wireless Stereo.

### **Charging the Speaker:**

1. Connect the Type C charging cable to the DC 5V Charging port of the speaker and insert the other end into a USB power source/adaptor.
2. Red LED glows indicating that the battery is being charged. The Red LED will turn off once it is fully charged.

