



ZEBRONICS
ALWAYS AHEAD

Portable BT Speaker

ZEB

**SOUND
FEAST**

500



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing **ZEB-SOUND FEAST 500** Portable Speaker. Please read the user manual carefully before usage & save it for future reference.

Features

Wireless BT

Supports micro SD

RGB Light

AUX Input

Type C Charging

Call Function

IPX5 waterproof

Media/Volume control

Built-in Rechargeable battery

Specifications

Output Power : 70W (35W+35W)

BT Version : 5.0

Driver Size : 89mm x 2

Speaker Impedance : 4Ω

Frequency Response : 80Hz-12kHz

S/N Ratio : ≥85dB

Max Supported micro

SD memory size : 32GB

Supported

Audio formats : MP3, WAV, FLAC

Charging time : 3.5H

Playback time : 9H*


Product Dimension : 390 x 137 x 175 mm
(W x D x H)
Net. Weight : 2.6 kg

Package Contents

Speaker : 1 Unit
Charging cable : 1 Unit
AUX cable : 1 Unit


**at 50% volume and LED OFF*

Product Details

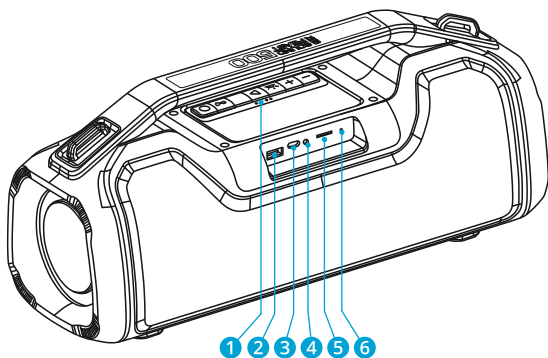

- 1 Battery Indicator
- 2 5V 1A USB Output
- 3 Charging Port
- 4 AUX port
- 5 Micro SD slot
- 6 Reset

Button Description

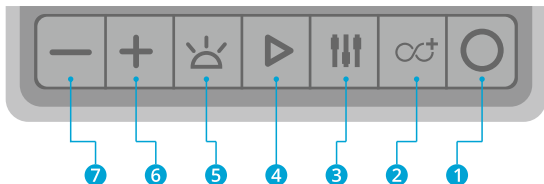

- 1 Power On/off
- 2 TWS Button
- 3 EQ Button / Long press
EQ button to change mode
- 4 Play / Pause
- 5 RGB LED Switch
- 6 Next / Volume Up
- 7 Previous / Volume Down

Button Function:

Power On/off

- Long-press the Power button to turn the speaker on and off.

Bluetooth

- Once the speaker is on, Please make sure that the speaker is in BT mode.
- Now, search for nearby BT device in your mobile and Tap on the BT name **ZEB-SOUND FEAST 500** to connect.
- Long-press “+” or “-” to control the media
- Short-press “+” or “-” to adjust the volume
- Short press “ **Play/Pause** ” to Play/Pause the music
- Long press “ **Play/Pause** ” to activate voice assistant **Siri/Google Assistant**.
- Long-press “ **TWS** ” button to disconnect the BT connection with the mobile device.

Playing music from Micro SD card

- Once the speaker is ON, Insert a Micro SD card into the slot
- The speaker will automatically detect the songs from the Micro SD card and play.
- Long-press “+” or “-” to control the media
- Short-press “+” or “-” to adjust the volume
- Short press “ **Play/Pause** ” to Play/Pause the music

TWS Function

- Turn on two **ZEB-SOUND FEAST 500** speakers you want to pair
- Short press the “ **TWS** ” button on any one speaker to activate TWS mode.

- Now, search for nearby BT device in your mobile and tap on the BT name **ZEB-SOUND FEAST 500** to connect.
- To exit TWS mode, short Press " **TWS** " button again.

***Note:** Users need to make TWS connection first, then make Bluetooth connection with the mobile phone.*

AUX IN

Switch the speaker to AUX Mode, Connect one end of the AUX Cable to the speaker & connect the other end to an audio source. The songs played from the audio source can be heard through the speaker.

RGB Light

The RGB light is on when speaker powered on, user can short-press the RGB Light button to turn the light off and on.

Charging instruction

Connect Type C cable to the speaker & connect the other end of the cable to a 5V DC adapter.

Note:

- *Don't keep the speaker near places which are at high temperature.*
- *Don't open the speaker in order to avoid electrical shock & other accidents*
- *Turn off the speaker if the speaker is not being used for a long period of time*

