



Portable BT Speaker

**NEB SOUND FEAST 50**



# User Manual

[www.zebronics.com](http://www.zebronics.com)

## **Dear Customer,**

Thank you for purchasing **ZEB-SOUND FEAST 50** Portable Bt Speaker. Please read the user manual carefully before usage & save it for future reference.

## **Features**

Wireless BT

Supports USB & mSD card

Built-in FM Radio

AUX Input

Call Function

Media / Volume control

Built-in Rechargeable battery

## **Specifications**

Output Power (RMS) : 14W (7W + 7W)

BT Version : 5.0

Driver Size : 57mm x 2

Speaker Impedance : 3Ω

Frequency Response : 20Hz-20kHz

S/N Ratio : ≥80dB

Max Supported USB memory size : 32 GB

Supported Audio formats : MP3, WAV, WMA,

Charging time : 5 H

Playback time : 20H\*


Product Dimension : 230 x 80 x100mm  
(W x D x H)  
Net. Weight : 710g

*\*at 50% volume*

## Package Contents

Speaker : 1 U  
Charging cable : 1 U  
AUX cable : 1 U  
QR Code Guide : 1 U

## Product Details

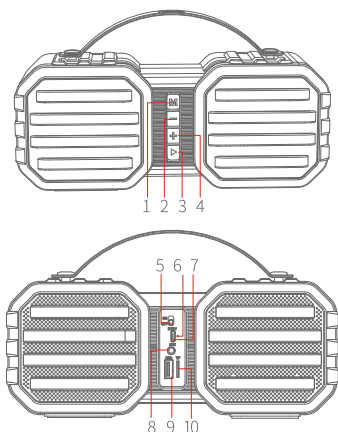

1 - Mode Switching  
2 - PREVIOUS/VOL-  
3 - MFB/PLAY/PASUE  
4 - NEXT/VOL+  
5 - Power switch

6 - LED indicator  
7 - Micro USB charging port  
8 - AUX in  
9 - USB Port  
10 - Micro SD card slot

## **Button Function:**

### **Power On/off**

Toggle the slide button to turn On/Off the speaker

### **Bluetooth**

- Once the speaker is on, Please make sure that the speaker is in BT mode.
- Now, search for nearby BT device in your mobile and Tap on the BT name **ZEB-SOUND FEAST 50** to connect.
- Long-press “+” or “-” to control the media
- Short-press “+” or “-” to adjust the volume
- Short press “ **Play/Pause** ” to play/Pause the music
- Long-press “ **TWS** ” to activate voice assistant **Siri/Google Assistant**.

### **USB Mode**

- Once the speaker is ON, Insert a USB pen drive to the speaker
- The speaker will automatically detect the songs from the pen drive and play
- Long-press “+” or “-” to control the media
- Short-press “+” or “-” to adjust the volume
- Short press “ **Play/Pause** ” to play/Pause the music

## FM Radio

- Once the speaker is turned ON, Please switch the speaker to FM mode using the Mode button.
- Press and hold the " **Play/Pause** " key to auto scan the available FM channels.
- Long-press " **+** " or " **-** " to change the scanned FM channels
- Short-press " **+** " or " **-** " to adjust the volume

***Note:** Please use Aux cable as antenna for better FM signal reception.*

## TWS Function

- Turn on two **ZEB-SOUND FEAST 50** speakers you want to pair
- Long press the " **Mode** " button on any one speaker to activate TWS mode.
- After Few seconds, both the speakers will be connected successfully.
- Now, search for nearby BT device in your mobile and Tap on the BT name **ZEB-SOUND FEAST 50** to connect.
- To exit TWS mode, long Press " **Mode** " button again.

***Note:** Users need to make TWS connection first, then make Bluetooth connection with the mobile phone.*

## AUX-IN

Connect one end of the AUX Cable to the speaker & connect the other end to an audio source. The songs played from the audio source can be heard through the speaker.

## Call Function

- Short press the Play/Pause button to accept and end the call.
- Long press the Play/Pause button to reject the call.

## Charging instruction

Connect Micro USB cable to the speaker & connect the other end of the cable to a 5V DC adapter.

### **Note:**

- *Don't keep the speaker near places which are at high temperature.*
- *Don't open the speaker in order to avoid electrical shock & other accidents*
- *Turn off the speaker if the speaker is not being used for a long period of time*

**ISO 9001:2015 Certified Company**  
**[www.zebronics.com](http://www.zebronics.com)**

