



Portable BT Speaker

ZEB **SOUND**
FEAST **550**



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing the **ZEB-SOUND FEAST 550** Portable BT Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- *Avoid the usage of this product at high-temperature environments and high-humidity.*
- *Avoid the self-disassembling of the product or it will result in voiding the Product's warranty.*

Caution:

- *There is a risk of explosion if the product is disposed in the fire*
- *To know more about Terms and conditions for warranty policy, please visit*

<https://zebronics.com/pages/warranty-policy>

Features:

- BT v5.3 | USB | AUX
- RGB LED Modes
- TWS Function
- 6.3mm Mic Input
- Deep Bass
- Splash proof
- Media / Volume control
- Built-in Rechargeable battery

Specifications:

Output Power : 75W


BT Version	: 5.3
Driver Size	
Woofer	: 10.16cm
Full Range	: 7.8cm x 2
Speaker Impedance	
Woofer	: 4Ω
Full Range	: 8Ω
Frequency Response	: 65Hz-19kHz
S/N Ratio	: ≥65dB
Max Supported USB memory size	: 32GB
Supported Audio formats	: MP3, WAV, FLAC, WMA,FLAC,APE
Charging time	: 3h
Playback time	: 5h*
Product Dimension (W x D x H)	: 41 x 17.2 x 20 cm
Package Dimension (W x D x H)	: 45 x 19.5 x 23.5 cm
Net. Weight	: 2.98kg

* at (LED Off)

Package Contents:


Speaker	: 1 U
Charging cable	: 1 U
AUX Cable	: 1 U
QR Code Guide	: 1 U

Button Description:

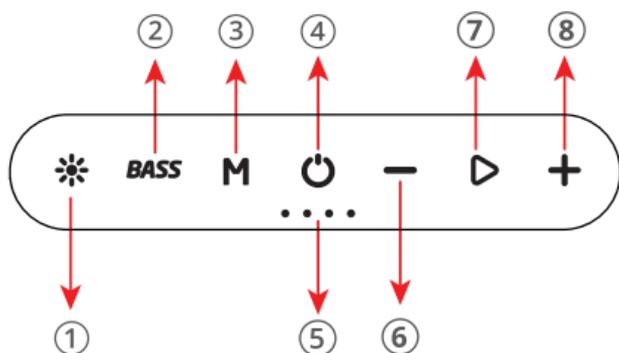

- ① LED Mode Button
- ② Bass Boost button
- ③ Mode Button
- ④ Power On/Off Button
- ⑤ Battery indicator
- ⑥ Volume Decrease Button
- ⑦ Play/Pause Button
- ⑧ Volume Increase Button

Port Description:

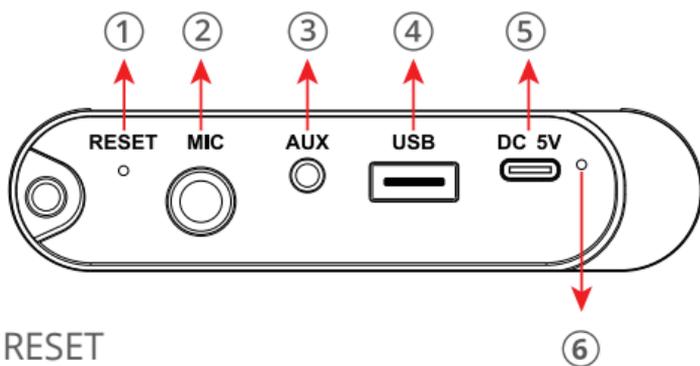

- ① RESET
- ② 6.3mm MIC Input
- ③ AUX Input
- ④ USB Input
- ⑤ Type-C charging
- ⑥ LED Indicator

General Instructions

Button Functions:

- Turn the speaker On/Off by long pressing the Power button.
- Short Press the Mode Button to Switch between the Input Modes. Long Press the Mode Button to Force disconnect the BT Mode. Double Press the Mode button to adjust MIC Echo Control.
- Short Press the LED Mode button to turn on or change it to different LED Modes. Long Press the LED Mode button to Turn Off/On the LED's.
- Short Press the Volume Decrease button to decrease the Volume level of the Tracks/MIC Volume/Echo adjust Controls. Long Press the Volume Decrease button to change it to Previous Track.
- Short Press the Play/Pause button to Play/Pause the Tracks. Long Press the Play/Pause button to Enter/Exit into the TWS Mode Function.
- Short Press the Volume Increase button to Increase the Volume level of the Tracks/MIC Volume/Echo Volume Controls. Long Press the Volume Increase button to change it to Next Track.
- Short Press the Bass Boost button to enter into Bass-boosted Mode. Long Press the Bass Boost button to Reset the device.

BT Mode:

- Short Press the Mode button to enter BT Mode.
- Turn on the BT on your device and search for the BT compatible devices
- Then pair the speaker with the name **“ZEB-SoundFeast 550”** on your device to connect. Once paired successfully a tone will be played.

USB Mode:

- Insert the USB Drive to the USB port, the speaker will detect the USB Drive and the audio file will be played automatically.

AUX Mode:

- The Speaker can be connected to an audio device using a 3.5mm cable. Connect the one end of the cable to the speaker & connect the other end of the cable to an audio source. The tracks from the audio source can be heard through the speaker.

Note: *The Media Controls of the speaker cannot be controlled on this speaker on the AUX Mode.*

TWS Function:

- When the speaker is in BT Mode Long press the Play/Pause button to enter into BT TWS Mode. The secondary device automatically searches and gets connected. To disconnect the TWS Function, Long press the Play/Pause Button once again.

Note: *Requires two ZEB-SOUND FEAST 550 speakers for TWS Mode. Users need to make a TWS connection first, then make BT connection with the mobile phone.*

Charging instruction :

- Connect the charging cable to the DC 5V port of the speaker and insert the other end into a DC 5V charging power source/adapter.
- LED glows indicating that the battery is being charged.
- The red LED goes OFF after the speaker gets fully charged

