



Portable BT Speaker

**NEB SOUND
FEAST 65**



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing “ZEB-Sound Feast 65” BT speaker. Please read this user manual carefully before operation & save it for future reference.

Note:

- *Avoid the use of this product at the high-temperature and high humidity environment.*
- *Avoid self-disassemble of product, or it will result in the failure of warranty.*
- *Please charge the product with power adaptor output rated voltage DC 5V.*

Features

BT v6.0 / USB / FM Radio / AUX / mSD card

Up to 7h* backup

Dual 10.16cm driver

20W RMS output

Wired MIC Included

6.35mm MIC Input

RGB LED modes

Type-C Charging

Carry Handle

Built-in Rechargeable battery

Specification


Output Power (RMS) : 20W

BT Version	: 6.0
Driver Size	: 10.16 cm
Speaker Impedance	: 4Ω
Frequency Response	: 80Hz-15kHz
S/N Ratio	: ≥60dB
Max Supported USB Memory Size	: 32GB
Supported Audio Formats	: MP3
Charging Time	: 9-10h
Playback Time	: 7h*
Product Dimension	: 33.1 x 13 x 18 cm (W x D x H)
Net. Weight	: 2.4kg

Package Contents

Speaker	: 1 U
Wired Mic	: 1 U
AUX Cable	: 1 U
Charging Cable	: 1 U
Antenna Cable	: 1 U
QR Code Guide	: 1 U

**at 70% volume*

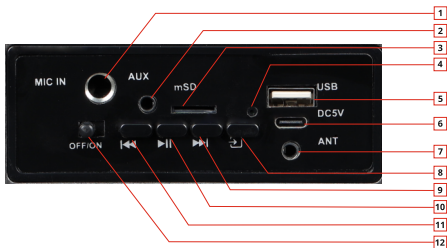

1. Mic In
2. AUX Port
3. mSD Card Slot
4. LED indicator
5. USB Port
6. Type-C Charging Port
7. External Antenna Port
8. Mode / LED Control
9. Next / Volume +
10. Play / Pause
11. Previous / Volume -
12. Power

Charging the Speaker

1. Connect the Micro USB charging cable to the DC 5V charging port of the speaker and insert the other end into a USB power adaptor.
2. LED glows, indicating that the battery is being charged. The LED will turn off once it is fully charged.

BT mode

1. Switch the input mode to BT on your **"ZEB-Sound Feast 65"**.
2. Turn ON BT on your phone / tablet and search for nearby BT devices.
3. Search for the BT name **"ZEB-Sound Feast 65"** and tap to connect it.

USB / mSD mode

Connect the USB drive / mSD card device to the respective ports of speaker and the speaker would automatically start playing from the USB device.

AUX mode

Connect the speaker to an audio source (phone, MP3 player, PC) using 3.5mm cable. Once connected, change the speaker to AUX mode and thereafter audio can be streamed via the speaker from the connected source.

FM Radio mode

Switch to FM mode and short press the “Play/Pause” Button to scan for the available FM Channels.

Once the Scanning is done, the speaker will automatically play the first channel.

Note:

Kindly connect the external antenna to the respective port for better FM signal reception.

