



Portable BT Speaker

SOUND75
FEAST



User Manual

www.zebronics.com

Thank you for purchasing **ZEB-Sound Feast 75** Portable BT Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- *Avoid the use of this product at the high temperature and high humidity environment.*
- *Avoid self-disassemble of product, or it will result in the failure of warranty.*
- *Please charge the product with power adapter output rated DC 5V/1 A.*

To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

Features:

BT v5.3

mSD | AUX | FM Radio

TWS Function

Transparent Body

14W RMS Output

Upto 12h* Backup

Carry Strap

Built-in Rechargeable Battery

Type-C Charging

Media / Volume Control

Specifications:


Output Power (RMS)	: 14W (7W + 7W)
BT Version	: 5.3
Driver Size	: 6.6cm x 2
Speaker Impedance	: 3.6Ω
Frequency Response	: 100Hz-18kHz
S/N Ratio	: ≥70dB
Max. Supported mSD Memory Size	: 32GB
Supported Audio Formats	: MP3
Charging Time	: 4-5h
Playback Time	: 12h*
Product Dimension (W x D x H)	: 24.5 x 8 x 15 cm
Net. Weight	: 971g

Package Contents :

Speaker	: 1 U
Charging Cable	: 1 U
QR Code Guide	: 1 U


@50% volume (LED off)

Buttons Description :

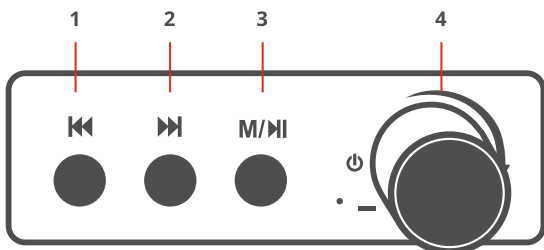

1. Previous Track / Channel
2. Next Track / Channel
3. Mode / Play / Pause
4. Volume Knob

Port Description :

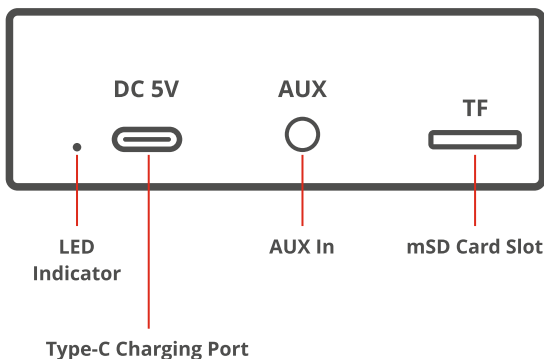

BT Mode :

- Switch the Input mode to BT on your **"ZEB-Sound Feast 75"**
- Turn ON BT on your phone / tablet and search for nearby BT devices.
- Search for the BT name **"ZEB-Sound Feast 75"** and tap to connect it.

FM Mode :

To Switch to FM mode long press the **"M"** button. To scan for the available FM Channels, short press the **Play/Pause** button. Short press the **Next/Prev.** button navigates between the scanned channels.

mSD Mode :

Connect the mSD card to the respective slot and the speaker would automatically start playing from the mSD card.

AUX Mode :

Connect the speaker to an audio source Device using 3.5mm cable. Once connected, change the speaker to AUX mode and thereafter audio can be streamed via the speaker from the connected source.

Charging instruction :

Connect the charging cable to the Type-C port of the speaker and other end to the power adapter.

TWS Function :

- Turn on both the speakers and make sure both speakers are in BT discovery mode.
- Long press the **Next Track** button on any of the speakers. After a few seconds it will indicate a voice prompt for TWS pairing.
- Now open your device's BT settings & select **ZEB-SOUND FEAST 75** to pair with it.
- To be noted that a single BT name **ZEB-SOUND FEAST 75** will be visible in the BT menu.
- Upon connecting you can experience the TWS function.

***Note:** Requires two speakers for TWS feature.*

