



Portable BT Speaker

ZEB **SOUND880**
FEAST880



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing the **"ZEB-SOUND FEAST 880"** Portable BT Speaker. Please read this user manual carefully before usage and save it for further reference.

Note:

- *Avoid the usage of this product at the high temperature and high humidity environment.*
- *Avoid the self-disassemble of the product as it results in the failure of Warranty.*
- *Turn off the speaker if the speaker is not being used for a long period of time.*
- *To know more about Terms and conditions for warranty policy, please visit*

<https://zebronics.com/pages/warranty-policy>

Features:

- 60W RMS Output
- Up to 8h* Backup
- 20.32cm Full Range Driver
- TWS Function
- Karaoke Maker | Mic Recording
- Wireless MIC
- BT v5.4 | USB | mSD | FM | AUX
- 6.3mm Mic Input
- Volume, Bass & Treble controls
- Mic Volume, Bass, Treble & Echo controls
- RGB Lights and LED Display
- Mobile Holder

- Type-C Charging
- Built-in Rechargeable Battery
- Remote control

Specifications:


Output Power (RMS)	: 60W
Driver Size	
Full range	: 20.32cm
Tweeter	: 4.5cm
Impedance	
Full range	: 4Ω
Tweeter	: 8Ω
Frequency Response	: 30Hz-20kHz
S/N Ratio	: ≥60dB
File Format Support	: MP3 (USB/mSD)
Line Input	: 3.5mm
Max Supported USB/mSD Memory Size:	32GB
FM Frequency Range	: 87.5 MHz - 108 MHz
Charging Time	: 5.5h
Playback Time	: 8h*
BT Name	: ZEB-SOUND FEAST 880
BT Version	: v5.4
Product Dimension	: 27 x 27 x 38.5 cm (W x D x H)
Package Dimension	: 34 x 31.2 x 48.5 cm (W x H x D)
Net.Weight	: 4.25 kg

**at 70% Volume (LED OFF)*

Package Contents :

Speaker	: 1 U
Remote	: 1 U
Wireless Mic	: 1 U
Charging Cable	: 1 U
Input cable	: 1 U
QR Code Guide	: 1 U


Port & Button Description:

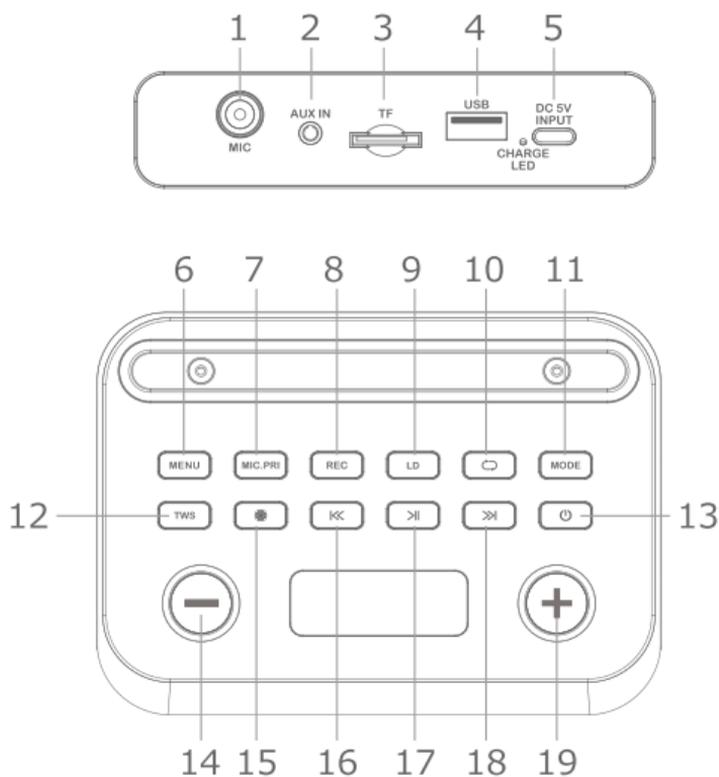

1. Microphone Input Jack
2. AUX Input
3. mSD
4. USB

5. Type-C
6. MENU: Bass/ Treble/ Mic Volume/ Mic Echo/ Mic Treble/ Mic Bass
7. MIC. PRI: Microphone Priority
8. REC : Recording your voice by microphone, short press REC button, recording voice playback in USB/TF.
9. LD : Indoor/Outdoor Mode
10.  Repeat/Long Press: Voice Cancel
11. MODE: FM/ AUX / BT / USB / mSD
12. TWS Function
13.  Power On/OFF
14. Volume -
15.  Light Switch
16.  Previous Track/In FM mode, select Previous Channel
17.  Play/Pause/In FM mode:Auto scan FM
18.  Next Track/ In FM mode, select next Channel
19. Volume +

Remote Control:

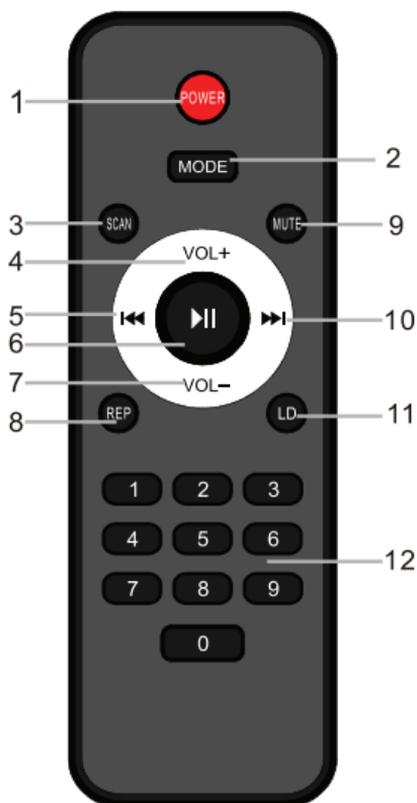

1. POWER: Turn the unit power ON/OFF.
2. MODE: Switch between FM / AUX / BT / USB / mSD
3. SCAN: When it is ON the mode of FM, press this button to auto scan all channels.
4. VOL+: increase the master Volume
5. ◀◀ Previous Track/ In FM mode, select previous channel
6. ▶▶ Play or Pause the track.
7. VOL- : Decrease the master Volume
8. REP: Repeat one/ Repeat all. Long press for voice cancel
9. MUTE: Mute or unmute audio

10. ►► Next Track/ In FM mode, select next channel
11. LD: Indoor/Outdoor Mode
12. 0-9, key number for selecting the certain tracks in the USB/mSD card

General Instructions:

BT Mode

- Once the speaker is on, please make sure that the speaker is in BT mode. (Press the Mode button on the front panel. The system voice will say "Bluetooth mode".)
- Now, activate Bluetooth on your mobile phone and search for the BT name **"ZEB-SoundFeast 880"** to connect.

USB/mSD Mode:

Insert the USB Drive / mSD Card to the Speaker. The speaker will detect the USB/mSD Card and the audio files from the drive / card will be played automatically.

FM Radio:

- Once the speaker is on, press the "MODE" button to FM radio mode.
- Long press the play/pause button to scan the available FM channels, once the scanning is done, the speaker will start playing the first scanned channel.

Note: For better FM reception, Please use the provided AUX Cable.

AUX-IN:

The speaker can be connected to an audio device using a 3.5mm cable. Connect the one end of the cable to the speaker & connect the other end of the cable to an audio source. The tracks from the audio source can be heard through the speaker.

Recording Function:

To record a voice, first plug in a USB/mSD card into the speaker, which will act as a storage device. Press the REC button to start or stop recording.

Note: The speaker can record the Mic input.

TWS Connectivity:

1. Turn on both **ZEB-SoundFeast 880** speakers and select BT input mode on each speaker.
2. Use your mobile phone to connect to one of the speakers via Bluetooth.
3. Press the TWS button on any of the speakers. The unit will automatically connect to each other.

Note: Requires two speakers for the TWS feature

Charging Indication:

Charging Indication : Red LED Glows

Full Charging Indication : Red LED goes Off

