



Portable BT Speaker
ZEB **SOUNDPOD30**



User Manual

www.zebronics.com

Thank you for purchasing **ZEB-SOUND POD 30 PORTABLE BT SPEAKER** please read this user manual carefully and keeps it for future reference.

Note:

- *Avoid the usage of this product at the high temperature and high humidity environment.*
- *Avoid the self-disassembly of the products or it results in the voiding the product's Warranty.*
- *Turn off the speaker when the speaker is not in use.*
- *To know more about Terms and conditions for warranty policy, please visit :*

<https://zebronics.com/pages/warranty-policy>

Features:

Wireless BT v5.3 | FM Radio | mSD

RGB LED Lights

TWS Function

Type-C Charging

Call Function

Media / Volume control

Built-in Rechargeable battery

Carry Handle

Splash Proof

Passive Radiator

Deep Bass

Specifications:


Model No	: ZEB-PSPK 42
Output Power (RMS)	: 12W
BT Version	: 5.3
Driver Size	: 6.6cm
Speaker Impedance	: 3Ω
Frequency Response	: 100Hz-18kHz
S/N Ratio	: ≥75dB
Max. Supported USB/mSD Memory Size	: 32GB
Supported Audio Formats	: Mp3
Charging Time	: 8h
Playback Time	: 20h*
Product Dimension (Dia x H)	: 14.5 x 10 x 17 cm
Net. Weight	: 458g

@50% volume (LED off)

Package Contents :

Speaker	: 1 U
Charging Cable	: 1 U
QR Code Guide	: 1 U



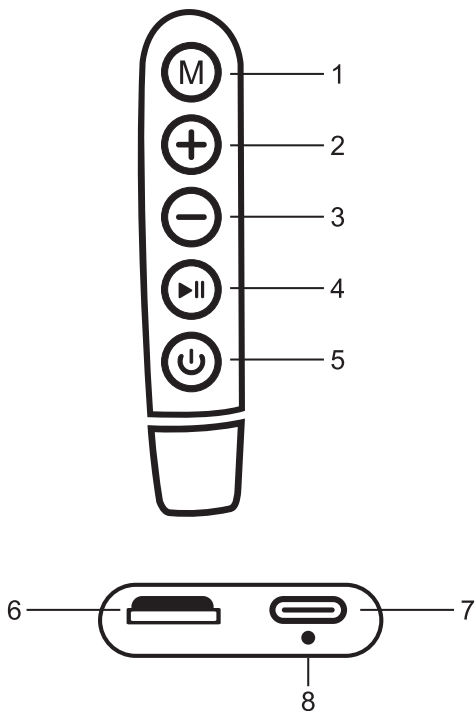



Buttons and Ports Description :



1. Mode Button
2. Volume UP Button
3. Volume down Button
4. Play/Pause Button
5. Power Switch
6. Micro SD Port
7. Charging Port
8. Charging Indicator

Instructions for Use:

Button Function :

1. Short press the power switch  to switch on/off the speaker.
2. Single press the "M" Button to switch the modes like BT/FM/mSD. Long press the "M" Button to change the LED Colors.
3. Single Press the "+" Button for 'Next'. Long Press the '+' button to increase the volume.
4. Single Press the "-" Button for 'Previous'. Long Press the '-' button to decrease the volume.
5. Single Press this  Button to Play/Pause. Long press this  button to TWS/Scanning Function.
6. During Calls, Single Press this  Button to Answer/End the calls. Double  Press this Button to reject the calls. Again Double Press this  Button to redial the last dialed number.

BT Mode :

Turn ON the speaker, press "Mode" button to switch to BT Mode. Switch ON BT on your phone or tablet and search for nearby BT devices, Search for the BT name **"ZEB-SOUND POD 30"** and tap to connect it.

FM Mode :

Press the M button to select FM mode. Long press this ►|| button to initiate FM Scanning process. Once the scanning process is done, the Speaker automatically plays the First channel of the FM

Micro SD Mode :

The speaker automatically switches to mSD input mode when an mSD Card is inserted into the speaker. The songs from the mSD audio source can be heard through the speaker (this mode isn't selectable on the speaker unless a mSD Card is Inserted)

Call Function :

Single Press this ►|| Button to Answer/End the calls. Double Press this ►||Button to reject the calls. Again Double Press this ►||Button to redial the last dialed number.

TWS Function :

Turn on two **ZEB-SOUND POD 30** speakers. Long press on the ►|| button for few seconds on any one speaker to activate TWS function. After Few seconds, you'll hear TWS connected notification from the speakers when they are connected successfully.

Now, search for nearby BT device in your mobile and Tap on the BT name **ZEB-SOUND POD 30** to pair the speaker.

Note :

Requires two Zebronics **ZEB-SOUND POD 30** speakers for TWS feature.

LED Light Control “

Long press the “M” Button to Turn the LED On/Off.

Charging Instructions :

Connect the one end of the power cable to speaker and connect the other end to a rated DC 5V adapter. The Speaker has constant Red led indication when the speaker is charging. The Indicator turns off when the speaker is completely charged.

