

 ZEBRONICS

Portable Bt Speaker

**SOUND
FEAST 90**



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing "**Zebronics Sound Feast 90**" Portable BT Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid the self-disassembly of the products or it results in the voiding the product's Warranty.
- Turn off the speaker when the speaker is not in use.
- Please charge the product with power adapter output rated voltage DC 5V.

To know more about Terms and conditions for warranty policy, please visit <https://zebronics.com/pages/warranty-policy>

Features

BT v5.0

Supports USB & mSD

Built-in FM Radio

AUX Input

TWS Function

6.3mm Microphone Input

Media / Volume Control

Built-in Rechargeable Battery

LED Lights

Specifications

Output Power (RMS)	: 10W
BT Version	: v5.0
Driver Size	: 10.16cm
Speaker Impedance	: 2Ω
Frequency Response	: 100Hz-20kHz
S/N Ratio	: ≥ 80dB
Max Supported USB/ mSD memory size	: 32GB
Audio formats	: MP3 / WAV
Charging time	: 2-3h
Playback time	: 3h*
Product Dimension (Dia x H)	: 15.2 x 19 cm
Net. Weight	: 650g

Package Contents:

Speaker	: 1 U
Micro USB Charging/ 3.5mm Aux Cable	: 1 U
QR Code Guide	: 1 U

* at 50% volume (with LED off)

Control panel Functions:-



1. OFF/ON Button - Power OFF/ON switch
2. M Button : Long press – TWS function
Single press - Switching between inputs.
3. Previous / Volume - [⏮/ -] – [short press for Previous/ Press and hold for Volume decrease]
4. Play/Pause/LED Button- [short press for Play / pause the media / press and hold – LED ON/OFF]
5. Next/ Volume + [⏭/ +] :- [short press for Next/ Press and hold for Volume increase]
6. LED Indicator
7. DC 5V – Power Input
8. USB port
9. Micro SD slot
10. MIC – Microphone input

General Instructions:-

Charging Instructions:

Connect the one end of the power cable to speaker and connect the other end to a rated **DC 5V 1A** adapter. The Speaker has constant Red led indication when the speaker is charging. The Indicator turns off when the speaker is completely charged.

BT Mode:

Power ON the speaker, press "M" button to switch to BT Mode. Switch ON BT on your phone or tablet and search for nearby BT devices, Search for the BT name "**ZEB SOUND FEAST 90**" and tap to connect it.

USB/mSD Mode:

The speaker automatically switches to USB/mSD input mode when a USB flash drive/mSD Card is inserted. The songs from the audio source can be heard through the speaker (this mode isn't selectable on the speaker unless a USB/mSD flash drive is connected). Single Press the **Previous / - button** to switch to Previous audio track and Single Press the **Next / + button** to switch to Next audio track.

AUX-IN:

Switch the speaker to AUX mode. The speaker can be connected to an audio source

using a 3.5mm cable. Connect the one end of the cable to the speaker and the other end to an audio source. The songs from the audio source can be heard through the speaker.

FM Radio:

Switch the speaker to FM mode. In FM mode, single press the **Play/Pause** button in the control panel to scan for the available FM channels. Once the FM scanning is done, the scanned channels will begin to play.

- Press the **Previous / -** button to switch to previous FM channel and Press the **Next / +** button to switch to next FM channel.
- Press **Play/Pause/ LED button** to Play/pause the FM Media.

TWS Function:

- Turn on two **ZEB-SOUND FEAST 90** speakers.
- Press and hold the **"M"** button for few seconds on any one speaker to activate TWS function.
- After Few seconds, you'll hear TWS connected notification from the speakers when they are connected successfully.
- Now, search for nearby BT device in your mobile and Tap on the BT name **ZEB-SOUND FEAST 90** to pair the speaker.

*Note: Requires Two **Zebtronics SOUND FEAST 90** speakers for TWS feature.*

ISO 9001:2015 Certified Company
www.zebronics.com

