



Portable BT Speaker



## User Manual

[www.zebronics.com](http://www.zebronics.com)

Thank you for purchasing the **ZEB-Vibe** Portable Speaker. Please read the user manual carefully before usage & save it for future reference.

**Note:**

- Avoid the usage of this speaker at the high temperature and high humidity environment.
- Avoid the self-disassembly of the product as it results in the failure of Warranty.

**Features**

- Trolley speaker
- BT v5.0 / USB / mSD / FM / AUX / MIC

Input x 2

- Karaoke function
- LED display
- LED lights
- Dual Full range 20.32cm Drive
- Remote control
- Wireless mic
- Built-in rechargeable battery
- TWS Function
- Volume, Treble, Bass, MIC Volume, Echo Control

## Specifications


Output power (RMS)	: 60W (30W x 2)
Driver size	
Full range	: 20.32cm x 2
Tweeter	: 2.54 cm
Impedance	
Full range	: 4Ω
Tweeter	: 10Ω
Frequency response	: 65Hz-18kHz
S/N Ratio	: ≥60dB
File format	
support (USB/mSD)	: MP3, WAV, WMA
Line input	: 3.5mm
Max. supported	
memory size	: 32GB (USB/mSD)
FM frequency range	: 87.5 MHz-108 Mhz
Charging time	: 5h
Playback time	: 7.5h*
BT name	: ZEB-Vibe
BT version	: 5.0
Product dimension	: 24.8 x 24 x 54.2 cm (W x D x H)
Net. weight	: 6.4 kg

## Package Content

Speaker	: 1 U
Remote	: 1 U
Wireless Mic	: 1 U
Power Cord	: 1 U
Input cable	: 1 U
QR Code Guide	: 1 U


*\*at 50% Volume (LED OFF)*

## Control Panel Description

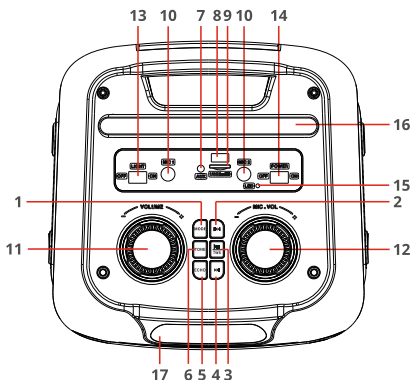

1. Input mode change Key (BT/USB/mSD/FM/AUX)
2. Previous Track/FM channel key
3. Play/Pause /TWS Connection key
4. Next Track/FM channel key
5. Echo control
6. Short press this button one time, screen will display "b",then turn the VOLUME knob to adjust the bass of unit. Short press this button two times, screen will display "t", then turn the VOLUME knob to adjust the treble of unit.
7. AUX IN
8. USB port
9. mSD card port
10. Microphone input port 1 and port 2
11. Master volume control
12. Mic volume control
13. Light switch
14. Power ON/OFF switch
15. Charging indicator
16. Phone/tablet holder
17. LED display

## Remote Control

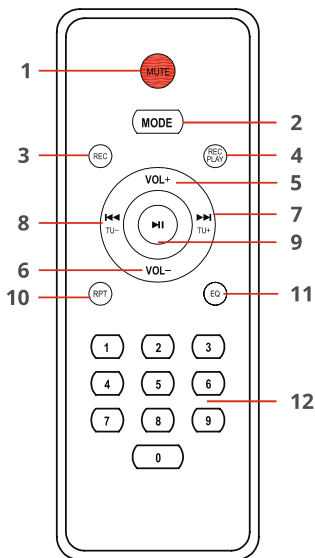

1. Mute / Unmute
2. Mode change key
3. Recording key
4. Play recorded file
5. Volume +
6. Volume-
7. Next Track / FM channel + / Tune +
8. Previous Track / FM channel - / Tune -
9. Play / Pause key
10. Repeat key
11. EQ preset
12. Numeric selection (0-9)

## **General Instructions**

### **BT Mode:**

Switch the speaker to BT mode, Scan for nearby BT devices in your device. Tap on “**ZEB-Vibe**” to connect.

### **USB/mSD Mode:**

Insert the USB Drive/mSD Card to the speaker. The speaker will detect the USB Drive/mSD Card and the audio files from drive will be played automatically.

### **FM Radio:**

Switch the speaker to FM, In FM Mode, long Press the Play/Pause Key to scan the available FM channels. Once the scanning is done, The speaker will start playing the first scanned channel.

### **AUX-IN:**

The speaker can be connected to an audio device using a 3.5mm cable. Connect the one end of the cable to the speaker & connect the other end of the cable to an audio source. The songs from the audio source can be heard through the speaker.

## **TWS Connectivity:**

1. Turn on both **ZEB-Vibe** speakers and select BT Input Mode on both the speakers.
2. Long press the TWS button for 3 seconds on any one of the speaker.
3. You will hear a tone which indicates the TWS mode is activated between both speakers
4. Open BT Settings on your device and search for BT name **ZEB-Vibe** then tap to connect on it.

## **Recording Function:**

To record a voice, first plug-in a USB/mSD card into the speaker which will act as a storage device. Press the REC. key on the remote to start/stop recording. Once the song or voice is recorded through the Mic, press the REC. PLAY key to play the recorded file.

***Note:** Speaker can record the Mic input.*

## **Charging Indication:**

Charging Indication : Red LED Flashing  
Full Charging Indication : Red LED Glows

**ISO 9001:2015 Certified Company**  
**[www.zebronics.com](http://www.zebronics.com)**

