

 ZEBRONICS

Portable BT Speaker

ZEB **VIGOR**



**User Manual**

[www.zebronics.com](http://www.zebronics.com)

**Dear Customer,**

Thank you for purchasing **ZEB-VIGOR** (*Portable BT Speaker*). Please read this user manual carefully before operation & save this user manual for further reference.

**Note:**

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid the self-disassembly of the products or it results in voiding the product's Warranty.
- Charge the speaker with included power cable.

To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

**Features:**

- BT v5.0 | USB | mSD | FM | AUX | MIC IN x 2
- Karaoke Function
- LED Display
- RGB lights
- Dual Full Range 20.32cm
- Remote control
- Wireless mic
- Built-in Rechargeable Battery
- TWS Function
- Volume, Treble, Bass, Mic Vol, Echo Controls

## Specification:


Output Power(RMS)	: 60W (30W + 30W)
Driver Size	: Full range - 20.32cm x 2 : Tweeter - 2.54cm
Impedance	: Full range - 4Ω : Tweeter - 8Ω
Frequency response	: 65Hz-18kHz
S/N Ratio	: ≥60dB
File format support (USB/mSD)	: MP3, WAV
Line input	: 3.5mm
Max supported USB/mSD memory size	: 32GB
FM frequency range	: 87.5 MHz - 108 MHz
Charging time	: 7h
Playback time	: 6h*
BT name	: ZEB-VIGOR
BT version	: v5.0
Product Dimension (W x D x H)	: 28.5 x 27 x 70 cm
Net.Weight	: 7.2 kg

*\* at 50% volume (LED OFF)*

## Package Contents:


Speaker	: 1 U
Remote	: 1 U
Wireless Mic	: 1 U
Power Cord	: 1 U
Input cable	: 1 U
QR Code Guide	: 1 U

## Control Description

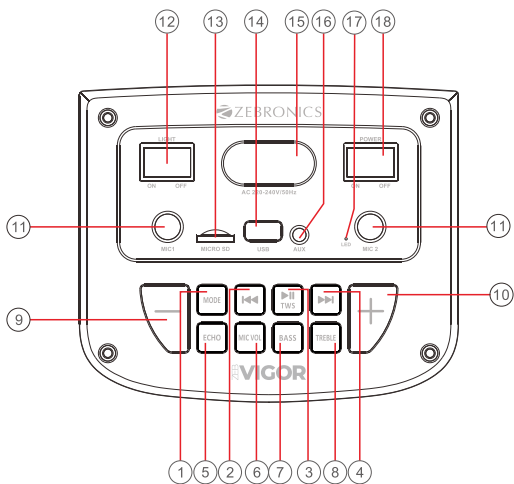

1. Input mode change button & Long press to switch between 5 LED modes
2. Previous track/FM channel
3. Play/Pause in USB, mSD & BT / Long press for TWS connection
4. Next track/FM channel
5. Short press this button and then press Volume +/- to adjust the Mic echo
6. Short press this button and then press the volume +/- to adjust the Mic volume
7. Short press this button and then press the volume +/- to adjust the Music bass
8. Short press this button and then press the volume +/- to adjust the Music treble
9. Volume -
10. Volume +
11. Microphone input port 1 and 2
12. LED Light ON/OFF switch
13. mSD slot
14. USB port
15. AC 220-240V/50Hz input
16. AUX IN
17. Charging indicator
18. Power ON/OFF switch

# Remote Control

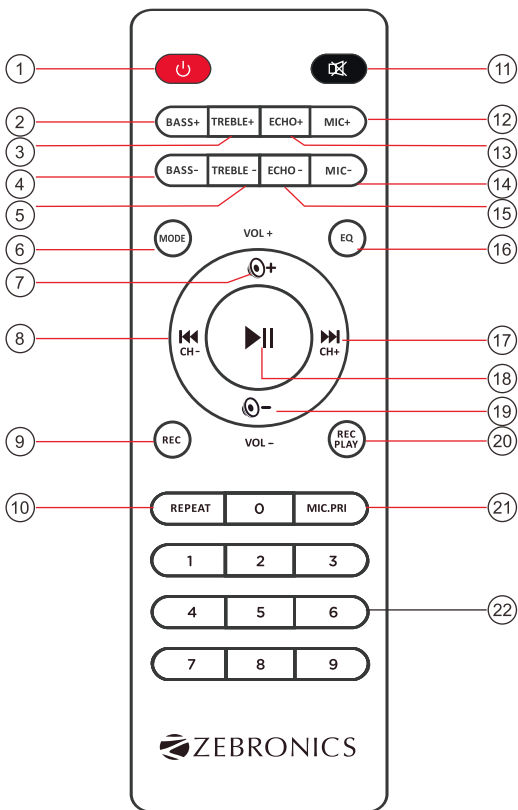

1. Standby/Awake
2. Music bass +
3. Music treble +
4. Music bass -
5. Music treble -
6. Input modes
7. Volume +
8. Previous track/FM channel & Long press for music rewind.
9. Recording
10. Repeat music (works under USB / mSD modes)
11. Mute
12. Mic volume +
13. Mic echo +
14. Mic volume -
15. Mic echo -
16. EQ
17. Next track/FM channel & Long press for music forward.
18. Play/Pause
19. Volume -
20. Play the recorded file
21. Mic priority ON/OFF
22. Numeric keys (0-9) for selecting tracks in USB/mSD & channels in FM

## **General Instructions**

### **BT Mode**

Switch the speaker to BT mode, Scan for nearby BT devices . Tap on BT Name **“ZEB-VIGOR”** to connect.

### **USB/mSD Mode**

Insert the USB Drive/mSD Card to the speaker it will detect the USB Drive/mSD Card and the audio files from drive will be played automatically.

### **FM Radio**

Switch the speaker to FM, Now long Press the Play/Pause Key to scan the available FM channels. Once the scanning is done the speaker will start playing the first scanned channel.

### **AUX-IN**

The speaker can be connected to an audio device using a 3.5mm cable. Connect the one end of the cable to the speaker & connect the other end of the cable to an audio source. The songs from the audio source can be heard through the speaker.

***Note:** Bass, Treble & EQ controls cannot be adjusted in AUX mode*



## **TWS Connectivity:**

- Turn on both “ZEB-Vigor” speakers in BT mode.
- Press and hold the Play/Pause button for 3-5 seconds in any one of the speaker to initiate TWS pairing.
- After few seconds both speakers will get connected successfully.
- Now search for nearby BT device in you mobile phone or other source device and tap on BT name **ZEB-VIGOR** to connect.

***Note:** To exit TWS mode, press and hold the Play/Pause button for 3-5 seconds*

## **Recording Function:**

To record mic input, first plug-in a USB/mSD card into the speaker, it will act as a storage device. Press the REC key on the remote to start/stop recording. Once the song or voice is recorded through the Mic, press the REC PLAY key to play the recorded file.

