



ZEBRONICS
ALWAYS AHEAD

Portable BT Speaker

ZEB **ZEST 10**



User Manual

www.zebronics.com

Thank you for purchasing **ZEB-ZEST 10** Portable BT Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid the self-disassemble of the product as it results in the failure of Warranty.
- Turn off the speaker if the speaker is not being used for a long period of time.

Features:

Wireless BT

Supports USB & mSD Card

AUX

Built-in FM Radio

Media / volume control

Built-in Rechargeable battery

TWS Function

Specifications :

Output power (RMS) : 8W

BT Version : 5.0

Driver size : 10.16cm

Speaker impedance : 3Ω

Frequency response : 20Hz-20kHz

S/N Ratio : ≥85dB

Max. Supported USB /

MicroSD memory size : 32GB


Supported Audio
formats : MP3
Charging time : 3.5H
Playback time : 6H*
Net. weight : 644g

Package contents:

Speaker : 1 unit
Charging cable : 1 unit

**at 50% volume*

Buttons descriptions:

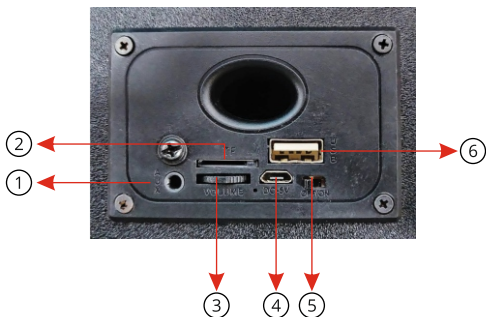

1. AUX
2. mSD Card
3. Slider - Volume / Pause / Play / Next / Prev. / Mode / TWS
4. DC - 5V
5. ON/OFF Switch
6. USB for pen drive

Instructions for Use:

Button functions

1. Turn the speaker ON/OFF using the power switch.
2. Press & hold slider button to switch the modes.
3. Slide & hold it right or left to increase / decrease the volume.
4. Slide it right or left to change the NEXT/PREV tracks.

5. Single press slider button to Play/Pause the track being played.

Pairing with the BT Speaker:

1. Power ON the Speaker and you will hear the indication for the BT mode.
2. Switch ON BT on your phone or tablet and search for the nearby BT devices.
3. Search for the BT name "**ZEB-ZEST 10**" and tap to connect it.

Micro SD / USB Mode:

Connect the micro SD card / USB drive to the respective ports of the **ZEB-ZEST 10** and the speaker will automatically start playing from the micro SD card / USB drive.

FM Radio:

- Once the speaker is turned ON, Please switch the speaker to FM mode using the slider button, Press & hold the slider button for 3 seconds.
- Double press the slider button to auto scan the available FM channels.
- Slide right or left slider to change the scanned FM channels
- Slide & hold right or left slider to adjust the volume

***Note:** Please use Power cable or AUX cable as antenna for better FM signal reception.*

TWS Function:

- Turn on two ZEB-ZEST 10 speakers you want to pair.
- Triple press the slider button on any one speaker to activate TWS mode. (You'll be indicated with single beep sound)
- After few seconds, both the speakers will be connected successfully.
- Now, search for nearby BT device in your mobile and Tap on the BT name **ZEB-ZEST 10** to connect.
- To exit TWS mode, triple Press slider button again.

Charging the Speaker:

1. Connect the charging cable to Micro USB port of the speaker and insert the other end into a DC 5V charging power source/adaptor.
2. Red LED glows indicating that the battery is being charged.

