



Portable BT Speaker

# NEB SPACE DECK *Pro*



## User Manual

[www.zebronics.com](http://www.zebronics.com)

Thank you for purchasing **ZEB-SPACE DECK PRO** portable BT speaker. Please read this user manual carefully before usage & save it for future reference.

### **Note:**

- *Avoid the use of this product at the high temperature and high humidity environment.*
- *Avoid self-disassemble of product, or it will result in the failure of warranty.*
- *Please charge the product with power adaptor output rated voltage 5VDC.*

### **Features**

Wireless BT

Supports USB & mSD Card

Built-in FM Radio

AUX Input

TWS Function

Media / Volume Control

LED Display

LED Lights

Microphone Input Jack

Wireless Mic

Built-in Rechargeable Battery

### **Specifications**


Output Power (RMS) : 55W

BT Version : 5.3

Driver Size	: (120mm + 38mm) x 2
Speaker Impedance	: $8\Omega + 8\Omega$
Frequency Response	: 70Hz-20kHz
S/N Ratio	: $\geq 65\text{dB}$
Max. Supported USB/mSD Memory Size	: 32GB
Supported Audio Formats	: MP3, WAV, WMA, FLAC
Charging Time	: 5 H
Playback Time	: 6-6.5 H*
Product Dimension	: 24.2 x 24.2 x 47 cm (W x D x H)
Net. Weight	: 3.84kg

*\* at 50% Volume*

# Button / Port Description:

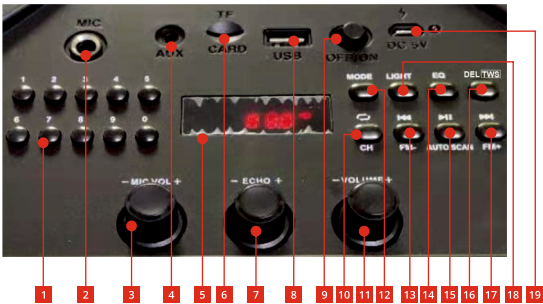

1	NUMERIC SELECTION BUTTON
2	MIC INPUT
3	MIC VOL -/+
4	AUX INPUT
5	LED DISPLAY
6	MICRO SD CARD SLOT
7	ECHO -/+
8	USB SLOT
9	ON/OFF SWITCH
10	SWITCH PLAYER MODE
11	VOLUME -/+
12	MODE SELECT
13	PREV. TRACK / PREV. FM CHANNEL
14	EQUALIZER
15	PAUSE / PLAY; SCAN FM CHANNEL
16	TWS FUNCTION
17	NEXT TRACK / NEXT FM CHANNEL
18	LIGHT MODE
19	DC 5V CHARGING PORT

## Instructions for Use:

### Button functions

1. Press the Mode button to change the input mode of the speaker.
2. Press the “⏮/⏭” button to change the NEXT/PREV. track or channel when in BT mode, mSD, USB or FM mode respectively.
3. Short Press the “⏮” button to Play/Pause the track being played.
4. Press “↺” button to switch player mode to Loop playback or Repeat playback.
5. Long press “DEL” button, when the display appears “DEL”, then press “⏮” button, it will delete the current Music(USB/mSD Mode).

### Charging the Speaker

1. Connect the USB charging cable to the DC 5V Charging port of the speaker and insert the other end into a USB power source/adaptor.
2. Red LED glows indicating that the battery is being charged. The Red LED will turn off once it is fully charged.

## Pairing your device with Bluetooth Speaker

1. Power ON the speaker until you hear the indication tone for Bluetooth mode.
2. Blue LED indicates that your speaker is now ON and is in pairing mode.
3. Switch ON BT on your phone or tablet and search for nearby BT devices.
4. Search for the BT name "**ZEB-SPACE DECK PRO**" and tap to connect it.

## Micro SD / USB mode

Connect the Micro SD card / USB device to the respective ports of **ZEB-SPACE DECK PRO** and the speaker would automatically start playing from the Micro SD card/USB device.

## AUX mode

Connect the speaker to an audio source (phone, TV, PC) using the 3.5mm cable provided in the box. Once connected, change the speaker to AUX mode and there after audio can be streamed via the speaker from the connected source. Short press "▶||" button is mute, press once again "▶||" exit mute.

## FM Radio mode

Change the speaker to FM mode. Once the speaker is in FM mode, Long press the “▶▶” button once to start scanning for FM channels. Once scanning is complete, press the “◀◀/▶▶” button to change the channels.

## TWS Function

When two Speakers are in BT mode, long press the “TWS” button to enter **TWS** mode. Once they are connected successfully, the main speaker will display “A” and the other speaker will display “B”. Now turn ON BT in your phone and connect to the BT name “**ZEB-SPACE DECK PRO**”. Long press “TWS” button to exit TWS mode.

