



ZEBRONICS  
ALWAYS AHEAD

Soundbar  
**NEO ACE** *Plus*



User Manual

[www.zebronics.com](http://www.zebronics.com)

Thank you for purchasing **ZEB-ACE PLUS** Speaker. Please read this user manual carefully and keep it for future reference.

**Note:**

- Avoid the usage of this product at the high temperature and high humidity environment.

- Avoid the self-disassembly of the products or it results in the voiding the product's Warranty.

- Turn off the speaker when the speaker is not in use.

- To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

**Features:**

Wireless BT v5.1

Supports USB & mSD

Built-in FM Radio

AUX Input

TWS Function

Media / Volume control

Built-in Rechargeable battery

RGB Lights

Coaxial input

## Specifications:

 
Output power (RMS)	: 30W (15W +15W)
BT version	: v5.1
Driver size	: 5.2cm x 2
Speaker Impedance	: 3Ω
Frequency response	: 80Hz-18kHz
S/N ratio	: ≥85dB
Max. supported USB/mSD memory size	: 32GB
Supported BT name	: ZEB-ACE PLUS
audio formats	: Mp3
Charging time	: 4h(approx)
Playback time	: 10 h*
Product dimension (W x D x H)	: 80 x 9.5 x 8 cm
Net. weight	: 1.27 kg

## Package Contents

Speaker	: 1 U
Charging cable	: 1 U
QR Code Guide	: 1 U
Remote Control	: 1 U
Input cable	: 1 U

*\* at 50% Volume (LED OFF)*

## Button Description:

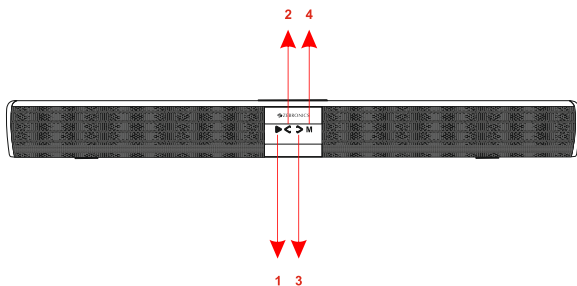

**1) Play/Pause/Scan** : Single press to play or pause a track in USB, mSD, BT mode and long press for FM scan.


**2) Previous** : Single press for Volume decrease and long press for previous track or channel.

**3) Next** : Single press for Volume increase and long press for next track or channel.

**4) Mode** : Single press to change between available input modes.


- Double press for enabling TWS mode.
- Long press for Changing between LED modes.

# Remote Description :

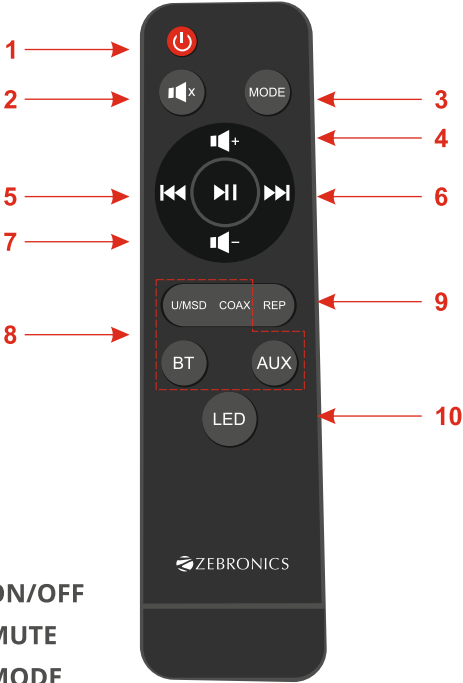 

- 1) ON/OFF
- 2) MUTE
- 3) MODE
- 4) VOL +
- 5) PREVIOUS
- 6) NEXT
- 7) VOL -
- 8) INDIVIDUAL INPUT MODE SELECTION
- 9) REPEAT MODES
- 10) LED MODE CHANGE

## Rear Panel descriptions :

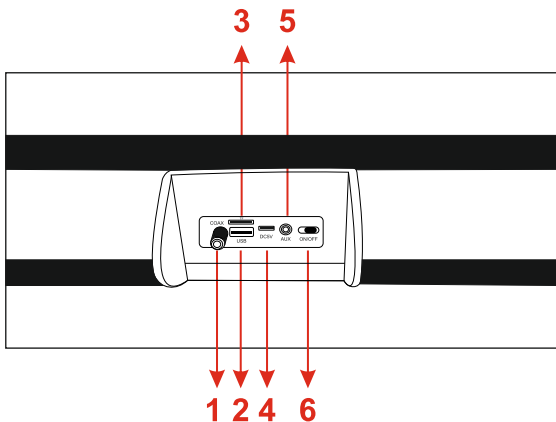 

- 1) COAXIAL
- 2) USB Port
- 3) mSD
- 4) Charging port
- 5) AUX Input
- 6) Power on / off switch

## Instructions for Use:

### Charging the Speaker

Connect the one end of the power cable to speaker and connect the other end to a rated **DC 5V 1A** adapter. The Speaker has constant Red led indication when the speaker is charging. The Indicator turns off when the speaker is completely charged.

## **BT Mode :**

Turn ON the speaker, press **Mode** button to switch to BT Mode. Switch ON BT on your phone or tablet and search for nearby BT devices, Search for the BT name "**ZEB-ACE PLUS**" and tap to connect it.

## **TWS Function :**

- Turn on two "**ZEB-ACE PLUS**" speakers.
- Double press on the **M** button for few seconds on any one speaker to activate TWS function.
- After Few seconds, you'll hear TWS connected notification from the speakers when they are connected successfully.
- Now, search for nearby BT device in your mobile and Tap on the BT name "**ZEB-ACE PLUS**" to pair the speaker.

*Note: Requires two ZEB- ACE PLUS speakers for TWS feature.*

## **COAXIAL :**

Press the **M** button to select **coaxial** mode. The speaker can be connected to an audio source using a coaxial cable. Connect one end of the coaxial cable to the speaker and the other end of the coaxial connector to an audio source.

The speaker automatically detects the input and the songs from the audio source can be heard through the speaker.

### **AUX-IN:**

The speaker can be connected to an audio source using a 3.5mm to 3.5mm cable. Connect the one end of the 3.5mm connector to the speaker and the other end of the cable to an audio source. The speaker automatically detects the input and the songs from the audio source can be heard through the speaker.

### **USB/mSD:**

The speaker automatically switches to **USB/mSD** input mode when a USB flash drive or mSD is inserted into the speaker. The songs from the audio source can be heard through the speaker (this mode isn't selectable on the speaker unless a USB flash drive or mSD is connected).

### **FM Mode:**

Press the M button to select FM mode. Long press Play/pause button to initiate FM Scanning process. Once the scanning process is done, the Speaker automatically plays the First channel of the FM.



**ISO 9001:2015 Certified Company**  
**[www.zebronics.com](http://www.zebronics.com)**

