



Soundbar ZEB Juke Bar 1000




User Manual

www.zebronics.com

Important Safety Instruction

Thank you for purchasing the **ZEB-JUKE BAR 1000** Soundbar. Please read this user manual carefully and keep for future reference.

Warning

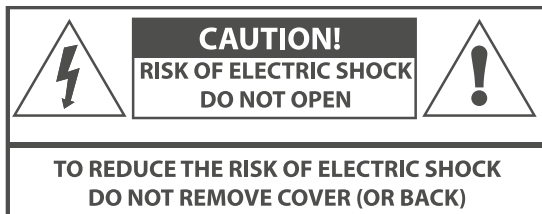

Caution:

- To reduce the risk of electric shock, do not dismantle the product and do not expose the apparatus to rain or moisture. No user-serviceable parts inside.
- Refer servicing to qualified personnel only.



The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.



Important! This symbol alerts you to read and observe important warnings and instructions on the unit or in this manual.

Notice:

1. To prevent possible hearing damage, do not listen at high volume levels for long time periods or a sudden high volume level.
2. Never use the device unsupervised! Switch off the device whenever you are not using it, even if not using it only for a short while.
3. The appliance is not intended to be operated by means of an external timer or separate remote control system.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



5. Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
6. The unit should not be impeded by covering the ventilation opening with items such as newspaper, table-cloths, curtains etc. Make sure that there are at least 20 cm of space above and at least 5 cm of space on each side of the unit.
7. The apparatus must not be exposed to dripping or splashing liquid, no objects filled with liquids such as vases, should be placed on the apparatus.
8. To prevent fire or shock hazard, do not expose this equipment to direct heat, rain, moisture or dust.
9. Do not position this unit near any water sources e.g. taps, bathtubs, washing machines or swimming pools. Ensure that you place the unit on a dry, stable surface.
10. Do not place this unit close to a strong magnetic field.
11. Do not place the unit on a amplifier or receiver.
12. Do not place this unit in a damp area as the moisture will affect the life of electric components.
13. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Wipe with a clean, dry or slightly damp cloth.

14. When removing the power plug from the wall outlet, always pull directly on the plug, never pull on the cord.

15. Depending on the electromagnetic waves used by a television broadcast, if a TV is turned on near this unit while it is also on, lines might appear on the LED TV. Neither this unit nor the TV is malfunctioning. If you see such lines, keep this unit well away from the TV set.

16. The mains plug is used to disconnect the device, the disconnected device should remain readily operable.

Important Safety Instructions

1. Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.

2. Do not use this apparatus near water.

3. Clean only with dry cloth.

4. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

5. Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.

6. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles or at the point where they exit from the apparatus.

7. Only use attachments/accessories specified

by the manufacturer.

8. Unplug this apparatus during lightning storms or when unused for long periods of time.

9. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, for example, when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

10. The AC plug is used to disconnect the device. In order to disconnect the apparatus from the AC power completely, the AC plug must be removed from the AC outlet completely.

Preparation for Use

Unpacking and Set Up

- Remove the Sound bar from the carton and remove all packing material from the Sound bar. Save the packing material, if possible, in case the Sound bar ever needs to be serviced or transported.
- The original carton and packing material is the only safe way to pack your Sound bar to protect it from damage in transit.
- Remove any descriptive labels or stickers on the front or top of the cabinet. Do not remove any labels or stickers from the back or bottom of the cabinet.
- Place your Sound bar on a level surface such as a table, desk or shelf, convenient to an AC outlet, out of direct sunlight, and away from sources of excess heat, dirt, dust, moisture, humidity, or vibration.
- Unwind the Line cord connecting the AC adapter and extend it to its full length.

Protect Your Furniture

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture


polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement center everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the unit.

Power Source:

This soundbar is designed to operate on standard AC power 220-240V 50/60Hz. Do not attempt to operate the Soundbar on any other power source. You could cause damage to the Soundbar that is not covered by your warranty.

Product Representation


Sound Bar & Sub Woofer

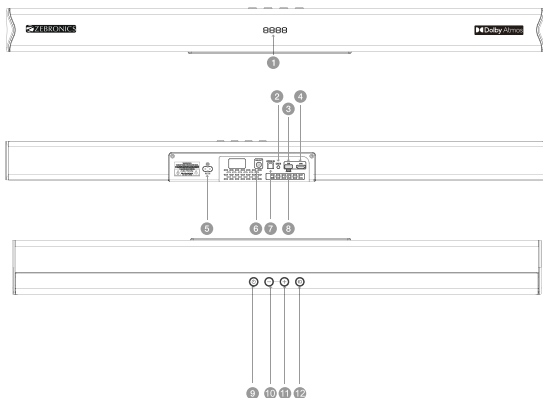





1. LED DISPLAY
2. LINE IN (AUX)
3. USB
4. eARC
5. AC IN
6. SUB OUT
7. OPTICAL
8. FOR UPDATE
9. POWER / STANDBY
10. VOL-
11. VOL+
12. INPUT

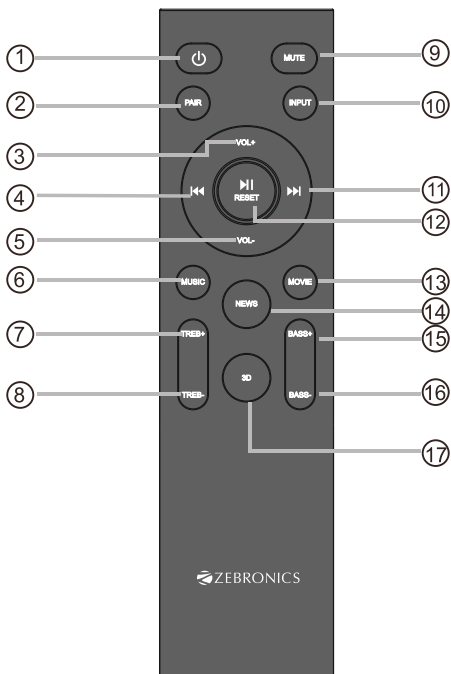


Remote Control



1.  : Standby mode for power on/off.
2. PAIR : Connect or disconnect to the pairing device. (Press the button more than 2 seconds).
3. Volume + : Master volume increase
4.  : Previous Track. (Only work under USB & BT mode)
5. Volume - : Master volume decrease
6. MUSIC : Select the Music EQ effect.
7. TR+ : To Increase the Treble.
8. TR- : To Decrease the Treble.
9. MUTE : Mute volume.
10. INPUT : Input mode (AUX/USB/HDMI(eARC)/OPT/BT).
11.  : Next Track. (Only work under USB & BT mode)
12.  : Play/Pause (Only work under USB & BT mode). Reset : Press and hold the button more than 2 sec. to Set all functions to manufacturer defaults.
13. MOVIE : Select the Movie EQ effect.
14. NEWS : Select the News EQ effect.
15. Bass + : To increase the bass.
16. Bass - : To decrease the bass.
17. 3D : Select the 3D EQ effect.

Operating range of the remote control



- When the unit is mounted on a wall, point the remote control at the remote control sensor on the bellowed panel. The provided Remote Control allows the unit to be operated from a distance.
- Even if the Remote Control is operated within the effective range 26.2 feet (8m), remote control operation may be impossible if there are any obstacles between the unit and the remote control.
- If the Remote Control is operated near other products which generate infrared rays, or if other remote control device using infrared rays are used near the unit, it may operate incorrectly. Conversely, the other products may operate incorrectly.

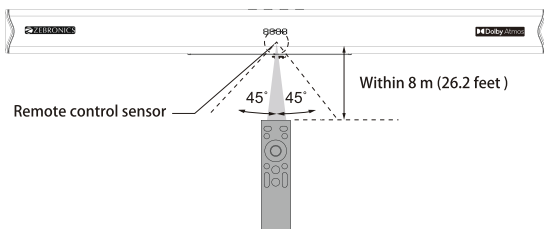

Positioning the Sound Bar

Place on a flat Surface


Place the sound bar horizontally on a flat surface such as a TV unit or shelves and align it centrally with the TV screen. Allow some space between the speaker and the wall. Don't place inside a cabinet or on a walled shelf. Follow this guidance for best sound output and good airflow around the sound bar.

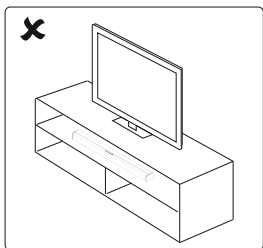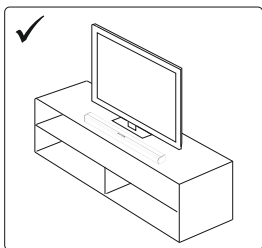

Mount on the wall

WARNING : If you don't feel confident to correctly and securely wall-mount the sound bar, Seek the assistance of an experienced person or professional.


Install the speaker on a vertical, flat, reinforced area of wall. For plaster walls, it is recommended to screw into wall studs for greater security. For optimum performance, allow at least 25mm/1" distance between the sound bar and the TV.

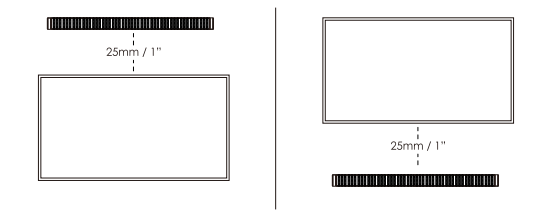

Follow below steps to mount the sound bar on the wall

1. Open 4 holes in the wall referring to iron bracket for wall mounting, the spacing distance of the holes in the wall is corresponding to the symmetrical position on sound bar (When measuring the position of wall mounting, avoid the sound bar pads to put on the iron bracket, because pad is not flat, will not be sticky well on the double-side tape on the bracket.)
2. Fix the plastic anchor in the 4 holes of the wall mounting bracket.
3. Then fix the supplied screws on the plastic anchor and tighten the screws to ensure that the wall mounting bracket will not shake.
4. After fastening the screws, tear off one side of the two double-sided tapes in the supplied packaging, and paste them on the right and left into the extension of the wall brackets according to the suitable position where the Sound Bar on the iron bracket. (Not foot position of the sound bar)

5. Then tear off the other side of the double-sided tape attached to the iron bracket, place the Sound Bar on the double-sided tape on the metal fittings, press it firmly and release it until it is completely stuck.

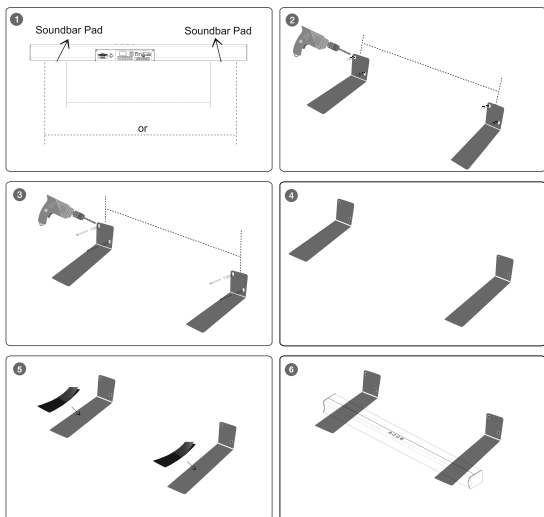

Using the Soundbar

1. Before connecting the AC power cord, ensure you have completed all other connections.
2. Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
3. Connect the mains cable to the AC IN of

the unit and then into a mains socket.

4. Power cord quantity and plug type vary by regions.

Basic Operation

- 1. Press the power button on either the remote control or the sound bar to turn on the sound bar.
- 2. Switch on the connected device (such as TV, playback devices, game console etc).
- 3. Press the input button on either the remote control or the sound bar to select your desired input source.


Input Source	Description
HDMI e-ARC / OPTICAL	Audio from TV (via HDMI e-ARC port or OPTICAL jack)
AUX	Sound from a connected device (via AUX port)
BT	Sound from a BT connected device
USB	Sound from a USB storage device

***Note:** Keep the sound bar display mode the same as input source. For example, if input source is HDMI e-ARC, Meanwhile the display will be switched to on the screen of sound bar.*


Powering On/Off

- 1. Plug in the power cord with one side to AC IN on sound bar and the other side to an AC wall outlet (see the following diagram). When you connect the soundbar to the main socket, the unit will be in STANDBY mode, firstly it will

display "--".

2. Switch on the sound bar by short-pressing the  button on sound bar or on remote controller, then it will flow display "WELCOME" from right to left. After 12s, the default input mode will automatically appear on display screen.

3. Press and hold the power button on sound bar or on the remote controller for 2 seconds to switch it off, and then disconnect the main plug from the main socket if you want to switch the unit off completely.

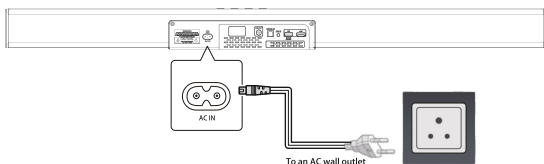


Auto Standby

1. The unit will automatically switch to standby mode when no audio input is received for 20 minutes. The soundbar will wake up from standby mode when any button is pressed or source input is received.

2. If the TV or the external unit is disconnected, switch it off

- To switch the unit off completely, remove the mains plug from the mains socket.
- Please turn the unit off completely to save energy when not in use.

Select Modes

1. Press the  button on the soundbar or press the **INPUT** button on the remote control to select the BT, AUX, OPTICAL, HDMI e-ARC, USB mode. The selected mode will show on the display.

Audio: *maximum supported audio content is Dolby Atmos, Dolby Digital, Dolby Digital Plus, Dolby TrueHD, Dolby Surround.*

HDMI: *HDMI version 2.1*

Playing Audio via BT Connection



Through Bluetooth, connect the Soundbar with your Bluetooth device (such as an iPad, iPhone, iPod touch, Android phone, or laptop), and then you can listen to the audio files stored on the device through your Soundbar speakers.

1. Turn on the sound bar and short-press  button on the unit or INPUT button on the remote control to switch the sound bar to Bluetooth mode and LED display **bt** on the sound bar will flicker in the Bluetooth pairing mode.
2. On the device, switch on Bluetooth, search for and select **ZEB-JUKE BAR 1000** on your Bluetooth list to start connection.
3. Wait until you hear the tone prompt from the Soundbar. If the successfully connected, **bt** stops flickering and is displayed on the display panel.
4. Select and play audio files or music on your Bluetooth device.
 - During play, if a call is coming, music play is paused. Play resumes when the call ends
 - If your Bluetooth device supports AVRCP profile, on the remote control you can press   to skip to a track, or short-press  to

pause/resume play; Press and hold the **RESET** button more than 2 seconds to restore factory default settings; Hold **Pair** button on the remote control for more than 2 seconds to disconnect paired BT device or connect back last disconnect BT device.

5. You can use the volume buttons on the sound bar or on the remote controller to adjust the volume to your requirements

6. To exit Bluetooth, select other relevant input source.

- When you switch back to Bluetooth mode, Bluetooth connection remains active.

Notes:

- *Having connection problems? Remove **ZEB-JUKE BAR 1000** from your device's Bluetooth history and ensure it's less than 8 meters away. Then try pairing again. To get the best sound quality, make sure there is a clear line of sight between the connected device and your sound bar.*

- *If your pairing device or connected device is switched off or manual disconnected, the sound bar will automatically enter pairing mode.*

- *The music streaming may be interrupted by obstacles between the device and Soundbar, such as wall, metallic casing that covers the device, or other devices nearby that operate in the same frequency.*

- *If you want to connect your Soundbar with another Bluetooth device, press and hold Pair on the remote control to disconnect the currently connected Bluetooth device.*

Playing Audio via USB Port

The sound bar automatically switches to USB input mode with the LED display USB when a USB flash drive is inserted (this mode isn't selectable on the sound bar or remote control unless a USB flash drive is connected).

1. Ensure that your USB flash drive contains MP3 audio files (other file types not supported)


2. Connect the USB flash drive to the USB port on the sound bar (or your own USB extension cable connected to the USB port); music will automatically play with LED display "00:00", when music is played on, the play time will be automatically displayed on the screen.

3. Press the **VOL +/-** buttons to adjust the volume to your desired level.


4. During playback:

 Start, pause or resume play.
 Skip to the previous or next track.

Connections

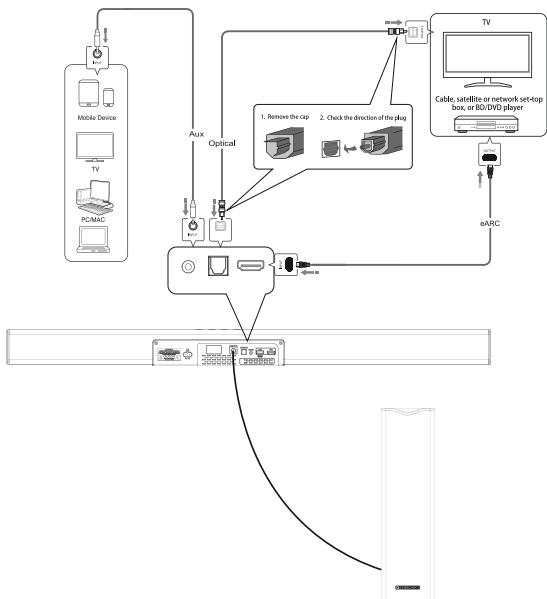

Audio input (Aux) Connection

- Use a 3.5mm to 3.5mm audio cable to connect the PC, tablet, smartphone, TV's headphone socket to the AUX socket on the soundbar.
- Use a RCA to 3.5mm audio cable to connect the Blue Ray DVD Player / TV's audio output sockets to the AUX socket on the soundbar.
- Then short-press the  button on the sound bar or on the remote controller to switch to audio input mode with LED display lighting up AUX.

- In this mode, playback can only be controlled on your connected device

***Note:** For some computers, you may need to access the audio control panel to manually set the soundbar as shown steps on above.*

Optical Mode

Using an optical cable, connect the OPTICAL connector on your Soundbar (Optical digital input) to the OPTICAL OUT connector on the TV or other device. The TV or other device must have an optical digital output. Proceed as follows:


- Connect the optical cable to the OPTICAL jack on the rear of the sound bar.
- Connect the other end of the optical cable to audio output jack on TV or other device.
- Set TV to Passthrough.
- Start playing on the TV
- Press the source input button on the sound bar or remote control to activate the corresponding mode (the OPTICAL mode) to open optical digital input of your sound bar. After successfully connected, the LED display will show OPTI. Operate your audio device directly for playback features.
- Press the **VOL +/-** buttons to adjust the volume to your desired level. buttons on the remote control.

HDMI (eARC) Mode

Some 4K HDR TVs require the HDMI input or picture settings to be set for HDR content reception. For further setup details on HDR display, please refer to the instruction manual of your TV.

e-ARC (enhanced Audio Return Channel)

Your Soundbar supports HDMI with Enhanced Audio Return Channel (eARC). If your TV is HDMI eARC compliant, you can hear the TV audio through your Soundbar by using a single HDMI cable.

1. Use a High Speed HDMI cable, connect HDMI (eARC) on the soundbar to HDMI (eARC) connector on your TV.
2. Then short-press  button on the soundbar or INPUT button on the remote controller to switch to HDMI (eARC) mode. After successfully connected, the LED display will show EARC. (If TV support eARC, LED display will show EARC)
3. Press the **VOL +/-** buttons to adjust the volume to your desired level.
4. If you wish, you can change the audio settings by using the relevant buttons on the remote controller.

Note:

- Your TV must support the HDMI-CEC and eARC function. HDMI-CEC and ARC must be set to be on.
- The setting method of HDMI-CEC and eARC may differ depending on the TV. For details about eARC function,

please refer to your TV owner's manual.

- *Only HDMI 1.4 compatible cables can support the e-ARC function.*

- *The Enhanced Audio Return Channel (eARC) function enables an HDMI compatible TV to send the audio stream to HDMI OUT of the unit.*

DOLBY ATMOS®

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, Dolby Vision, Dolby Atmos and the double -D symbol are trademarks of Dolby Laboratories.

What is DOLBY ATMOS® ?

Dolby Atmos® transports you from the ordinary into the extraordinary with breathtaking, moving audio that fills your room and flows above and around you.

Dolby Atmos® gives you amazing experience you have never heard before by overhead sound, and all the richness, clarity, and power of Dolby sound.

Using DOLBY ATMOS® :

DOLBY ATMOS® is only available in HDMI (eARC) mode. For the details of the connection, please refer to "HDMI Connection".

1. To use Dolby Atmos® in HDMI (eARC) mode, your TV has to support Dolby Atmos®.
2. Make sure that "No Encoding" is selected for bitstream in the digital audio output of the connected external device (e.g. Blu-ray DVD player, TV etc.).
3. While entering Dolby Atmos / Dolby Digital Plus format, the soundbar will show DOLBY ATMOS / DOLBY SURROUND.

Note:

- The full Dolby Atmos experience is only available when the Soundbar is connected to the source via a HDMI 2.0 cable.
- The Soundbar will still function when connected via other methods (such as a Digital Optical cable) but these are unable to support all of the Dolby features. Given this, our recommendation is to connect via HDMI, in order to ensure full Dolby support.

Select Equalizer (EQ) Effect

Select predefined sound modes to suit your video or music

Press the button on the remote control to select your desired preset equalizer effects:

Music mode	Enhances the treble and adds greater depth to the music.
Movie mode	Intensifies the bass and enhances the clarity of dialogue.
News mode	Enhances the clarity of voices. Suitable for watching TV shows and news.
3D mode	Enhances background music and full range to be sports effect.

Adjust the Volume

Press Vol+ / Vol- (Volume) to increase or decrease a volume level.

- To mute sound, press Mute.
- To restore the sound, press Mute again or press Vol+ / Vol- (Volume).

Adjust the Bass/Treble Level

Adjust the Bass Level

- Press the **BASS+ / BASS-** button on the remote control to activate bass level setting.

The display will show b +5 / b -5.

Adjust the Treble Level

- Press the **TREB+ / TREB-** button on the remote control to activate treble level setting.

The display will show T +5 / T -5.

Features:

BT v5.3 | HDMI (eARC) | Optical IN | USB | AUX
Remote Control
13.33cm Subwoofer
LED Display
Dual Driver Soundbar
Wall Mountable
Volume/Media Control
Dolby Atmos

Specifications

Driver Size	
Subwoofer	: 13.33 cm x 1
Soundbar	: (5.5 x 8.5) cm x 2
Impedance	
Subwoofer	: 4Ω
Soundbar	: 8Ω
Frequency Response	: 50Hz-20KHz
S/N Ratio	: ≥70dB
Separation	: ≥35dB
File Format Support	: MP3
Line Input	: 3.5mm, Optical IN, HDMI (eARC)
Max Supported	
Memory Size (USB)	: 32 GB
BT Name	: ZEB-JUKE BAR 1000
BT Version	: 5.3
Product Dimension (W x D x H)	
Subwoofer	: 11.5 x 25 x 42 cm
Soundbar	: 86 x 9 x 7 cm

Net. Weight

Subwoofer : 3.5 kg

Soundbar : 2 kg

Total : 5.5 kg

Package Content

Sound Bar : 1 U

Subwoofer : 1 U

Remote Control : 1 U

Input Cable : 1 U

QR Code Guide : 1 U

Wall Mount Bracket with Fasteners : 1 U

Power Cable : 1 U

Troubleshooting

PROBLEM/TROUBLE	POSSIBLE CAUSE	SOLUTION
There is no sound output from sound bar.	Another input source is selected.	Select an appropriate input source.
	The mute function is activated.	Cancel the mute function.
	The volume of sound bar or TV/other device is adjusted too low.	Increase the volume level on sound bar or by remote control or on TV.
	The power cable of the unit is not connected properly.	Make sure that the power cable of the unit is connected to an AC wall outlet securely.
	Input jacks on a playback device are connected.	Connect the input jack on the sound bar and the output jack on the playback device.
	Signals that the sound bar cannot playback when being input.	When sound bar and TV or other devices are connected by an audio cable through TV (ARC) port output, Select the correct audio input and output. Make sure the digital audio output setting on the playback device to PCM format. Since the output format of our sound bar is PCM, if it is used, the decoding format of TV or other devices will be adjusted to PCM state.
The sound is distorted or echoed.	TV volume is not muted.	If you play audio from TV through the sound bar, make sure that the TV is muted.
The volume decreases when the unit is turned on.	The automatic volume adjustment function is activated. To prevent excessive loudness, the unit automatically controls its volume within a certain level when the unit is turned on.	Turn up the volume as required.
Noise is heard.	The sound bar is too close to another digital or high-frequency device.	Move those devices away from the sound bar.
The unit cannot be operated by using the remote control.	The unit is out of the operating range.	Use the remote control within the operating range.
	The batteries are weak.	Replace with new batteries.
	The remote control sensor of the sound bar is exposed to direct sunlight or strong lighting.	Adjust the lighting angle or reposition the sound bar. Make sure our product cannot be used in sunlight.
The TV cannot be operated by using the TV's remote control.	The unit is blocking the TV's remote control sensor.	Position the unit so that it does not obstruct the TV's remote control sensor.
A device cannot connect the sound bar or the unit cannot be connected to a Bluetooth device.	Bluetooth function of the device is not activated, not paired or connected correctly.	Restart the sound bar and try pairing again. You have not enabled the Bluetooth function of the device; see the user manual of the device on how to enable the function and correctly connected the device. The sound bar is already connected with another Bluetooth device. Disconnect the connected device, and then try again.
	Bluetooth is not selected as the input source.	Select Bluetooth as the input source.
	The unit is connected to a different Bluetooth device.	Un-pair the Bluetooth device that is currently connected and pair with the desired Bluetooth device.
	The unit is too far away from the Bluetooth device.	Move the Bluetooth device closer to this unit.
	A device emitting electromagnetic waves (such as a microwave oven, a wireless device and so on) may be placed nearby.	Do not use this unit near devices that emit electromagnetic waves.
	The Bluetooth device that you are using may not support the protocol.	Use a Bluetooth device that supports the protocol.
	The connection profile registered in the Bluetooth device may not be functioning correctly for some reason.	Delete the connection profile in the Bluetooth device and then connect the Bluetooth device to this unit.
Sound quality of audio play from a connected Bluetooth device is poor and connection is not stable.	The Bluetooth reception is poor.	Move the device closer to the sound bar, or remove any obstacle between the device and the sound bar.
No sound can be heard or sound breaks (Bluetooth mode)	The volume on the Bluetooth device may be too low.	Raise the volume on the Bluetooth device.
	Bluetooth is not selected as the input source.	Select the Bluetooth as the input source.
	Playback on the device has not been performed.	Perform playback on the device.
	The sound output on the Bluetooth device may not be set to this unit.	Select this unit as the output device on the Bluetooth device.
	The connection to the Bluetooth device was cut off.	Connect with the Bluetooth device one more time.
	The unit may be too far away from the Bluetooth device.	Move the Bluetooth device near this unit.

PROBLEM/TROUBLE	POSSIBLE CAUSE	SOLUTION
	A device emitting electromagnetic waves (such as a microwave oven, a wireless device and so on) may be placed nearby.	Do not use this unit near device that emit electromagnetic waves.
There is no sound from sound bar - HDMI TV (ARC) Mode	Incorrect HDMI cable is used causing no signal to be sent to soundbar. Incorrect input mode is selected.	1. Make sure that the user connected TV and sound bar by a 19-core HD ARC cable. 2. The sound bar and TV are connected through TV (ARC) port output; make sure that the TV is ARC compliant. 3. Set the TV to HDMI ARC (CEC). Set the audio output mode of TV to PCM format. (Or refer to your TV user manual)
There is no sound from sound bar (OPTICAL Mode)	OPTICAL cable might be damaged and no signal is received by the soundbar due to a failed connection and incorrect operation mode selected.	1. Replace the OPTICAL cable with a new one to connect. 2. Set your TV audio output to PCM format. (Pls refer to your TV user manual)
There is no sound from sound bar (USB mode)	USB file type is not support & Sound bar doesn't switch to USB input mode automatically when USB is inserted.	Make sure that USB flash drive contains MP3 files because other file types are not supported. Switch the input mode once again, then playback again.

ISO 9001:2015 Certified Company
www.zebronics.com

