



Mini Soundbar

NEW JUKE BAR

ZEN 1610



User Manual

www.zebronics.com

Thank you for purchasing the **ZEB-JUKE BAR 1610** Mini Soundbar. Please read this user manual carefully and keep for future reference.

Note:

- Avoid the use of this product at the high temperature and high humidity environment.
- Avoid self-disassemble of product, or it will result in the failure of warranty.
- Please charge the product with power adapter output rated voltage DC 5V 2A.

Features:

Multi Connectivity (BT v5.0 | mSD | AUX)
LED Indicator
Compact Sound Bar with Dual Drivers
Glossy Finish
Built-in Rechargeable Battery
Type-C Charging


Specification

Output Power (RMS)	: 42W
Driver Size	: 5.71cm x 2
Impedance	: 3Ω x 2
Frequency Response	: 45Hz-18kHz
S/N Ratio	: ≥65dB
Separation	: ≥40dB
File Format Support	: MP3 (mSD)
Line Input	: 3.5mm
Max Supported Memory Size (mSD)	: 16GB
BT Name	: ZEB-JUKE BAR 1610
BT Version	: v5.0

Product Dimension : 50 x 7.28 x 7.1 cm
(W x D x H)

Net. Weight : 966g

Product Diagram:

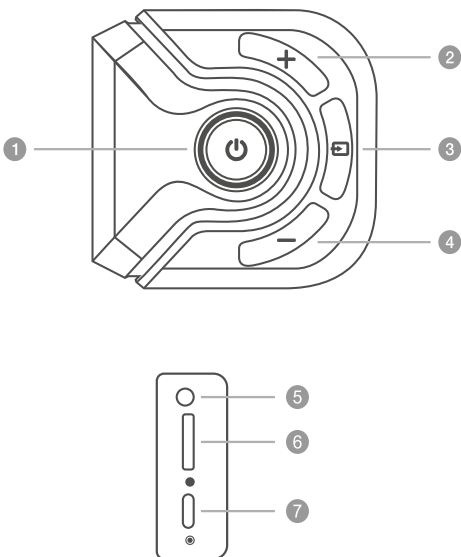

- ① Power Button
- ② Volume + / Next Button
- ③ Input Mode
- ④ Volume - / Previous Button
- ⑤ AUX Port
- ⑥ mSD Card Slot
- ⑦ USB Type-C Port

Button Functions:

1. Press the INPUT button to change the input mode of the speaker.
2. Long press the Volume- button to change the Previous track when in BT / mSD mode. Short press the button to decrease the speaker volume.
3. Long press the Volume+ button to go to the Next track in BT / mSD mode. Short press the button to increase the speaker volume.
4. Double Press the Power button to Play/Pause the track being played.

Operate Instructions

Setting the speaker

1. Switch the soundbar on/off by pressing the power button on the mini soundbar.
2. Select the input mode by pressing the INPUT button on the mini soundbar.
3. The indicator can change to different colors, representing different states.

Blue : BT Mode Green : AUX

Pink : mSD Mode

Instructions for Use:

Charging the Speaker

1. Connect the USB charging cable to the Type-C USB Charging port of the speaker and insert the other end into a USB Power source/adaptor (5V, 2A).
2. Red LED glows indicating that the battery

is being charged. The Green LED will turn on once it is fully charged.

Pairing your Device with BT of the Speaker.

1. Power ON the speaker until you hear the indication tone for BT mode.
2. Switch ON BT in your phone or tablet and search for near by BT devices.
3. Search for the BT name **ZEB-JUKE BAR 1610** and tap to connect it.

mSD Mode

Insert the mSD card to the respective slot of ZEB-JUKE BAR 1610 and the speaker would automatically start playing songs from the mSD card.

AUX Mode

Connect the speaker to an audio source (Phone/Laptop) using a 3.5mm to 3.5mm AUX cable. Once connected, speaker automatically changes to AUX mode and there after audio can be streamed via the speaker from the connected source.

