



sound bar

Juke Bar
2500




User Manual

www.zebronics.com

Important Safety Instruction

Thank you for purchasing the **ZEB-JUKE BAR 2500** Soundbar. Please read this user manual carefully and keep for future reference.

Warning

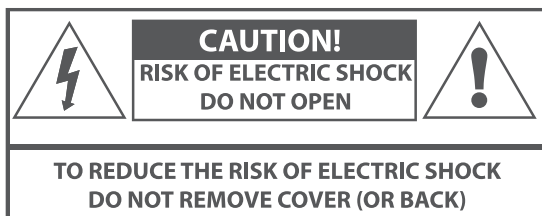

Caution:

- To reduce the risk of electric shock, do not dismantle the product and do not expose the apparatus to rain or moisture. No user-serviceable parts inside.
- Refer servicing to qualified personnel only.



The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.



Important! This symbol alerts you to read and observe important warnings and instructions on the unit or in this manual.

Notice:

This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

1. To prevent possible hearing damage, do not listen at high volume levels for long time periods or a sudden high volume level.



2. Never use the device unsupervised! Switch off the device whenever you are not using it, even if not using it only for a short while.
3. The appliance is not intended to be operated by means of an external timer or separate remote control system.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
6. The unit should not be impeded by covering the ventilation opening with items such as newspaper, table-cloths, curtains etc. Make sure that there are at least 20 cm of space above and at least 5 cm of space on each side of the unit.
7. The apparatus must not be exposed to dripping or splashing liquid, no objects filled with liquids such as vases, should be placed on the apparatus.
8. To prevent fire or shock hazard, do not expose this equipment to direct heat, rain, moisture or dust.
9. Do not position this unit near any water sources e.g. taps, bathtubs, washing machines or swimming pools. Ensure that you place the unit on a dry, stable surface.
10. Do not place this unit close to a strong

magnetic field.

11. Do not place the unit on a amplifier or receiver.

12. Do not place this unit in a damp area as the moisture will affect the life of electric components.

13. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Wipe with a clean, dry or slightly damp cloth.

14. When removing the power plug from the wall outlet, always pull directly on the plug, never pull on the cord.

15. Depending on the electromagnetic waves used by a television broadcast, if a TV is turned on near this unit while it is also on, lines might appear on the LED TV. Neither this unit nor the TV is malfunctioning. If you see such lines, keep this unit well away from the TV set.

16. The mains plug is used to disconnect the device, the disconnected device should remain readily operable.

Important Safety Instructions

1. Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.

2. Do not use this apparatus near water.

3. Clean only with dry cloth.

4. Do not block any ventilation openings. Install in accordance with the manufacturer's

instructions.

5. Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.

6. Do not damage the power cord by walking over it or pinching it, particularly at plugs, convenience receptacles or at the point where they exit from the apparatus.

7. Only use attachments/accessories specified by the manufacturer.

8. Unplug this apparatus during lightning storms or when unused for long periods of time.

9. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, for example, when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

10. The AC plug is used to disconnect the device, the disconnected device should remain readily operable. In order to disconnect the apparatus from the AC power completely, the AC plug must be removed from the AC outlet completely.

Important Notes

- This sound bar was especially developed for LED/LCD/Plasma TV's: It should not be used in combination with CRT TV's (Cathode Ray Tube TV's) in order to avoid image interference.
- Safety and operating instruction manual should be retained for future reference.
- The apparatus should not be exposed to dripping, splashing or placed in a humid atmosphere such as a bathroom.
- Do not install the product in the following areas:
 - Places exposed to direct sunlight or close to radiators.
 - On top of other stereo equipment that radiate too much heat -Blocking ventilation or in a dusty area.
 - Areas where there is constant vibration.
 - Humid or moist places.
 - Do not place near candles or other flames.
- Operate the product only as instructed in this manual.
- Before turning on the power for the first time, make sure the sound bar is plugged to power outlet.
- For safety reasons, do not remove any covers or attempt to gain access to the inside of the product. Refer any servicing to qualified personnel.

- Do not attempt to remove any screws, or open the casing of the unit; there are no user serviceable parts inside. Refer all servicing to qualified service personnel.

Preparation for Use

Unpacking and Set Up

- Remove the Sound bar from the carton and remove all packing material from the Sound bar. Save the packing material, if possible, in case the Sound bar ever needs to be serviced or transported. The original carton and packing material is the only safe way to pack your Sound bar to protect it from damage in transit.
- Remove any descriptive labels or stickers on the front or top of the cabinet. Do not remove any labels or stickers from the back or bottom of the cabinet.
- Place your Sound bar on a level surface such as a table, desk or shelf, convenient to an AC outlet, out of direct sunlight, and away from sources of excess heat, dirt, dust, moisture, humidity, or vibration.
- Unwind the Line cord connecting the AC adapter and extend it to its full length.

Protect Your Furniture

This model is equipped with non-skid rubber 'feet' to prevent the product from

 
moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement center everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the unit.

Power Source:

This sound bar is designed to operate with DC 15V=1.6A


Product Representation

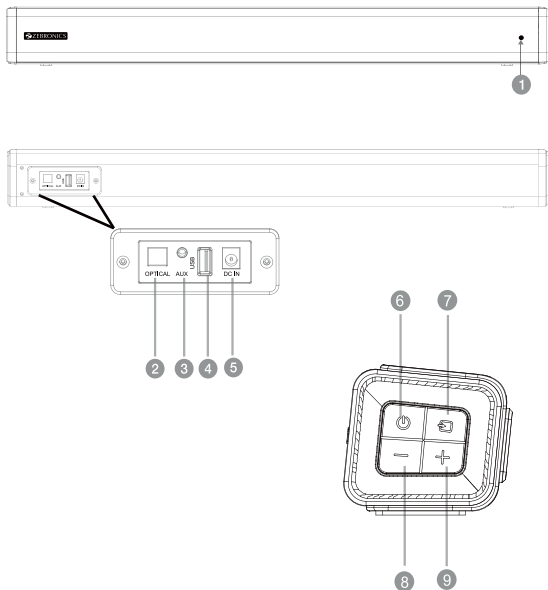


Sound Bar



 1. LED indicator
2. OPTICAL
3. AUX
4. USB
5. DC IN
6. STANDBY
7. INPUT
8. VOL-
9. VOL+

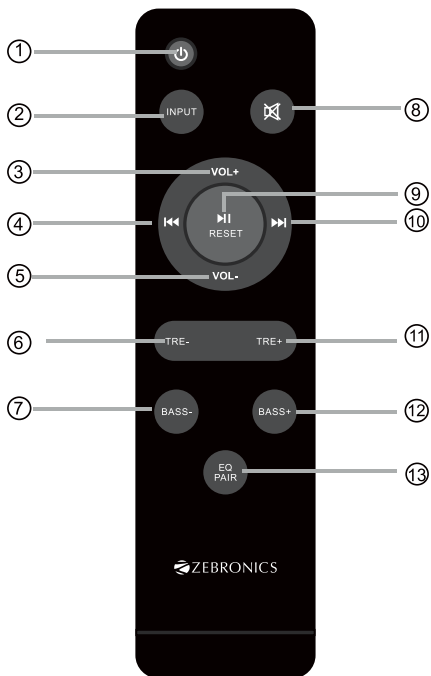
Remote Control



1.  : Standby: Standby mode for power on/off.
2. INPUT : Different input mode selection.
3. Vol+ : Volume Increase.
4.  : Previous Track (Only work under USB & BT Mode).
5. Vol- : Volume Decrease.
6. TRE- : Treble Decrease.
7. Bass- : Bass Decrease.
8. Mute : Mute Mode.
9.  / RESET

Play/Pause : Play / Pause for Current Track (Only work under USB and BT mode).

Reset : Press and hold the button more than 2 sec. to Set all functions to manufacturer defaults.

10.  : Next Track (Only work under USB & BT mode).
11. TRE+ : Treble Increase.
12. BASS+ : Bass Increase.
13. EQ/PAIR

 
EQ : Press in one time for one mode of EQ. Music/Movie/News/Sport total four modes when circulate press the button in short time.

Pair : Press and hold more than 2 sec. to disconnect paired BT device. Press and hold more than 2 sec. to connect back last disconnect BT device.

Operating range of the remote control

- Even if the Remote Control is operated within the effective range 26.2 feet (8m), remote control operation may be impossible if there are any obstacles between the unit and the remote control.

- If the Remote Control is operated near other products which generate infrared rays, or if other remote control device using infra-red rays are used near the unit, it may operate incorrectly. Conversely, the other products may operate incorrectly.

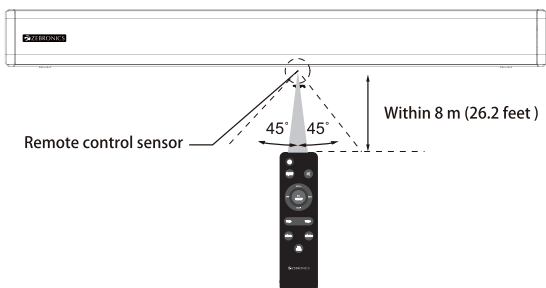

Positioning the Sound Bar

Place on a flat surface

Place the sound bar horizontally on a flat surface such as a TV unit or shelves and align it centrally with the TV screen. Allow some space between the speaker and the wall. Don't place inside a cabinet or an a walled shelf. Follow this guidance for best sound output and good airflow around the sound bar.


 
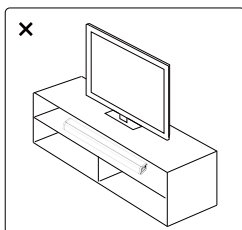 



Table Placement

 - Place the soundbar horizontally on a solid surface, such as a TV unit or shelves or computer table and align it centrally with the TV or computer screen.
- For best sound output and good airflow around the soundbar, place your soundbar as shown on the right.

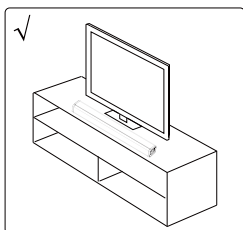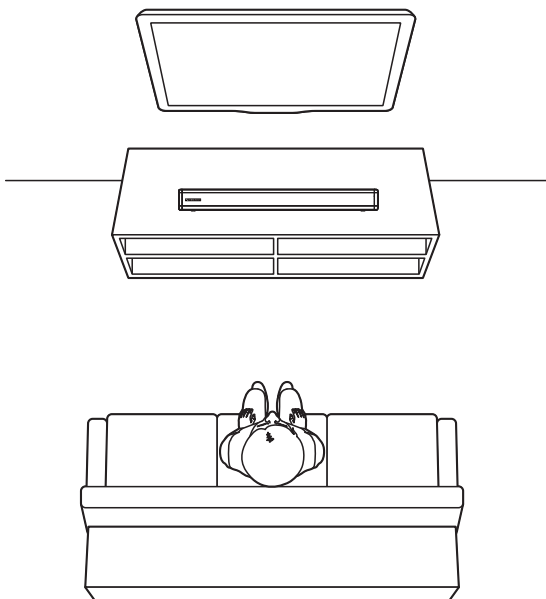

Mount on the wall :

 
WARNING: If you don't feel confident to correctly and securely wall-mount the sound bar, Seek the assistance of an experienced person or professional. Install the speaker on a vertical, flat, reinforced area of wall. For plaster walls, it is recommended to screw into wall studs for greater security. For optimum performance, allow at least 25mm/1" distance between the sound bar and the TV.

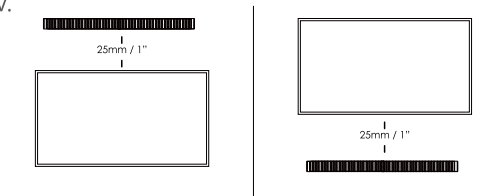

Follow below steps to mount the sound bar on the wall

1. Paste 2 pieces of EVA foam (with holes) on the two wall brackets aligning at the hole position of wall brackets.
2. Remove 4 screws from the rear housing of sound bar, then insert the 4 screws over the wall bracket screw holes aligning (on the side of EVA foam pasted), and then fasten the screws again.
3. According to the two hanging wall positions on the rear of sound bar, calibrate and mark the two hanging brackets hole position on the wall. Then drill two holes on the wall, firstly insert two expansion plastic screws on the wall, then fasten the hanging screws into expansion screw holes.
4. Then Paste the 2 pieces of EVA foam (without holes) on the two wall brackets downward. Then place the hollow cross in the centre of the bracket against the screws on the wall and hang the sound bar on the wall finally.

 Mount on the wall :

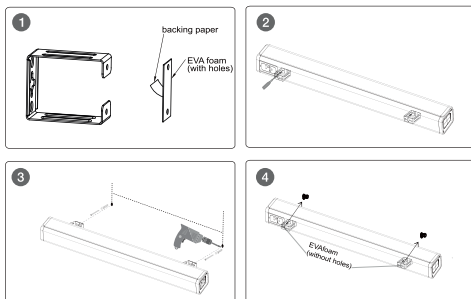

Operate Instructions :

Setting The Sound bar :

1. Plug the power cord in and the LED will light up.
2. Press the INPUT button to select the mode you need with the remote controller.

 
The indicator can change to different colors, representing different states:

Blue = BT Mode
Green = AUX Mode

Orange = Optical mode
Pink = USB Mode

Power ON/OFF :

1. Plug the sound bar adapter into a wall outlet, it will automatically enter standby mode.
2. Short-press the input button to turn on the sound bar.
3. To turn off, press either the STANDBY button on remote control or sound bar or unplug from wall outlet.

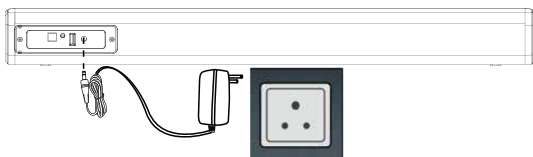

Playing Audio via BT Connection :

1. Use either the buttons on the Sound Bar or the "Input" button on the remote to activate BT mode. A Blue LED indicator will indicate that BT mode has been selected.
2. Activate the pairing function on your phone or other compatible device and select "**ZEB - JUKE BAR 2500**".
3. When successfully paired, you will hear a tone and the LED will stay on.
4. The remote control includes BT mode playback controls.

 
Notes:

If your Pairing device Switched off or Manual disconnected, the sound bar will automatically enter pairing mode. If the connected device is switched off or manual disconnected, the sound bar will automatically enter pairing successfully. connected device will be re-established once you re-enter wireless range(10 meters). to connect to other devices, repeat the above pairing steps.

There is no automatic shutdown in pairing mode. The sound bar will remain in pairing mode even if no device is paired, so switch off if not in use.

Audio input (Aux) Connection:

1. Use either the buttons on the Sound Bar or the "Input" button on the remote to activate AUX mode. A green LED indicator will indicate that AUX mode has been selected.
2. Playback functions (play/pause, tracks, pair) cannot be adjusted through the Sound Bar remote when in AUX mode.

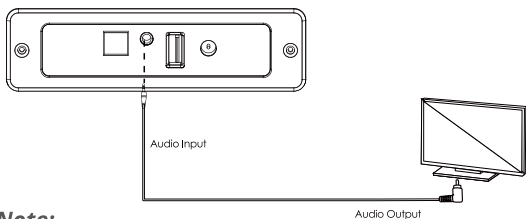

Note:

For some computers, you may need to access the audio control panel to manually set the sound bar as below picture.

 
Playing Audio via USB Port :

When the USB flash drive is plugged in, the sound bar automatically switches to USB input mode. A Pink LED indicator will indicate that USB mode has been selected. . This mode cannot be selected on the sound bar or remote control unless it is connected to a USB flash drive.

1. Ensure that your USB flash drive contains MP3 audio files (other file types not supported).

2. Connect the USB flash drive to the USB port on the sound bar (or your own USB extension cable connected to the USB port); music will automatically play.
3. The remote control includes USB input mode playback controls.

Optical Mode:

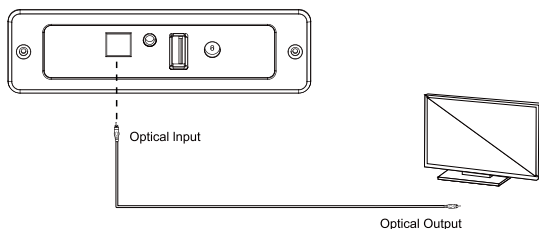

1. Use either the buttons on the Sound Bar or the "Input" button on the remote to active Optical mode. An orange LED indicator will indicate that Optical mode has been selected.
2. Playback functions (play/pause, tracks, pair) cannot be adjusted through the Sound Bar remote when in Optical mode.

Features:

2.0 Channel Sound bar

Wireless BT/AUX/Optical IN/USB

Remote control

Wall Mountable

LED Indicator

Volume/Media Control

External Power Adapter

Specifications :

| | |
|------------------------------------|-----------------------|
| Output Power (RMS) | : 35W |
| Driver Size | : (5.8 x 9.8 cm) x 2 |
| Impedance | : 4Ω |
| Frequency response | : 50Hz-20kHz |
| S/N Ratio | : ≥66dB |
| Separation | : ≥40dB |
| File format support | : Mp3 |
| Line input | : 3.5 mm, Optical IN |
| Max supported memory size (USB) | : 32GB |
| BT name | : ZEB-JUKE BAR 2500 |
| BT version | : 5.0 |
| Product Dimension (W x D x H) | : 75 x 7.05 x 7.65 cm |
| Net. Weight | : 1.56kg |

Package Content :

| | |
|----------------|-------|
| Sound Bar | : 1 U |
| Power Adapter | : 1 U |
| Remote Control | : 1 U |
| Input cable | : 1 U |
| QR code guide | : 1 U |
| Wall Mount | |
| Fasteners | : 1 U |

Troubleshooting :

| ISSUES | PROBLEM | SOLUTION |
|-----------|---|---|
| Sound | No sound from SoundBar speakers | Connect the audio cable from your SoundBar to your TV or other devices. However, you do not need a separate audio connection when the SoundBar and TV are connected through ARC connection. |
| | | On the remote control, select the correct audio input. |
| | Distorted sound or echo | If you play audio from the TV through the SoundBar, make sure that the TV is muted. |
| Bluetooth | A device cannot connect with the SoundBar. | Restart the soundbar and try pairing again. |
| | | You have not enabled the Bluetooth function of the device. See the user manual of the device on how to enable the function. |
| | | The device is not correctly connected. |
| | | The SoundBar is already connected with another Bluetooth device. Disconnect the connected device, then try again. |
| | Quality of audio play from a connected Bluetooth device is poor. | The Bluetooth reception is poor. Move the device closer to the SoundBar, or remove any obstacle between the device and the SoundBar. |
| | The connected Bluetooth device connects and disconnects constantly. | The Bluetooth reception is poor. Move the device closer to the SoundBar, or remove any obstacle between the device and the SoundBar. |

ISO 9001:2015 Certified Company
www.zebronics.com

