 


 ZEBRONICS

5.1 Soundbar

NEB JUKE BAR
NEB **7600**



 
User Manual

www.zebronics.com

Important Safety Instruction

Thank you for purchasing the **ZEB-JUKE BAR 7600** Soundbar. Please read this user manual carefully and keep for future reference.

Warning

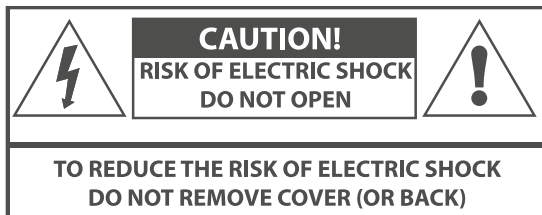

Caution:

- To reduce the risk of electric shock, do not dismantle the product and do not expose the apparatus to rain or moisture. No user-serviceable parts inside.
- Refer servicing to qualified personnel only.



The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.



Important! This symbol alerts you to read and observe important warnings and instructions on the unit or in this manual.

Notice:

1. To prevent possible hearing damage, do not listen at high volume levels for long time periods or a sudden high volume level.
2. Never use the device unsupervised! Switch off the device whenever you are not using it, even if not using it only for a short while.
3. This unit is not intended to be operated by means of an external timer or separate remote control system.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



5. Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
6. The unit should not be impeded by covering the ventilation opening with items such as newspaper, table-cloths, curtains etc. Make sure that there are at least 20 cm of space above and at least 5 cm of space on each side of the unit.
7. The unit must not be exposed to dripping or splashing liquid, no objects filled with liquids such as vases, should be placed on the unit.
8. To prevent fire or shock hazard, do not expose to direct heat, rain, moisture or dust.
9. Do not position this unit near any water sources e.g. taps, bathtubs, washing machines or swimming pools. Ensure that you place the unit on a dry, stable surface.
10. Do not place this unit close to a strong magnetic field.
11. Do not place the unit on a amplifier or receiver.
12. Do not place this unit in a damp area as the moisture will affect the life of electric components.
13. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Wipe with a clean, dry or slightly damp cloth.
14. When removing the power plug from the wall outlet, always pull directly on the plug,

never pull on the cord.

15. Depending on the electromagnetic waves used by a television broadcast, if a TV is turned on near this unit while it is also on, lines might appear on the LED TV. Neither this unit nor the TV is malfunctioning. If you see such lines, keep this unit well away from the TV set.

16. Clean only with dry cloth.

17. Only use attachments / accessories specified by the manufacturer.

Important Notes

 
 
 
 
- Safety and operating instruction manual should be retained for future reference.
- Do not attempt to remove any screws, or open the casing of the unit; there are no user serviceable parts inside. Refer all servicing to qualified service personnel.

Power Source:

This soundbar is designed to operate in AC 220V-240V 50/60Hz.


Product Representation



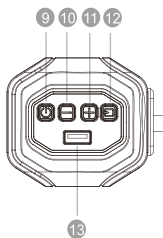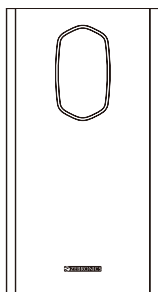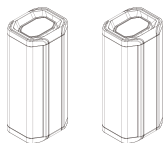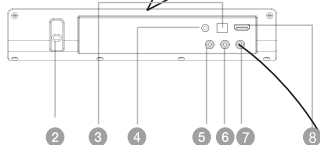

Sound Bar

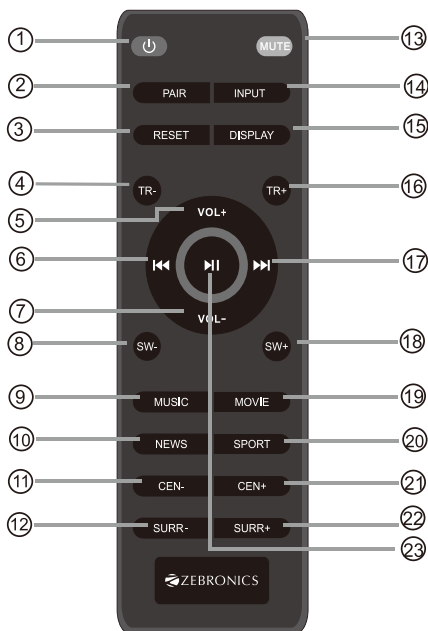 

1. DISPLAY
2. AC IN
3. OPTICAL
4. AUX
5. SR
6. SL
7. SUB OUT
8. HDMI (ARC)
9. STANDBY
10. VOL-
11. VOL+
12. INPUT
13. USB

Remote Control

 
 


1.  : Standby / Awake.
2. PAIR : Connect or disconnect to the pairing device. (Press the button more than 2 seconds).
3. RESET : Reset all CH volume levels to default of factory setting and switch EQ to Music mode when press and hold button more than 2 seconds.
4. TR- : Treble Decrease.
5. Volume+ : Master Volume Increase.
6.  Pre button : Previous program Only work under USB & UT Mode).
7. Volume- : Master Volume Decrease.
8. SW : Bass Decrease.
9. MUSIC : Select the Music EQ effect.
10. NEWS : Select the News EQ effect.
11. CEN- : Center Channel Volume Decrease.
12. SURR- : Surround Channel Volume Decrease.
13. MUTE
14. INPUT : Input mode (AUX/USB/ARC/OPT/BT).
15. DISPLAY : LED display on/off, Only work under power on.
16. TR+ : Treble Increase.
17.  Next button : Next program. (Only work under USB and BT mode).
18. SW+ : Bass Increase.
19. MOVIE : Select the Movie EQ effect.
20. SPORT : Select the Sport EQ effect.
21. CEN+ : Center Channel Volume Increase.
22. SURR+ : Surround Channel Volume Increase.
23.  : Play/Pause Only work under MB and BT mode).

Positioning the Sound Bar

Place on a flat Surface


Place the sound bar horizontally on a flat surface such as a TV unit or shelves and align it centrally with the TV screen. Allow some space between the speaker and the wall. Don't place inside a cabinet or on a walled shelf. Follow this guidance for best sound output and good airflow around the sound bar.

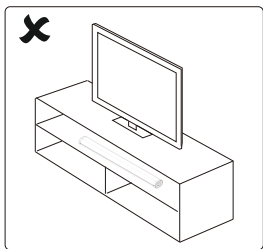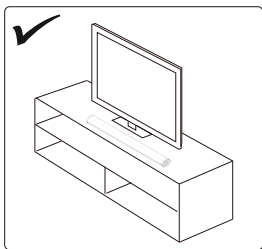

Mount on the wall





WARNING : If you don't feel confident to correctly and securely wall-mount the sound bar, Seek the assistance of an experienced person or professional.

 Install the speaker on a vertical, fast, reinforced area of wall. For plaster walls, it is recommended to screw into wall studs for greater security. For optimum performance, allow at least 25mm/1" distance between the sound bar and the TV.

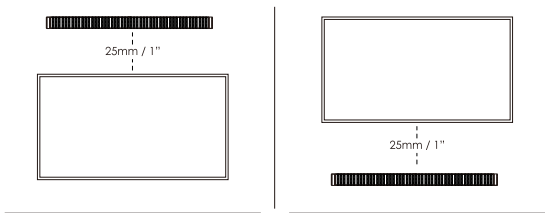



Follow below steps to mount the sound bar on the wall

   
 
1. Paste 2 pieces of EVA foam (with holes) on the two wall brackets aligning at the hole position of wall brackets.
2. Remove 4 screws from the rear housing of sound bar, then insert the 4 screws over the wall bracket screw holes aligning (on the side of EVA foam pasted), and then fasten the screws again.
3. According to the two hanging wall positions on the rear of soundbar, calibrate and mark the two hanging brackets hole position on the wall. Then drill two holes on the wall, firstly insert two expansion plastic screws on the wall, then fasten the hanging screws into expansion screw holes.
4. Then Paste the 2 pieces of EVA foam (without holes) on the two wall brackets downward. Then place the hollow cross in the center of the bracket against the screws on the wall and hang the sound bar on the wall finally.

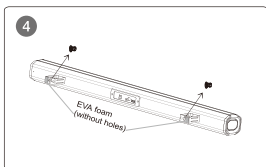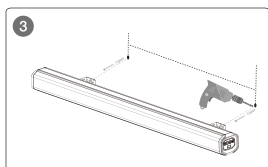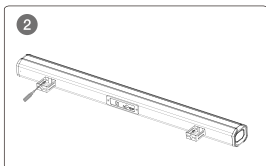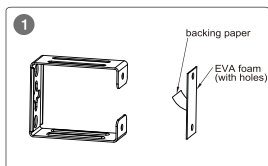

Follow below steps to mount the surround speaker on the wall

    1. Make 2 holes on the wall with distance of two surround speakers you needed.
2. Put the plastic anchors onto the wall and secure the screws to the plastic clip, do not tighten the screws all the way make sure leave some space
3. Attached the 2 EVA pads onto the wall mount bracket. This will make sure that there is enough space between the wall and the surround speakers outlet, minimum 15mm.
4. Once the screws securely fastened, hang the surround speaker over by inserting the screws onto the wall mount bracket

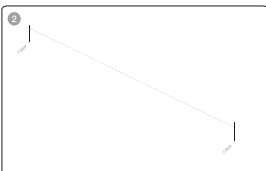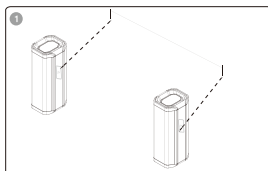

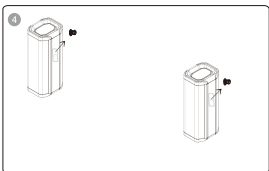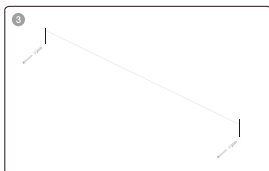

OPERATE INSTRUCTIONS

Setting the Soundbar

1. Plug in the power cord and the display will light up (Standby mode)
2. Switch on the sound bar by pressing "STANDBY" button on sound bar or on remote controller. After switching on, the default input mode will appear on display.
3. Input modes can be changed by pressing the "INPUT" button on sound bar or on remote controller.
4. Below are input mode names appearing in the soundbar display:

bt - Bluetooth Pairing mode

AU - AUX mode

OP - Optical mode

Hd - ARC mode

US - USB mode

Powering On/Off

5. Plug the power cord of sound bar into a wall outlet, it will automatically enter standby mode.

6. Short-press the “**STANDBY**” button on sound bar or on remote controller to turn on the sound bar.

7. To turn off, press and hold the “**STANDBY**” button for 2 seconds, then unplug from wall outlet.



Playing Audio via BT Connection

1 Turn on the sound bar and then short-press the “**INPUT**” button on sound bar or remote controller to switch it to BT mode and LED display on the sound bar will flicker in the Bluetooth pairing mode.

2. Activate the pairing function on your phone or other compatible device and select “**ZEB-JUKE BAR 7600**” by BT connection.

3. When successfully paired, you will hear a tone and LED display will turn on “**bt**” and stop flickering. Then music that you selected can be played on the sound bar.

4. The remote controller includes BT mode playback controls.

Notes:

- If your pairing device switched off or manual disconnected, the sound bar will automatically enter pairing mode.
- If the connected device is switched off or manual disconnected, the sound bar will automatically enter pairing successfully connected device will be re-established once you re-enter wireless range(10 meters). to connect to other devices, repeat the above pairing steps

 


Playing Audio via USB Port

The sound bar automatically switches to USB input mode with the LED display "**USb**" when a USB flash drive is inserted (this mode isn't selectable on the sound bar or remote control unless a USB flash drive is connected).

1. Ensure that your USB flash drive contains MP3 audio files (other file types not supported)
2. Connect the USB flash drive to the USB port on the sound bar (or your own USB extension cable connected to the USB port); music will automatically play
3. The remote control includes USB input mode playback controls

Using the Soundbar

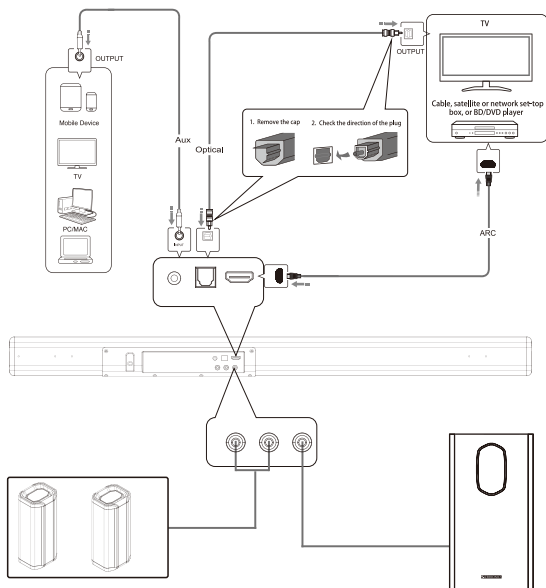

Audio input(Aux)Connection

1. Firstly connect the soundbar to your PC, laptop, smart-phone, TV, or other audio devices by using an AUX cable provided.
2. Then short press the INPUT button on the sound bar or on the remote controller to switch to audio input mode with LED display lighting up "**AU**".
3. In this mode, playback can only be controlled on your connected device

HDMI (ARC) Mode

1. The Soundbar supports HDMI(ARC) with Audio Return Channel ARC. If your TV is HDMI(ARC) compliant, you can hear the TV audio through your Sound bar by using a single HDMI(ARC) cable.
2. Using a High Speed HDMI(ARC) cable, connect the ARC connector on the sound bar to the HDMI(ARC) connector on the TV. The HDMI(ARC) connector on the TV might be labelled differently. For details, see the TV user manual.
3. Press "INPUT" button on the sound bar or on the remote controller to select the HDMI(ARC) mode to open optical digital input of your sound bar. After successfully connected, the LED display will show "**Hd**". Movie or music that you selected will be played on through sound bar and TV. You can use the volume buttons to adjust the volume to your

requirements.

4. If you wish, you can change the audio settings by using the relevant buttons on the remote controller.

Optical Mode

Use this operating mode to play music from the optical digital input for example from a TV on your soundbar (A). The TV must have an optical digital output. Use the optical cable to make the connection. Proceed as follows:

- Connect the optical cable to the optical digital output of your TV.
- Then connect the optical cable to the optical digital input of your soundbar.
- Switch the TV set and sound bar on. Set the connected TV to "PCM Stereo" or "Stereo 2.0".
- Start playing on the TV.
- Press "INPUT" button on the sound bar or on the remote controller to select the OPTICAL mode to open optical digital input of your sound bar. After successfully connected, the LED display will show . Movie or music that you selected will be played on through sound bar and TV.
- You can use the volume buttons to adjust the volume to your requirements.
- If you wish, you can change the audio settings by using the relevant buttons on the remote controller.

Troubleshooting

ISSUES	PROBLEM	SOLUTION
Sound	No sound from SoundBar speakers	Connect the audio cable from your SoundBar to your TV or other devices. However, you do not need a separate audio connection when the SoundBar and TV are connected through ARC connection.
		On the remote control, select the correct audio input.
	Distorted sound or echo	If you play audio from the TV through the SoundBar, make sure that the TV is muted.
Bluetooth	A device cannot connect with the SoundBar.	Restart the soundbar and try pairing again.
		You have not enabled the Bluetooth function of the device. See the user manual of the device on how to enable the function.
		The device is not correctly connected.
		The SoundBar is already connected with another Bluetooth device. Disconnect the connected device, then try again.
	Quality of audio play from a connected Bluetooth device is poor.	The Bluetooth reception is poor. Move the device closer to the SoundBar, or remove any obstacle between the device and the SoundBar.
	The connected Bluetooth device connects and disconnects constantly.	The Bluetooth reception is poor. Move the device closer to the SoundBar, or remove any obstacle between the device and the SoundBar.

Features:

BT v5.0 / HDMI (ARC) / Optical / USB / AUX

16.51 cm Subwoofer

5.1 Channel Soundbar

Wall Mountable

LED Display

Volume/Media Control

Remote Control

Specifications

Output Power

Subwoofer : 100W

Soundbar : 110W

Satellites : 45W x 2

Total : 300W

Driver Size

Subwoofer : 16.51 cm x 1

Soundbar : (5cm x 9cm) x 3

Satellites : (5cm x 9cm) x 2

Impedance

Subwoofer : 4Ω

Soundbar : 8Ω

Satellites : 8Ω

Frequency Response : 45Hz-20KHz

S/N Ratio : ≥70dB

Separation : ≥40dB

File Format Support : MP3

Line Input : 3.5mm, Optical IN,
HDMI (ARC)

Max Supported

Memory Size (USB) : 32 GB

BT name	: ZEB-JUKE BAR 7600
BT version	: 5.0
Product Dimension (W x D x H)	
Subwoofer	: 19 x 30.6 x 36.7 cm
Soundbar	: 90 x 7.6 x 7.1 cm
Satellites	: 6.7 x 7.9 x 16.7 cm
Net. Weight	
Subwoofer	: 3.9 kg
Soundbar	: 1.8 kg
Satellites	: 450g x 2
Total	: 6.6 kg

Package Contents

Sound Bar	: 1 U
Subwoofer	: 1 U
Satellite	: 2 U
Remote Control	: 1 U
Input Cable	: 1 U
Wall Mount Bracket with Fasteners	: 1 U
QR Code Guide	: 1 U

ISO 9001:2015 Certified Company
www.zebronics.com

