

 ZEBRONICS

Soundbar
ZEB JUKE BAR
9330



User Manual

 
www.zebronics.com

Important Safety Instruction:

Dear Customer,

Thank you for purchasing the **ZEB-JUKE BAR 9330** Soundbar. Please read this user manual carefully and keep for future reference.

Warning

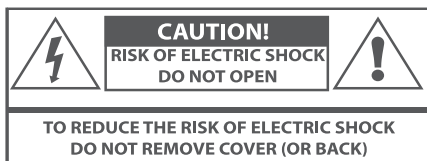

Caution:

- To reduce the risk of electric shock, do not dismantle the product and do not expose the device to rain or moisture. No user-serviceable parts inside.
- Refer servicing to qualified personnel only.
- Plug on the power cord is used as disconnect device, the disconnect device shall be easily accessible.



The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.



Important! This symbol alerts you to read and observe important warnings and instructions on the unit or in this manual.

Notice:

- To prevent possible hearing damage, do not listen at high volume levels for long time periods or a sudden high volume level.
- Never use the device unsupervised! Switch off the device whenever you are not using it, even if not using it only for a short while.
- The device is not intended to be operated by means of an external timer or separate remote control system.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



- Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
- The unit should not be impeded by covering the ventilation opening with items such as newspaper, table-cloths, curtains etc. Make sure that there are at least 20 cm of space above and at least 5 cm of space on each side of the unit.
- The device must not be exposed to dripping or splashing liquid, no objects filled with liquids such as vases, should be placed on the device.
- To prevent fire or shock hazard, do not expose this equipment to direct heat, rain, moisture or dust.
- Do not position this unit near any water sources e.g. taps, bathtubs, washing machines or swimming pools. Ensure that you place the unit on a dry, stable surface.
- Do not place this soundbar close to a strong magnetic field.
- Do not place the soundbar on a amplifier or receiver.
- Do not place this soundbar in a damp area as the moisture will affect the life of electric components.
- Do not attempt to clean the soundbar with chemical solvents as this might damage the finish. Wipe with a clean, dry or slightly damp cloth.

- When removing the power plug from the power socket, always pull directly on the plug, never pull on the cord.
- Depending on the electromagnetic waves used by a television broadcast, if a TV is turned on near this unit while it is also on, lines might appear on the LED TV. Neither this unit nor the TV is malfunctioning. If you see such lines, keep this unit well away from the TV set.
- The mains plug is used to disconnect the device, the disconnected device should remain readily operable.

Important Safety Instructions:

- Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.
- Do not use this device near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heaters, stoves, or other device (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs, or at the point where they exit from the device.
- Only use attachments/accessories specified by the manufacturer.

- Unplug this device during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personal. Servicing is required when the device has been damage in any way, for example, when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the device, the device has been exposed to rain or moisture, does not operate normally, or has been dropped.
- The AC plug is used to disconnect the device, the disconnected device should remain readily operable. In order to disconnect the device from the AC power completely, the AC plug must be removed from the AC power socket completely.

Preparation for Use

Unpacking and Set Up:

- Remove the Sound bar from the carton and remove all packing material from the Sound bar. Save the packing material, if possible, in case the Sound bar ever needs to be serviced or transported.
- The original carton and packing material is the only safe way to pack your Sound bar to protect it from damage in transit.
- Remove any descriptive labels or stickers on the front or top of the cabinet. Do not remove any labels or stickers from the back or bottom of the cabinet.

- Place your Sound bar on a level surface such as a table, desk or shelf, convenient to an AC power socket, out of direct sunlight, and away from sources of excess heat, dirt, dust, moisture, humidity or vibration.
- Unwind the Line cord connecting the AC adapter and extend it to its full length.

Protect Your Furniture:

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture.

polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement center everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the unit.

Important Notes:

- Safety and operating instruction manual should be retained for future reference.

- The device should not be exposed to dripping, splashing or placed in a humid atmosphere such as a bathroom.
- Do not install the product in the following areas:
 - Places exposed to direct sunlight or close to radiators.
 - On top of other stereo equipment that radiate too much heat-Blocking ventilation or in a dusty area.
 - Areas where there is constant vibration.
 - Humid or moist places.
 - Do not place near candles or other flames.
- Operate the product only as instructed in this manual.
- Before turning on the power for the first time, make sure the sound bar is plugged to power socket.
- For safety reasons, do not remove any covers or attempt to gain access to the inside of the product. Refer any servicing to qualified personnel.
- Do not attempt to remove any screws, or open the casing of the unit; there are no user serviceable parts inside. Refer all servicing to qualified service personnel.

Power Source:

This soundbar is designed to operate in AC 220-240V 50/60Hz.

Pair up Soundbar with Wireless Surround Speaker and Wireless Subwoofer:

 
- Connects : JUKE BAR 9330 soundbar system to power supply, soundbar system will be in standby mode: "--" will be displayed on main soundbar, blue LED indicator on the rear of wireless subwoofer is slowly flashing, means main soundbar now is not pairing with wireless subwoofer.
- Press STANDBY button on main soundbar or on remote control to power on, press INPUT button to select AUX input mode.
- Press and hold PAIR button on the remote control, "SUB PAIR" will be displayed on main soundbar. Meanwhile, press and hold PAIR button on the rear of wireless subwoofer until you see LED indicator on the rear becomes quickly flashing, they are now in pairing mode.
- After about 20-30 seconds, the blue LED indicator on the rear of wireless subwoofer will stop flashing and remain blue to confirm a successful pairing with the main soundbar.

- The units will now be able to pair automatically after this initial successful pair, even if they are switched off and on again.

Remark: To make a successful pairing, ensure main soundbar and wireless subwoofer you want to pair with each other is turned on and within connection distance range, and any other pairing devices should be switched off or on standby.


Product Representation

Sound Bar:

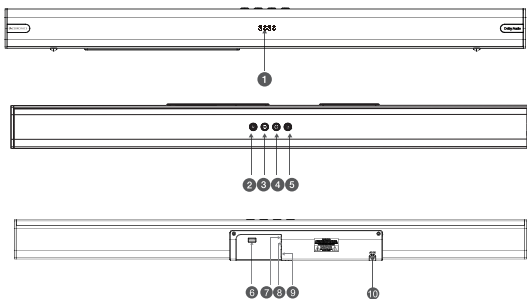


- | | |
|--|--|
| <p>1 DISPLAY PANEL.</p> <p>2 Standby: standby mode to power on/off.</p> <p>3 — Volume: Decrease the volume.</p> <p>4 + Volume: Increase the volume.</p> <p>5 INPUT: Select an input source for the Soundbar.</p> | <p>6 USB: Connect the USB flash drive to the USB port on the soundbar.</p> <p>7 AUX: Auxiliary Audio input from Mp3/Phone/set-top box devices.</p> <p>8 OPTICAL: Connect to an optical audio output on TV or digital devices.</p> <p>9 TV(ARC): Connect to TV(ARC)</p> <p>10 AC IN: Connect to power supply.</p> |
|--|--|

 SubWoofer:

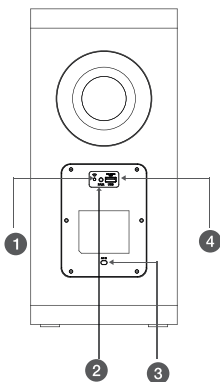

- 1** LED indicator: It indicates pairing between the soundbar to the subwoofer.
- 2** Pair: when subwoofer disconnect soundbar
(1) press the button in short time to wake up the led
(2) press the button more than 2 seconds for subwoofer to reconnect soundbar.
- 3** AC IN
- 4** USB Port (CAN'T PLAY ANY MUSIC, FOR SOFTWARE UPGRADE ONLY)

 Remote Control:

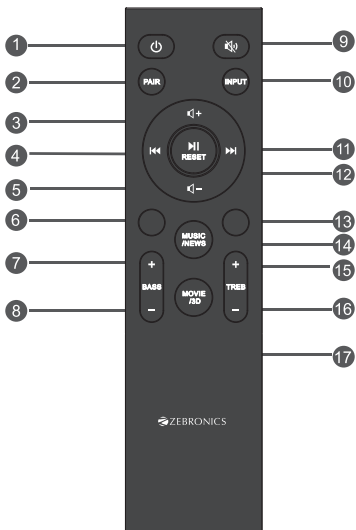


- 1 ⏻ : Standby mode for power on/off.
- 2 PAIR: Connect or disconnect to the pairing device.
- 3 Volume+: Master volume up
- 4 Pre button: Previous program (Only work under USB & BT Mode).
- 5 Volume - : Master volume down
- 6 CEN-: Center Channel volume down
- 7 Bass +
- 8 Bass -
- 9 MUTE: Mute mode.

- ⑩ INPUT: Input mode(AUX/USB/TV (ARC)/OPT/BT).
- ⑪ ►► Next button: Next program. (Only work under USB and BT mode).
- ⑫ Play/Pause (Only work under USB and BTmode). RESET: (Reset EQ and volume in any mode, high and low tuning)Reset: Press and hold the button more than 3 sec. to Set all functions to manufacturer defaults.
- ⑬ CEN+: Center Channel volume up.
- ⑭ MUSIC/NEWS: Select the Movie/NEWS EQ effect.
- ⑮ TR+: Treble volume up.
- ⑯ TR-: Treble volume down.
- ⑰ MOVIE/3D: Select the MOVIE/3D EQ effect.

Operating range of the remote control:


 
- When the unit is mounted on a wall, point the remote control at the remote control sensor on the bellowed panel. The provided Remote Control allows the unit to be operated from a distance.
- Even if the Remote Control is operated within the effective range 26.2 feet (8m), remote control operation may be impossible if there are any obstacles between the unit and the remote control.
- If the Remote Control is operated near other products which generate infrared rays, or if other remote control device using infra-red rays are used near the unit, it may operate incorrectly. Conversely, the other products may operate incorrectly.



Positioning the Sound Bar

Place on a flat Surface:

  
Place the sound bar horizontally on a flat surface such as a TV unit or shelves and align it centrally with the TV screen. Allow some space between the speaker and the wall. Don't place inside a cabinet or on a walled shelf. Follow this steps for best sound output and good airflow around the sound bar.

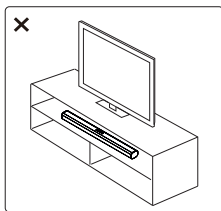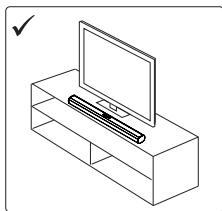

Mount on the wall:


WARNING : If you don't feel confident to correctly and securely wall-mount the sound bar, Seek the assistance of an experienced person or professional.

 Install the speaker on a vertical, fast, reinforced area of wall. For plaster walls, it is recommended to screw into wall studs for greater security. For optimum performance, allow at least 25mm/1" distance between the sound bar and the TV.

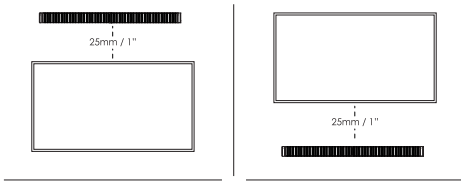

Follow below steps to mount the sound bar on the wall:

 1. Make 2 holes on the wall with distance same as the wall bracket on the soundbar
2. Put the plastic anchors onto the wall and secure the screws to the plastic clip, do not tighten the screws all the way make sure leave some space
3. Attached the 2 EVA pads onto the wall mount bracket. This will make sure that there is enough room between the wall and the soundbar outlet, minimum 15mm
4. Once the screws securely fastened, hang the sound bar over by inserting the screws onto the wall mount bracket

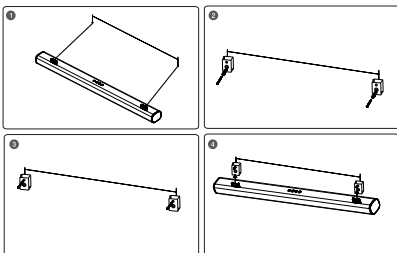


Basic Operation:

- Press the power button on either the remote control or the soundbar to turn on the soundbar.
- Switch on the connected device (such as TV, playback devices, game console etc).
- Press the input button on either the remote control or the soundbar to select your desired input source.

Input Source	Description
TV(ARC)/ OPTICAL	Audio from TV (via TV ARC port or OPTICAL jack)
AUX	Sound from a connected device (via AUX port)
BLUETOOTH	Sound from a BT connected device
USB	Sound from a USB storage device

Power ON and OFF:

 - Plug the power cord of the soundbar into a wall outlet, it will automatically enter standby mode;
- Press the STANDBY button on the soundbar or POWER button on the remote control to turn the soundbar on. Make your selection of the desired input modes by pressing the INPUT button on the remote or the INPUT button on the soundbar.
- To turn off, press the STANDBY button again on the soundbar or POWER button again on remote control, the soundbar will enter standby mode, and then unplug it from the wall outlet.

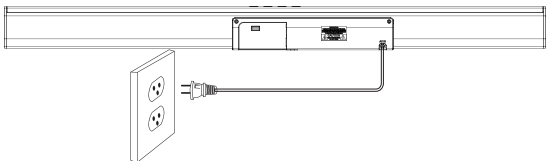

Auto Standby:

1. The unit will automatically turns to standby mode when no audio input is received for 20 minutes.
2. If the TV or the external unit is disconnected, switched it off
 - To switch the unit off completely, remove the main plug from the main socket.
 - Please turn the unit off completely to save energy when not in use.

Select Modes:

- Plug the power cord into the mains, the display should light up.
- Switch the soundbar on by pressing the power button on the soundbar or the STANDBY button on the remote. The default input mode will appear on the display after being switched on.
- Select the input mode by pressing the INPUT button on the soundbar or by pressing the INPUT button on the remote.
- Make your selection from the following input modes:

BT- Bluetooth Pairing mode, **AUX** - AUX mode,
OPTI- Optical mode, **ARC**- TV(ARC) mode,
USB - USB mode

Playing Audio via BT Connection:

- Turn the soundbar on, press the INPUT button on the soundbar or the INPUT button on the remote control to select the Bluetooth mode. When Bluetooth is selected, "**BT**" will be displayed on the LED display and the blue LED on the soundbar will flicker followed by a double beep sound to indicate Bluetooth pairing mode is now active.
- Turn the Bluetooth of your device on, search for "**ZEB-JukeBar 9330**" on your Bluetooth list, and then select Bluetooth connection.

- When successfully paired, you will hear a tone and the "BT" on the screen stops flickering. Then the music on your phone or other compatible device that you selected can be played on the soundbar.
- Use the volume buttons on the soundbar or on the remote controller to adjust the volume.
- The remote controller includes Bluetooth mode playback controls. Press and hold PAIR button on the remote controller for more than 2 seconds to disconnect the paired Bluetooth device or to reconnect with the previously connected Bluetooth device.
- If you wish, you can change the audio settings by using the relevant buttons on the remote controller.

Note:

- In Bluetooth mode, the remote can control music play/pause or select previous or next track. PREV/NEXT/PLAY & PAUSE button only work in Bluetooth and USB mode; they have no function in other modes.
- The above pairing procedure doesn't need to be repeated with the same connected device once paired.
- If the connected device is switched off or manually disconnected, the soundbar will automatically enter pairing mode.

 
- If the connected device is moved away from wireless range (up to 10 meters) of the soundbar, then it will get disconnected, and it will successfully connect to the device once you re-enter Bluetooth range. To connect to other devices, repeat the above pairing steps.
- If a Bluetooth device has been connected before, the soundbar will connect to the last connected device. Unpair this connection to connect a new device.
- There is no automatic shutdown in pairing mode. The soundbar will remain in pairing mode even if no device is paired, so switch it off if not in use.



Playing Audio via USB Port:

- The soundbar automatically switches to USB input mode with the LED display “USB” when a USB flash drive is inserted.
- When a USB flash drive is inserted and soundbar is powered on, press the INPUT key on remote controller or INPUT button on soundbar to switch to USB input mode (in case it doesn't change automatically with LED display lighting up “USB”. And music in the USB will be automatically played.
- This mode cannot be used on the soundbar until an USB flash drive is connected.
- Ensure that your USB flash drive contains MP3 audio file (other file types are not supported.)
- Connect the USB flash drive to the USB port on the soundbar or by USB adapter (or your own USB extension cable connected to the USB port) and the music will be played automatically.
- The remote control includes USB input mode playback controls.

Connections:

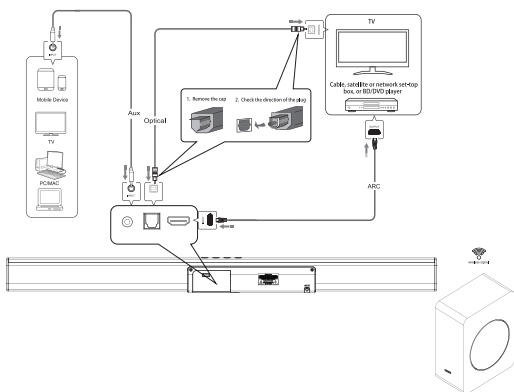

Audio input (Aux) Connection:

- Firstly connect the soundbar to your PC, laptop, smart-phone, TV, or other audio devices by using an AUX cable provided. Make sure that these devices have both AUX IN and AUX out terminals.
- Then press the INPUT button on the soundbar or remote control to switch the soundbar to Aux mode, once the soundbar is connected in Aux mode, the screen will display "AUX". And the music on your connected device will play. Playback can only be controlled on your connected device.

Note:

For some computers, you may need to access the audio control panel to manually set the soundbar as shown steps on above.

Optical Mode:

Using an optical cable, connect the OPTICAL connector on your Soundbar (Optical digital input) to the OPTICAL OUT connector on the TV or other device. The TV or other device must have an optical digital output.

Proceed as follows:

- Connect the optical cable to the OPTICAL jack on the rear of the soundbar.
- Connect the other end of the optical cable to audio output jack on TV or other device.
- Start playing on the TV
- Press the source input button on the soundbar or remote control to activate the corresponding mode (the OPTICAL mode) to open optical digital input of your soundbar. After successfully connected, the LED display will show "OPTI". Operate your audio device directly for playback features.
- Press the VOL +/- buttons to adjust the volume to your desired level.

Note:

- When connecting a device such as a TV/Set-top box/ DVD/ game console with optical cable, set the audio output mode of the device to Dolby or Auto mode (digital optical output).
- Do not bend the optical cable, otherwise the cable inside will be damaged.

TV(ARC) Mode:

- The soundbar supports TV(ARC) with audio return channel (ARC). You can hear the TV audio through your soundbar by using a single HDMI(ARC) cable. But on condition that your TV is ARC compliant.
- Using a high speed HDMI(ARC) cable, connect the TV(ARC) connector on the soundbar to the HDMI(ARC) connector on the TV. The HDMI(ARC) connector on the TV might be labeled differently. For details, see the user manual of your TV.
- When HDMI(ARC) is connected, TV sound setting in "sound output" mode should be set as <external Dolby or Auto mode>, in addition, digital audio output mode should be set as <automatic> or <decoded output as Dolby>. When the HDMI(ARC) cable is connected, the TV digital audio output is set as Dolby or Auto mode. Then start playing music on the TV.
- Press "INPUT" button on the remote control or "STANDBY" button on soundbar to select **ARC** - TV(ARC) mode. Different TV might be different setting, please refer to your TV User Manual.
- Use the volume buttons to adjust the volume to your requirements.
- You can also change the audio settings by using the relevant buttons on the remote control.

Note:

- When connecting a device such as a TV/Set-top box/DVD/ game console with TV(ARC) cable, set the audio output mode of the device to Dolby or Auto mode <digital TV(ARC) output>.
- The TV is connected to a TV(ARC) port with sound bar. Different TVs might have different setup menus, but the operation approach is the same.
- If needs to connect set-up box meanwhile, please firstly connect the TV(ARC) connector and paired to the soundbar. Then connect the set-top box.

Features:

- Multi Connectivity (BT v5.3 | TV (ARC) | Optical IN | USB | AUX)
- 16.51cm Wireless Subwoofer
- Real 3.1CH Sound
- Dolby Audio
- Volume/Media Control
- Remote control
- Wall Mountable
- LED Display

Specifications:

Model	: ZEB-SBSPK C29
Driver Size	
Subwoofer	: 16.51 cm x 1
Soundbar	: [5.3 x 9.3 cm] x 3
Impedance	
Subwoofer	: 3Ω
Soundbar	: 6Ω
Frequency Response	: 45Hz-20kHz
S/N Ratio	: ≥66dB
Separation	: ≥33dB
File format support (USB)	: MP3
Line Input	: TV (ARC) Optical IN AUX
Max supported memory size (USB)	: 32GB
BT name	: ZEB-JukeBar 9330
BT version	: v5.3
Product Dimensions (W x D x H)	
Subwoofer	: 19 x 29.8 x 36.7 cm
Soundbar	: 96 x 9.4 x 7.4 cm

Net.Weight

Soundbar : 2.8kg

Subwoofer : 4.9kg

Total : 7.7kg

Package Contents:

Sound Bar : 1 U

Subwoofer : 1 U

Remote Control : 1 U

Input Cable : 1 U

QR Code Guide : 1 U

Wall mount bracket
with fasteners : 1 U

Troubleshooting:

PROBLEM/TROUBLE	POSSIBLE CAUSE	SOLUTION
There is no sound output from soundbar.	Another input source is selected.	Select an appropriate input source.
	The mute function is activated.	Cancel the mute function.
	The volume of soundbar or TV/other device is adjusted too low.	Increase the volume level on soundbar or by remote control or on TV.
	The power cable of the unit is not connected properly.	Make sure that the power cable of the unit is connected to an AC wall outlet securely.
	Input jacks on a playback device are connected.	Connect the input jack on the soundbar and the output jack on the playback device.
	Signals that the soundbar cannot playback when being input.	When soundbar and TV or other devices are connected by an audio cable through HDMI eARC port output, Select the correct audio input and output. Make sure the digital audio output setting on the playback device to PCM format. Since the output format of our soundbar is PCM, if it is used, the decoding format of TV or other devices will be adjusted to PCM state.
The sound is distorted or echoed.	TV volume is not muted.	If you play audio from TV through the soundbar, make sure that the TV is muted.
The volume decreases when the unit is turned on.	The automatic volume adjustment function is activated.	Turn up the volume as required.
Noise is heard.	The soundbar is too close to another digital or high-frequency device.	Move those devices away from the sound bar.
The unit cannot be operated by using the remote control.	The unit is out of the operating range.	Use the remote control within the operating range.
	The batteries are weak.	Replace with new batteries.
	The remote control sensor of the soundbar is exposed to direct sunlight or strong lighting.	Adjust the lighting angle or reposition the sound bar. Avoid direct sunlight.
The TV cannot be operated by using the TV's remote control.	The unit is blocking the TV's remote control sensor.	Position the unit so that it does not obstruct the TV's remote control sensor.
A device cannot connect the soundbar or the unit cannot be connected to a Bluetooth device.	Bluetooth function of the device is not activated, not paired or connected correctly.	Restart the sound bar and try pairing again. Enable BT function on the device and reconnect. Disconnect other connected BT devices if necessary.
	Bluetooth is not selected as the input source.	Select Bluetooth as the input source.
	The unit is connected to a different Bluetooth device.	Un-pair the Bluetooth device that is currently connected and pair with the desired Bluetooth device.
	The unit is too far away from the Bluetooth device.	Move the Bluetooth device closer to this unit.
	A device emitting electromagnetic waves (such as a microwave oven, a wireless device and so on) may be placed nearby.	Do not use this unit near devices that emit electromagnetic waves.
	The Bluetooth device that you are using may not support the protocol.	Use a Bluetooth device that supports the protocol.
	The connection profile registered in the Bluetooth device may not be functioning correctly for some reason.	Delete the connection profile in the Bluetooth device and then connect the Bluetooth device to this unit.
Sound quality of audio play from a connected Bluetooth device is poor and connection is not stable.	The Bluetooth reception is poor.	Move the device closer to the sound bar or remove obstacles between them.
No sound can be heard or sound breaks (Bluetooth mode)	The volume on the Bluetooth device may be too low.	Raise the volume on the Bluetooth device.
	Bluetooth is not selected as the input source.	Select the Bluetooth as the input source.
	Playback on the device has not been performed.	Perform playback on the device.
	The sound output on the Bluetooth device may not be set to this unit.	Select this unit as the output device on the Bluetooth device.
	The connection to the Bluetooth device was cut off.	Connect with the Bluetooth device one more time.
	The unit may be too far away from the Bluetooth device.	Move the Bluetooth device near this unit.
	A device emitting electromagnetic waves (such as a microwave oven, a wireless device and so on) may be placed nearby.	Do not use this unit near device that emit electromagnetic waves.

PROBLEM/TROUBLE	POSSIBLE CAUSE	SOLUTION
There is no sound from soundbar - TV(eARC) Mode	Incorrect HDMI cable is used causing no signal to be sent to soundbar. Incorrect input mode is selected.	<ol style="list-style-type: none"> 1. Make sure that the user connected TV and sound bar by a 19-core HDMI cable. 2. The soundbar and TV are connected through TV(eARC) port output; make sure that the TV is HDMI eARC or HDMI ARC compliant. 3. Set the TV to HDMI eARC or HDMI ARC (CEC). Set the audio output mode of TV to PCM format. (Or refer to your TV user manual)
There is no sound from bar (OPTICAL Mode)	OPTICAL cable might be damaged and no signal is received by the soundbar due to a failed connection and incorrect operation mode selected.	<ol style="list-style-type: none"> 1. Replace the OPTICAL cable with a new one to connect. 2. Set your TV audio output to PCM format. (Pls refer to your TV user manual)
There is no sound from sound bar (USB mode)	USB file type is not support & Soundbar doesn't switch to USB input mode automatically when USB is inserted.	Make sure that USB flash drive contains MP3, ALAC,FLAC files because other file types are not supported. Switch the input mode once again, then playback again.

ISO 9001:2015 Certified Company
www.zebronics.com

