

 ZEBRONICS

Soundbar

**NEB** JUKE BAR  
**9560**



**User Manual**


[www.zebronics.com](http://www.zebronics.com)

## Important Safety Instruction:

Dear Customer,

Thank you for purchasing the **ZEB-JUKE BAR 9560** Soundbar. Please read this user manual carefully and keep for future reference.

### Warning

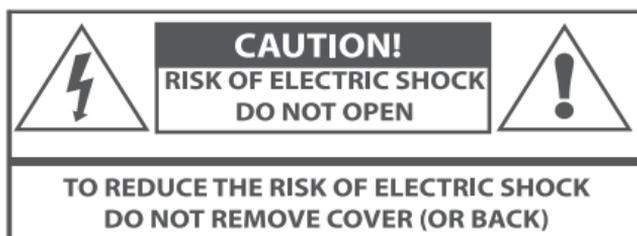

### Caution:

- To reduce the risk of electric shock, do not dismantle the product and do not expose the device to rain or moisture. No user-serviceable parts inside.
- Refer servicing to qualified personnel only.
- Plug on the power cord is used as disconnect device, the disconnect device shall be easily accessible.



The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.



Important! This symbol alerts you to read and observe important warnings and instructions on the unit or in this manual.

**Notice:**

- To prevent possible hearing damage, do not listen at high volume levels for long time periods or a sudden high volume level.
- Never use the device unsupervised! Switch off the device whenever you are not using it, even if not using it only for a short while.
- The device is not intended to be operated by means of an external timer or separate remote control system.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



- Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
- The unit should not be impeded by covering the ventilation opening with items such as newspaper, table-cloths, curtains etc. Make sure that there are at least 20 cm of space above and at least 5 cm of space on each side of the unit.
- The device must not be exposed to dripping or splashing liquid, no objects filled with liquids such as vases, should be placed on the device.
- To prevent fire or shock hazard, do not expose this equipment to direct heat, rain, moisture or dust.
- Do not position this unit near any water sources e.g. taps, bathtubs, washing machines or swimming pools. Ensure that you place the unit on a dry, stable surface.
- Do not place this soundbar close to a strong magnetic field.
- Do not place the soundbar on a amplifier or receiver.
- Do not place this soundbar in a damp area as the moisture will affect the life of electric components.
- Do not attempt to clean the soundbar with chemical solvents as this might damage the finish. Wipe with a clean, dry or slightly damp cloth.

## **Preparation for Use**

### **Unpacking and Set Up:**

- Remove the Sound bar from the carton and remove all packing material from the Sound bar. Save the packing material, if possible, in case the Sound bar ever needs to be serviced or transported.
- The original carton and packing material is the only safe way to pack your Sound bar to protect it from damage in transit.
- Remove any descriptive labels or stickers on the front or top of the cabinet. Do not remove any labels or stickers from the back or bottom of the cabinet.
- Place your Sound bar on a level surface such as a table, desk or shelf, convenient to an AC power socket, out of direct sunlight, and away from sources of excess heat, dirt, dust, moisture, humidity or vibration.
- Unwind the Line cord connecting the AC adapter and extend it to its full length.

### **Protect Your Furniture:**

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture

polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement center everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the unit.

**Power Source:**

This soundbar is designed to operate in AC 220-240V 50/60Hz.


## **Pair up Soundbar with Wireless Surround Speaker and Wireless Subwoofer:**

- Connects ZEB-JUKE BAR 9560 soundbar system to power supply, soundbar system will be in standby mode: “- -” will be displayed on main soundbar, blue LED indicator on the rear of wireless surround speaker and on the top of wireless subwoofer is slowly flashing, means main soundbar now is not pairing with wireless surround speaker and wireless subwoofer.
- Press STANDBY button on main soundbar or on remote control to power on, press INPUT button to select AUX input mode.
- Press and hold PAIR button on the remote control, “SUB PAIR” will be displayed on main soundbar. Meanwhile, press and hold PAIR button on the rear of wireless surround speaker and on the rear of wireless subwoofer until you see LED indicator on the rear becomes quickly flashing, they are now in pairing mode.

- After about 20-30 seconds, the blue LED indicator on the rear of wireless surround speaker and on the top of wireless subwoofer will stop flashing and remain blue to confirm a successful pairing with the main soundbar.
- The units will now be able to pair automatically after this initial successful pair.


## Product Representation

### Sound Bar:

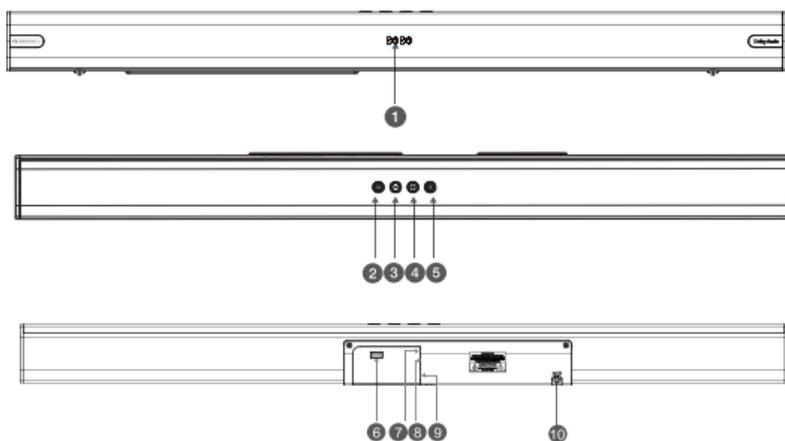


- |  |   |
|--|---|
| ① DISPLAY PANEL.   | ⑥ USB: Connect the USB flash drive to the USB port on the soundbar.     |
| ② ⏻ Standby: standby mode to power on/off.                 | ⑦ AUX: Auxiliary Audio input from Mp3/Phone/set-top box devices.        |
| ③ — Volume: Decrease the volume.                           | ⑧ OPTICAL: Connect to an optical audio output on TV or digital devices. |
| ④ + Volume: Increase the volume.                           | ⑨ TV(ARC): Connect to TV(ARC)   |
| ⑤ [Source] INPUT: Select an input source for the Soundbar. | ⑩ AC IN: Connect to power supply.                                       |

## SubWoofer:

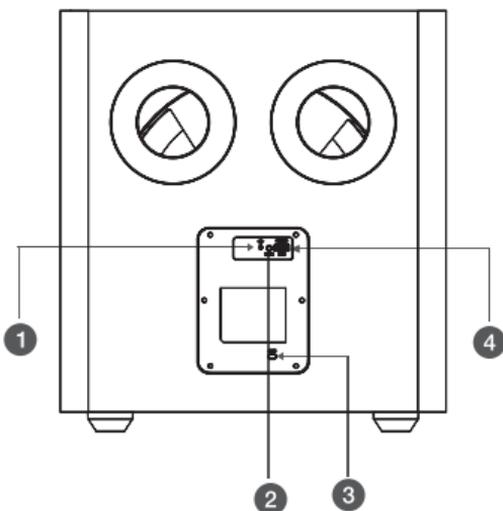


- 1 LED indicator: It indicates pairing between the soundbar to the subwoofer.
- 2 Pair: when subwoofer disconnect soundbar  
(1) press the button in short time to wake up the led  
(2) press the button more than 2 seconds for subwoofer to reconnect soundbar.
- 3 AC IN
- 4 USB Port (CAN'T PLAY ANY MUSIC, FOR SOFTWARE UPGRADE ONLY)

## Rear Satellite:

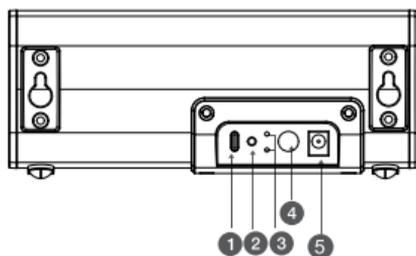

- 1 FOR UPDATE ONLY(FOR SOFTWARE UPGRADE ONLY)
- 2 Wireless Surround SL or SR out (wireless surround Channel is fixed, when end user's power socket position isn't matched, please press switch button from bottom of surround speaker to exchange channel position.)
- 3 SL/SR LED indicator
- 4 SL or SR OUT
- 5 DC IN

## Remote Control:

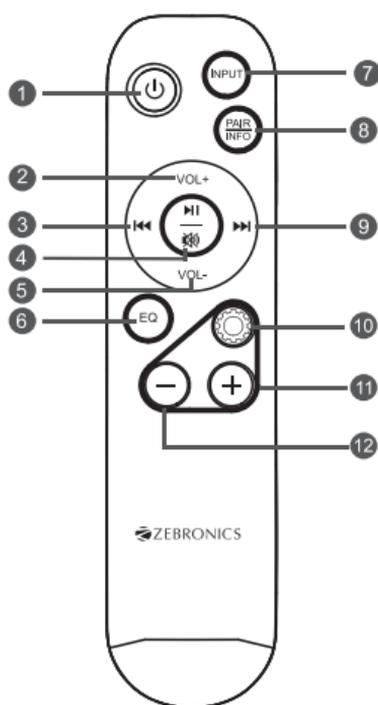


- ① : Standby mode for power on/off.
- ② Volume+: Master volume up.
- ③ Pre button: Previous track  
(Only work under USB & BT mode of smartphone)
- ④ : Play/Pause (Only work under USB & BT mode of smartphone);  
 : Press button for Mute or unmute on other modes.
- ⑤ Volume - : Master volume down.

- ⑥ EQ: Press this button in a short time to toggle EQ mode from EQ1 to EQ4; Press and hold button more than 3 seconds to toggle Surround effect ON/OFF. EQ1=MUSIC, EQ2=MOVIE, EQ3=NEWS, EQ4=SPORT
- ⑦ INPUT: Press Input button to select input source: AUX,USB, TV(ARC), Optical, Bluetooth.
- ⑧ PAIR: -On AUX mode, press and hold button more than 2 seconds for pairing wireless subwoofer to main soundbar.(If wireless subwoofer is under connection with main soundbar, there is non-function to press and hold this button on AUX mode)  
-On Bluetooth mode, press and hold button more than 2 seconds for bluetooth device pairing or reconnect last paired bluetooth device.  
INFO: Press button In short time to check signal format onTV(eARC)/ Optical mode base on device with Dolby decoder.

- ⑨ Next button: Next track.  
(Only work under USB & BT mode of smartphone)
- ⑩ : Setup. Press this button in a short time for setup to: adjust Bass level +/- (-5 to +5, 0 by default), adjust Treble level +/- (-5 to +5, 0 by default), adjust Center level +/- (-5 to +5, 0 by default), adjust Surround level
- ⑪ + : Under setup button and selects "+" increase Bass level, increase Treble level +, increase Center level +, increase Surround level +.
- ⑫ - : Under setup button and selects "-" decrease Bass level, decrease Treble level -, decrease Center level -, increase Surround level -.

## Operating range of the remote control:



- When the unit is mounted on a wall, point the remote control at the remote control sensor on the bellowed panel. The provided Remote Control allows the unit to be operated from a distance.
- Even if the Remote Control is operated within the effective range 26.2 feet (8m), remote control operation may be impossible if there are any obstacles between the unit and the remote control.
- If the Remote Control is operated near other products which generate infrared rays, or if other remote control device using infra-red rays are used near the unit, it may operate incorrectly. Conversely, the other products may operate incorrectly.

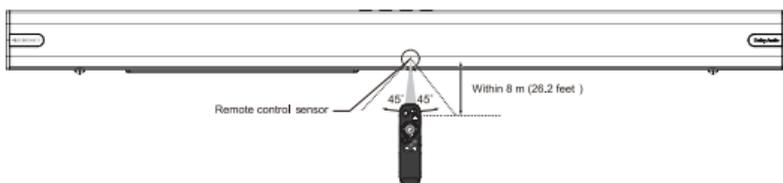

## Positioning the Sound Bar

### Place on a flat Surface:


Place the sound bar horizontally on a flat surface such as a TV unit or shelves and align it centrally with the TV screen. Allow some space between the speaker and the wall. Don't place inside a cabinet or on a walled shelf. Follow this steps for best sound output and good airflow around the sound bar.

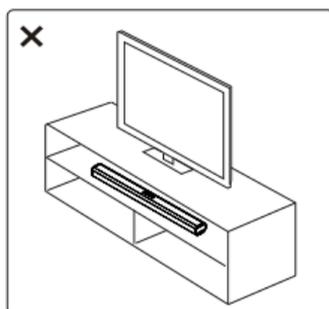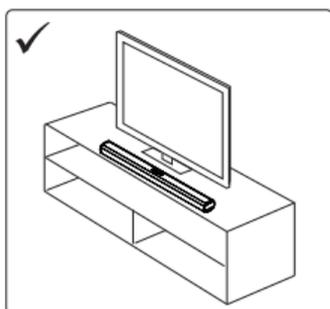

### Mount on the wall:


**WARNING :** If you don't feel confident to correctly and securely wall-mount the sound bar, Seek the assistance of an experienced person or professional.

Install the speaker on a vertical, fast, reinforced area of wall. For plaster walls, it is recommended to screw into wall studs for greater security. For optimum performance, allow at least 25mm/1" distance between the sound bar and the TV.

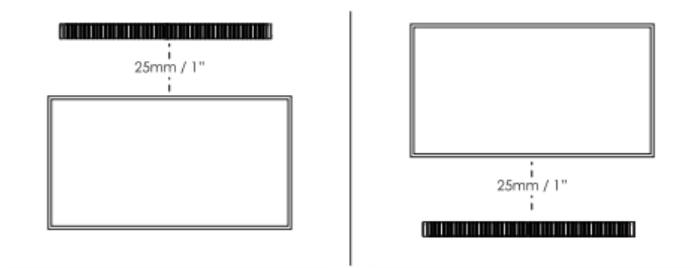


## Follow below steps to mount the sound bar on the wall:

1. Make 2 holes on the wall with distance same as the wall bracket on the soundbar.
2. Put the plastic anchors onto the wall and secure the screws to the plastic clip, do not tighten the screws all the way make sure leave some space.
3. Attached the 2 EVA pads onto the wall mount bracket. This will make sure that there is enough room between the wall and the soundbar outlet, minimum 15mm.
4. Once the screws securely fastened, hang the sound bar over by inserting the screws onto the wall mount bracket.

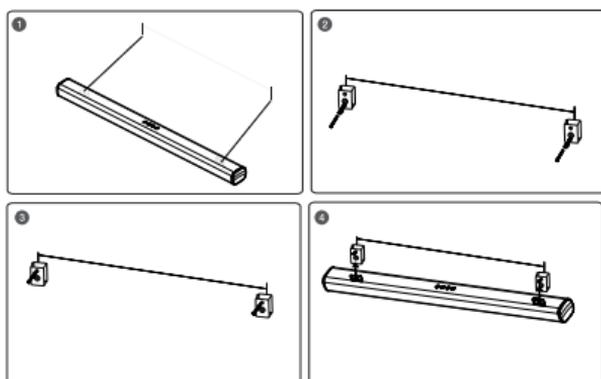

## Follow below steps to mount the surround speaker on the wall:

1. Make 2 holes on the wall with distance of two surround speakers you needed.
2. Put the plastic anchors onto the wall and secure the screws to the plastic clip, do not tighten the screws all the way make sure leave some space
3. Once the screws securely fastened, hang the surround speaker over by inserting the screws onto the wall mount bracket

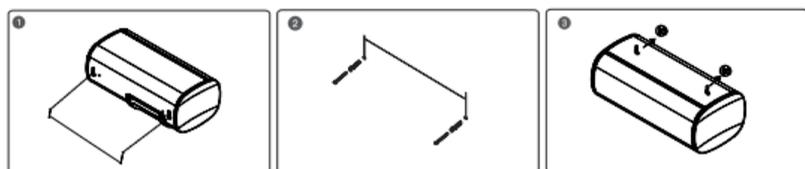

## Using the Soundbar:

- Before connecting the AC power cord, ensure you have completed all other connections.
- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Connect the mains cable to the AC IN of the unit and then into a mains socket.
- Power cord quantity and plug type vary by regions.

## **Basic Operation:**


- Plug the power cord into the mains, the display should light up.
- Switch the soundbar on by pressing the power button on the soundbar or the STANDBY button on the remote. The default input mode will appear on the display after being switched on.
- Select the input mode by pressing the INPUT button on the soundbar or by pressing the INPUT button on the remote.
- Make your selection from the following input modes:

**BT**- Bluetooth Pairing mode, **AUX** - AUX mode,  
**OPTI**- Optical mode, **ARC**- TV(ARC) mode,  
**USB** - USB mode

## **Power ON and OFF:**

- Plug in the power cord with one side to AC IN on soundbar and the other side to an AC wall outlet (see the following diagram). When you connect the soundbar to the main socket, the unit will be in STANDBY mode, firstly it will display "--".
- Switch on the soundbar by short-pressing  button on soundbar or on remote controller, the default input mode will automatically appear on display screen.

- Press and hold the  $\text{U}$  button on soundbar or on the remote controller for 2 seconds to switch it off, and then disconnect the main plug from the main socket if you want to switch the unit off completely.

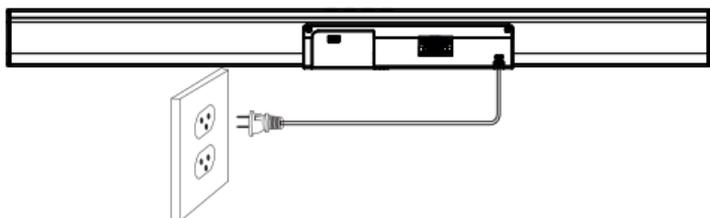

### **Auto Standby:**

1. The unit will automatically turn to standby mode when no audio input is received for 20 minutes.
2. If the TV or the external unit is disconnected, switch it off
  - To switch the unit off completely, remove the main plug from the main socket.
  - Please turn the unit off completely to save energy when not in use.

## Select Modes:

- Press the  button on the soundbar or press the INPUT button on the remote control to select the BT, AUX, OPTICAL, HDMI ARC, USB mode.
- Below are input mode names appearing in the soundbar display:
  - BT** – Bluetooth Pairing mode
  - AUX** – AUX mode,
  - OPTI** – Optical mode,
  - ARC** – TV(ARC) mode,
  - USB** – USB mode

## Playing Audio via BT Connection:

- Turn the soundbar on, press the INPUT button on the soundbar or the INPUT button on the remote control to select the Bluetooth mode. When Bluetooth is selected, "**BT**" will be displayed on the LED display and the blue LED on the soundbar will flicker followed by a double beep sound to indicate. Bluetooth pairing mode is now active.
- Turn the Bluetooth of your device on, search for "**ZEB-JukeBar 9560**" on your Bluetooth list, and then select Bluetooth connection.

- When successfully paired, you will hear a tone and the "BT" on the screen stops flickering. Then the music on your phone or other compatible device that you selected can be played on the soundbar.
- Use the volume buttons on the soundbar or on the remote controller to adjust the volume.
- The remote controller includes Bluetooth mode playback controls. Press and hold PAIR button on the remote controller for more than 2 seconds to disconnect the paired Bluetooth device or to reconnect with the previously connected Bluetooth device.
- If you wish, you can change the audio settings by using the relevant buttons on the remote controller.

**Notes:**

- In Bluetooth mode, the remote can control music play/pause or select previous or next track. PREV/NEXT/PLAY & PAUSE buttons only work in Bluetooth and USB mode; they have no function in other modes.
- The above pairing procedure doesn't need to be repeated with the same connected device once paired.

- If the connected device is switched off or manually disconnected, the soundbar will automatically enter pairing mode.
- If the connected device is moved away from wireless range (up to 10 meters) of the soundbar, then it will get disconnected, and it will successfully connect to the device once you re-enter Bluetooth range. To connect to other devices, repeat the above pairing steps.
- If a Bluetooth device has been connected before, the soundbar will connect to the last connected device. Unpair this connection to connect a new device.
- There is no automatic shutdown in pairing mode. The soundbar will remain in pairing mode even if no device is paired, so switch it off if not in use.




## Playing Audio via USB Port:

- The sound bar automatically switches to USB input mode with the LED display “USB” when a USB flash drive is inserted (this mode isn't selectable on the sound bar or remote control unless a USB flash drive is connected).
- Ensure that your USB flash drive contains MP3 audio files (other file types not supported)
- Connect the USB flash drive to the USB port on the sound bar (or your own USB extension cable connected to the USB port); music will automatically play with LED display “00:00”, when music is played on, the play time will be automatically displayed on the screen.
- Press the VOL +/- buttons to adjust the volume to your desired level.
- During playback:

	Start, pause or resume play.
	Skip to the previous or next track.

## Connections:

Satellites are interconnected with a cable and powered using a single DC adapter."

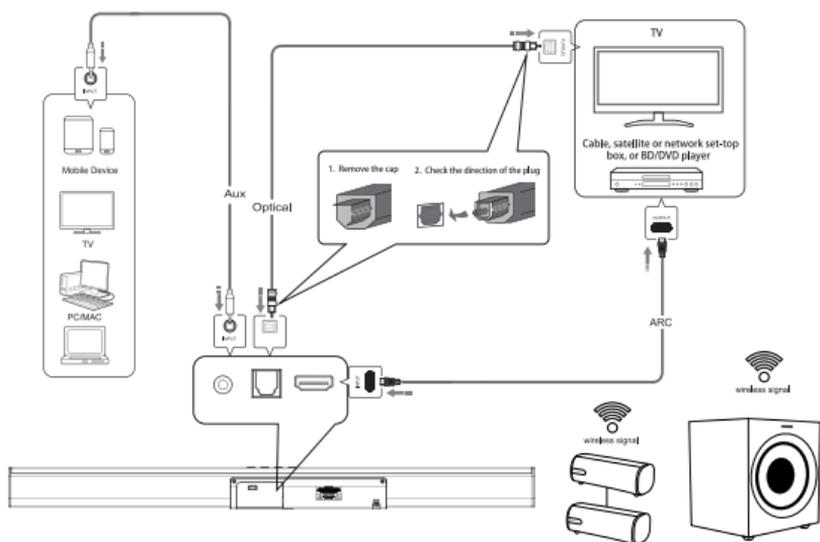

### Audio input (Aux) Connection

- Use a 3.5mm to 3.5mm audio cable to connect the PC, tablet, smartphone, TV's headphone socket to the AUX socket on the soundbar.
- Use a RCA to 3.5mm audio cable to connect the Blue Ray DVD Player / TV's audio output sockets to the AUX socket on the soundbar.
- Then short-press  the button on the soundbar or on the remote controller to switch to audio input mode with LED display lighting up **AUX**.

- In this mode, playback can only be controlled on your connected device.

### **HDMI (ARC) Mode**

- The soundbar supports HDMI (ARC) with audio return channel (ARC). You can hear the TV audio through your soundbar by using a single HDMI (ARC) cable. But on condition that your TV is ARC compliant.
- Using a high speed HDMI (ARC) cable, connect the HDMI (ARC) connector on the soundbar to the HDMI (ARC) connector on the TV. The HDMI (ARC) connector on the TV might be labeled differently. For details, see the user manual of your TV.
- When HDMI (ARC) is connected, TV soundsetting in “sound output” mode should be set as <external Dolby or Auto mode>, in addition, digital audio output mode should be set as <automatic> or <decoded output as Dolby>. When the HDMI (ARC) cable is connected, the TV digital audio output is set as Dolby or Auto mode. Then start playing music on the TV.

- Press “INPUT” button on the remote control or “STANDBY” button on soundbar to select Hd - HDMI (ARC) mode. Different TV might be different setting, please refer to your TV User Manual. Use the volume buttons to adjust the volume to your requirements.
- You can also change the audio settings by using the relevant buttons on the remote control.

**Note:**

- When connecting a device such as a TV/Set-top box/DVD/ game console with HDMI (ARC) cable, set the audio output mode of the device to Dolby or Auto mode <digital HDMI (ARC) output>.
- The TV is connected to a HDMI (ARC) port with sound bar. Different TVs might have different setup menus, but the operation approach is the same.
- If needs to connect set-up box meanwhile, please firstly connect the HDMI (ARC) connector and paired to the soundbar. Then connect the set-top box.

## **Optical Mode:**

- Connect the optical cable to the OPTICAL jack on the rear of the soundbar.
- Connect the other end of the optical cable to audio output jack on TV or other device.
- Set TV to PCM Stereo or Stereo 2.0.
- Start playing on the TV.
- Press the source input button on the soundbar or remote control to activate the corresponding mode (the OPTICAL mode) to open optical digital input of your soundbar. After successfully connected, the LED display will show OPTI. Operate your audio device directly for playback features.
- Press the VOL +/- buttons to adjust the volume to your desired level.

## **Features:**

- Multi Connectivity BT v5.3 | TV (ARC) | Optical IN | USB | AUX
- Dolby Audio
- 30.48cm Wireless Subwoofer
- Wireless Rear Satellites\*
- Soundbar with 3 Drivers
- Immersive Bass
- Wall Mountable
- LED Display

*\*Satellites are interconnected with a cable and powered using a single DC adapter.*

## Specifications:

Model	: ZEB-SBSPK C30
Driver Size	
Subwoofer	: 30.48cm
Soundbar	: [5.5cm x 8.5 cm] x 3
Satellites	: [5.3 x 9.3 cm] x 2
Impedance	
Subwoofer	: 2.5 $\Omega$
Soundbar	: 6 $\Omega$ x 3
Satellite	: 6 $\Omega$ x 2
Frequency Response	: 45Hz-20kHz
S/N Ratio	: $\geq$ 66dB
Separation	: $\geq$ 33dB
File format support (USB)	: MP3
Line Input	: 3.5mm, Optical IN & TV (ARC)
Max supported memory size (USB)	: 32GB
BT name	: ZEB-JukeBar 9560
BT version	: v5.3

## Product Dimensions (W x D x H)

Subwoofer	: 38.5 x 38.5 x 42.5 cm
Soundbar	: 96.3 x 9.4 x 7.4 cm
Satellites	: 19 x 9.4 x 7.4 cm

## Net.Weight

Soundbar	: 2.9kg
Subwoofer	: 14.4kg
Satellites	: 1.15kg
Total	: 18.45kg

## **Package Contents:**

Sound Bar	: 1 U
Subwoofer	: 1 U
Satellites	: 2 U
Remote Control	: 1 U
Input Cable	: 1 U
Wall Mount Bracket	
With Fasteners	: 1 U
QR Code Guide	: 1 U
Power Adapter	
(Satellite)	: 1 U

## Troubleshooting:

PROBLEM/TROUBLE	POSSIBLE CAUSE	SOLUTION
There is no sound output from soundbar.	Another input source is selected.	Select an appropriate input source.
	The mute function is activated.	Cancel the mute function.
	The volume of soundbar or TV/other device is adjusted too low.	Increase the volume level on soundbar or by remote control or on TV.
	The power cable of the unit is not connected properly.	Make sure that the power cable of the unit is connected to an AC wall outlet securely.
	Input jacks on a playback device are connected.	Connect the input jack on the soundbar and the output jack on the playback device.
	Signals that the soundbar cannot playback when being input.	When soundbar and TV or other devices are connected by an audio cable through HDMI eARC port output, Select the correct audio input and output. Make sure the digital audio output setting on the playback device to PCM format. Since the output format of our soundbar is PCM, if it is used, the decoding format of TV or other devices will be adjusted to PCM state.
The sound is distorted or echoed.	TV volume is not muted.	If you play audio from TV through the soundbar, make sure that the TV is muted.
The volume decreases when the unit is turned on.	The automatic volume adjustment function is activated. To prevent excessive loudness, the unit automatically controls its volume within a certain level when the unit is turned on.	Turn up the volume as required.
Noise is heard.	The soundbar is too close to another digital or high-frequency device.	Move those devices away from the sound bar.
The unit cannot be operated by using the remote control.	The unit is out of the operating range.	Use the remote control within the operating range.
	The batteries are weak.	Replace with new batteries.
	The remote control sensor of the soundbar is exposed to direct sunlight or strong lighting.	Adjust the lighting angle or reposition the soundbar. Make sure our product cannot be used in sunlight.
The TV cannot be operated by using the TV's remote control.	The unit is blocking the TV's remote control sensor.	Position the unit so that it does not obstruct the TV's remote control sensor.
A device cannot connect the soundbar or the unit cannot be connected to a Bluetooth device.	Bluetooth function of the device is not activated, not paired or connected correctly.	Restart the soundbar and try pairing again. You have not enabled the Bluetooth function of the device; see the user manual of the device on how to enable the function and correctly connected the device. The soundbar is already connected with another Bluetooth device. Disconnect the connected device, and then try again.
	Bluetooth is not selected as the input source.	Select Bluetooth as the input source.
	The unit is connected to a different Bluetooth device.	Un-pair the Bluetooth device that is currently connected and pair with the desired Bluetooth device.
	The unit is too far away from the Bluetooth device.	Move the Bluetooth device closer to this unit.
	A device emitting electromagnetic waves (such as a microwave oven, a wireless device and so on) may be placed nearby.	Do not use this unit near devices that emit electromagnetic waves.
	The Bluetooth device that you are using may not support the protocol.	Use a Bluetooth device that supports the protocol.
	The connection profile registered in the Bluetooth device may not be functioning correctly for some reason.	Delete the connection profile in the Bluetooth device and then connect the Bluetooth device to this unit.

ISO 9001:2015 Certified Company  
www.zebronics.com