

 ZEBRONICS



Soundbar

ZEB **SONATA 1**



User Manual

www.zebronics.com

Important Safety Instruction

Thank you for purchasing the **ZEB-SONATA 1** Soundbar. Please read this user manual carefully and keep for future reference.

Warning



Caution:

- To reduce the risk of electric shock, do not dismantle the product and do not expose the apparatus to rain or moisture. No user-serviceable parts inside.
- Refer servicing to qualified personnel only.



The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.



Important! This symbol alerts you to read and observe important warnings and instructions on the unit or in this manual.

Notice:

1. To prevent possible hearing damage, do not listen at high volume levels for long time periods or a sudden high volume level.

2. Never use the device unsupervised! Switch off the device whenever you are not using it, even if not using it only for a short while.

3. This unit is not intended to be operated by means of an external timer or separate remote control system.

4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



5. Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
6. The unit should not be impeded by covering the ventilation opening with items such as newspaper, table-cloths, curtains etc. Make sure that there are at least 20 cm of space above and at least 5 cm of space on each side of the unit.
7. The unit must not be exposed to dripping or splashing liquid, no objects filled with liquids such as vases, should be placed on the unit.
8. To prevent fire or shock hazard, do not expose to direct heat, rain, moisture or dust.
9. Do not position this unit near any water sources e.g. taps, bathtubs, washing machines or swimming pools. Ensure that you place the unit on a dry, stable surface.
10. Do not place this unit close to a strong magnetic field.
11. Do not place the unit on a amplifier or receiver.
12. Do not place this unit in a damp area as the moisture will affect the life of electric components.
13. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Wipe with a clean, dry or slightly damp cloth.
14. When removing the power plug from the wall outlet, always pull directly on the plug,

never pull on the cord.

15. Depending on the electromagnetic waves used by a television broadcast, if a TV is turned on near this unit while it is also on, lines might appear on the LED TV. Neither this unit nor the TV is malfunctioning. If you see such lines, keep this unit well away from the TV set.

16. Clean only with dry cloth.

17. Only use attachments / accessories specified by the manufacturer.

Important Notes


- Safety and operating instruction manual should be retained for future reference.
- Do not attempt to remove any screws, or open the casing of the unit; there are no user serviceable parts inside. Refer all servicing to qualified service personnel.

Power Source:

This soundbar is designed to operate in AC 220V-240V 50/60Hz.

Product Representation


Sound Bar

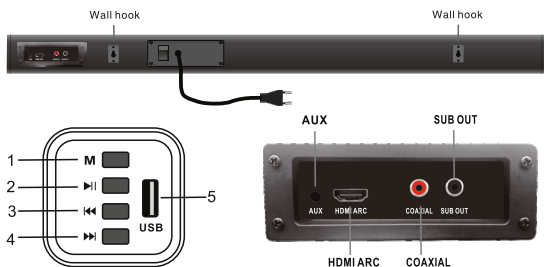

1. MODE
3. PREVIOUS/VOL-
5. USB

2. PLAY/PAUSE
4. NEXT/VOL+

Remote Control

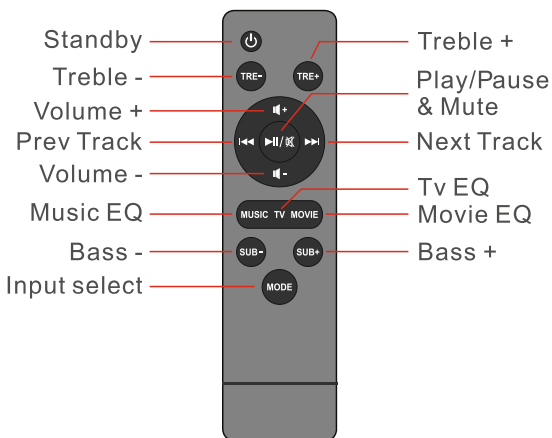

Playing Audio via BT Connection

1. Turn on sound bar and then short-press the mode button to switch to BT and the LED will show **BLUE**
2. Activate the pairing function on your phone or other compatible device and select "**ZEB-SONATA 1**".
3. When successfully paired, you will hear a tone and the LED Display will stay on.
4. The remote control includes BT mode playback controls.

Playing Audio via USB Port

The sound bar automatically switches to USB input mode when a USB flash drive is inserted and starts playing the tracks automatically.

***Note** : This mode isn't selectable on the sound bar or remote control unless a USB flash drive is connected.*

Audio Input (AUX) Connection

1. Connect the sound bar to your PC, tablet, smartphone, TV or other device using the included audio cable.
2. In this mode, playback can only be controlled on your connected device.

TV (ARC) Mode

1. The Soundbar supports TV with Audio Return Channel (ARC). If your TV is TV ARC compliant, you can hear the TV audio through

your Soundbar by using a single TV cable

- Using a High Speed TV cable, connect the TV (ARC) connector on the soundbar to the TV ARC connector on the TV. The TV ARC connector on the TV might be labelled differently. For details, see the TV user manual.

Coaxial Mode

Use this operating mode to play music from the Coaxial digital input for example from a TV Coaxial OUT to the soundbar Coaxial IN. (TV must have Coaxial output)

1. Connect the Coaxial cable between the soundbar and TV.

2. Switch to Coaxial input mode and start playing content on TV.

3. You can use the volume buttons to adjust the volume as per your requirements.

Features:

BT v5.0 | TV (ARC) | Coaxial IN | USB | AUX

10.16cm Subwoofer

Soundbar with Dual Drivers

Wall Mountable

LED Display

Remote Control

Specifications

Output Power (RMS)

Subwoofer : 40W

Soundbar : 16W x 2

Total : 72W

Driver Size

Subwoofer : 10.16 cm x 1

Soundbar : 5.08 cm x 2

Impedance

Subwoofer : 4Ω

Soundbar : 4Ω

Frequency Response : 60Hz-18kHz

S/N Ratio : ≥78dB

Separation : ≥38dB

File Format Support : MP3 (USB)

Line Input : 3.5mm, Coaxial IN,
TV (ARC)

Max Supported

Memory Size (USB) : 64 GB

BT Name : ZEB-SONATA 1

BT Version : 5.0

Product Dimension (W x D x H)

Subwoofer : 18.5 x 18.5 x 25 cm

Soundbar	: 80 x 6 x 6 cm
Net. Weight	
Subwoofer	: 1.8 kg
Soundbar	: 1.05 kg
Total	: 2.85 kg

ISO 9001:2015 Certified Company
www.zebronics.com

