 




Soundbar With Wireless Subwoofer

**NEW** **JUKE BAR**  
**6100**  
**DWS PRO**

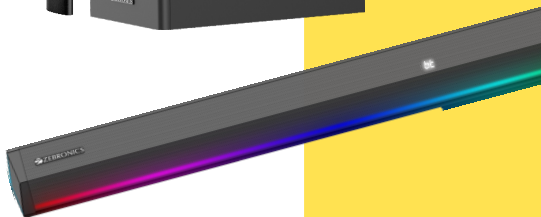

**User Manual**

[www.zebronics.com](http://www.zebronics.com)

## Important Safety Instruction

Thank you for purchasing the **ZEB-JUKE BAR 6100 DWS PRO** Soundbar. Please read this user manual carefully and keep for future reference.

### Warning



#### Caution:

- To reduce the risk of electric shock, do not dismantle the product and do not expose the apparatus to rain or moisture. No user-serviceable parts inside.
- Refer servicing to qualified personnel only.



The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.



Important! This symbol alerts you to read and observe important warnings and instructions on the unit or in this manual.

**Notice:**

1. To prevent possible hearing damage, do not listen at high volume levels for long time periods or a sudden high volume level.



2. Never use the device unsupervised! Switch off the device whenever you are not using it, even if not using it only for a short while.

3. The appliance is not intended to be operated by means of an external timer or separate remote control system.

4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

5. Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
6. The unit should not be impeded by covering the ventilation opening with items such as newspaper, table-cloths, curtains etc. Make sure that there are at least 20 cm of space above and at least 5 cm of space on each side of the unit.
7. The apparatus must not be exposed to dripping or splashing liquid, no objects filled with liquids such as vases, should be placed on the apparatus.
8. To prevent fire or shock hazard, do not expose this equipment to direct heat, rain, moisture or dust.
9. Do not position this unit near any water sources e.g. taps, bathtubs, washing machines or swimming pools. Ensure that you place the unit on a dry, stable surface.
10. Do not place this unit close to a strong magnetic field.
11. Do not place the unit on a amplifier or receiver.
12. Do not place this unit in a damp area as the moisture will affect the life of electric components.
13. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Wipe with a clean, dry or slightly damp cloth.

14. When removing the power plug from the wall outlet, always pull directly on the plug, never pull on the cord.

15. Depending on the electromagnetic waves used by a television broadcast, if a TV is turned on near this unit while it is also on, lines might appear on the LED TV. Neither this unit nor the TV is malfunctioning. If you see such lines, keep this unit well away from the TV set.

16. The mains plug is used to disconnect the device, the disconnected device should remain readily operable.

### **Important Safety Instructions**

1. Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.

2. Do not use this apparatus near water.

3. Clean only with dry cloth.

4. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

5. Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.

6. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles or at the point where they exit from the apparatus.

7. Only use attachments/accessories

specified by the manufacturer.

8. Unplug this apparatus during lightning storms or when unused for long periods of time.

9. Refer all servicing to qualified service personal. Servicing is required when the apparatus has been damage in any way, for example, when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

10. The AC plug is used to disconnect the device, the disconnected device should remain readily operable. In order to disconnect the apparatus from the AC power completely, the AC plug must be removed from the AC outlet completely.

### **Important Notes**

- Safety and operating instruction manual should be retained for future reference.
- The apparatus should not be exposed to dripping, splashing or placed in a humid atmosphere such as a bathroom.
- Do not install the product in the following areas:
  - Places exposed to direct sunlight or close to radiators.
  - On top of other stereo equipment that radiate too much heat -Blocking

ventilation or in a dusty area.

 
- Areas where there is constant vibration.
- Humid or moist places.
- Do not place near candles or other flames.
- Operate the product only as instructed in this manual.
- Before turning on the power for the first time, make sure the sound bar is plugged to power outlet.
- For safety reasons, do not remove any covers or attempt to gain access to the inside of the product. Refer any servicing to qualified personnel.
- Do not attempt to remove any screws, or open the casing of the unit; there are no user serviceable parts inside. Refer all servicing to qualified service personnel.

### **Power Source:**

 
This soundbar is designed to operate in 220V-240V~50Hz/60Hz.

# Product Representation

## Sound Bar & Sub-Woofer

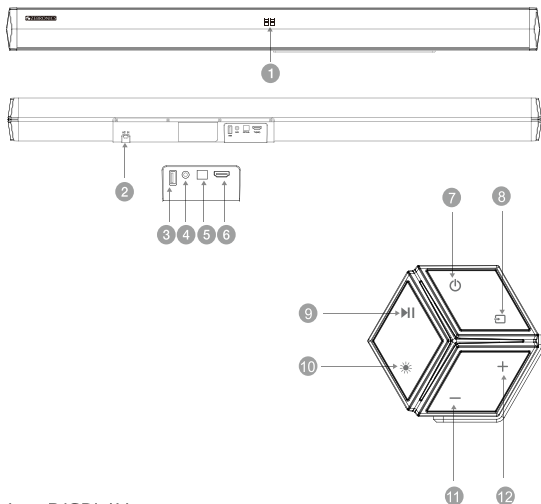




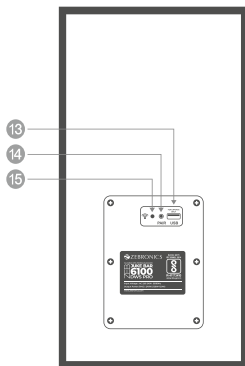



 1. DISPLAY
2. AC IN
3. USB
4. AUX
5. OPTICAL
6. HDMI (ARC)
7. POWER / STANDBY
8. MODE INPUT
9. PLAY / PAUSE
10. LED MODE BUTTON
11. VOL-
12. VOL+
13. PAIRING INDICATOR
14. PAIR BUTTON
15. USB (FOR UPDATE ONLY)

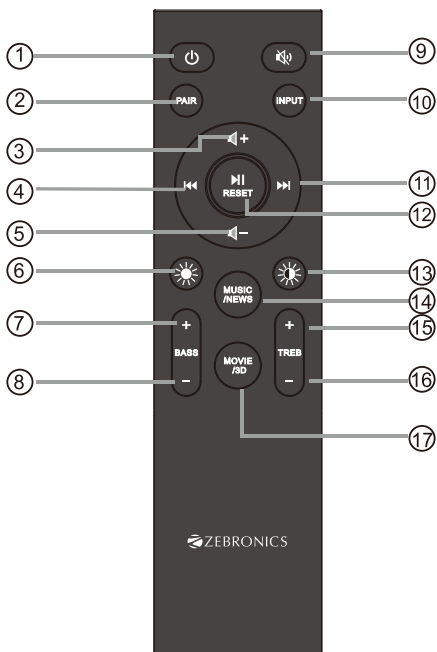



# Remote Control

 
 


1.  : Standby mode for power on/off.
2. PAIR : Unpair the connected BT device from the soundbar.  
Reset : Press and hold the button more than 3 sec. to Set all functions to manufacturer defaults.
3. VOL+ : Master Volume Increase.
4.  : Previous Track (Only work under USB & BT Mode).
5. VOL- : Master Volume Decrease.
6.  Light control key :  
Short press : Switch the LED light effect  
Long press : On-off LED light effect
7. Bass + : Bass Volume Increase.
8. Bass - : Bass Volume Decrease.
9. MUTE : Mute Mode.
10. INPUT : Input mode(AUX/USB/HDMI(ARC)/OPT/BT)
11.  : Next Track (Only work under USB & BT mode).
12.  : Play/Pause  
(Only work under USB and BT mode).  
RESET/PLAY : (Reset EQ and volume in any mode)
13.  Lighting Adjustment : Press down 50%, Press down 20%, Press down 10%.
14. MUSIC/NEWS: Select the MUSIC/NEWS EQ effect.
15. TR+ : Treble Volume Increase.
16. TR- : Treble Volume Decrease.
17. MOVIE/3D : Select the MOVIE/3D EQ effect.

## Positioning the Sound Bar

### Place on a flat Surface


Place the sound bar horizontally on a flat surface such as a TV unit or shelves and align it centrally with the TV screen. Allow some space between the speaker and the wall. Don't place inside a cabinet or on a walled shelf. Follow this guidance for best sound output and good airflow around the sound bar.

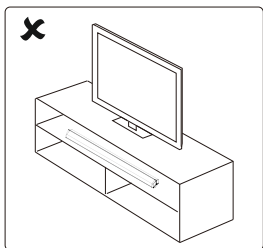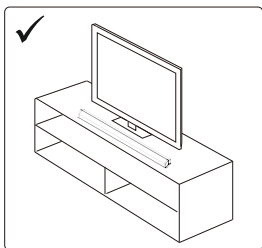

### Mount on the wall



**WARNING :** If you don't feel confident to correctly and securely wall-mount the sound bar, Seek the assistance of an experienced person or professional.


 
Install the speaker on a vertical, fast, reinforced area of wall. For plaster walls, it is recommended to screw into wall studs for greater security. For optimum performance, allow at least 25mm/1" distance between the sound bar and the TV.

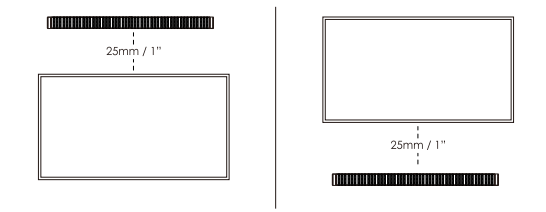

## Follow below steps to mount the sound bar on the wall

    1. Make 2 holes on the wall with distance same as the wall bracket on the soundbar
2. Put the plastic anchors onto the wall and secure the screws to the plastic clip, do not tighten the screws all the way make sure leave some space
3. Attached the 2 EVA pads onto the wall mount bracket. This will make sure that there is enough room between the wall and the soundbar outlet, minimum 15mm
4. Once the screws securely fastened, hang the sound bar over by inserting the screws onto the wall mount bracket

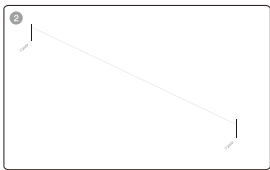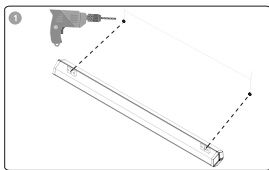

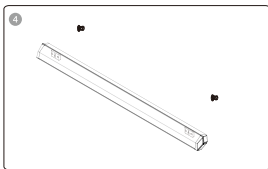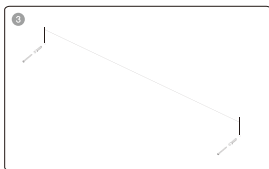

## Pair Up with the Subwoofer

Plug the soundbar and the subwoofer into the mains sockets at the same time

1. Press "STANDBY" to turn the soundbar on after it has been connected to the AC. Then press "INPUT" to select Bluetooth (BT) as the input mode. This will cause the soundbar to enter into pairing mode with the wireless subwoofer.

 
2. Switch the subwoofer on. The blue LED will blink slowly indicating the unit has power but needs to be paired with the soundbar. Press and hold the PAIR (AUTO PAIR BUTTON), the blue LED will flash quickly indicating they are now in pairing mode.

3. After about 20-30 seconds, the blue LED of the subwoofer will stop flashing and remain blue to confirm a successful pairing with the soundbar.

4. The units will now be able to pair automatically after this initial successful pair, even if they are switched off and on.

5. If you want to pair your ZEB-JUKE BAR 6100DWS PRO wireless subwoofer with

another ZEB-JUKE BAR 6100DWS PRO soundbar, please repeat step 1 to step 4 above. Ensure the soundbar you want to pair the subwoofer which is turned on and in range.

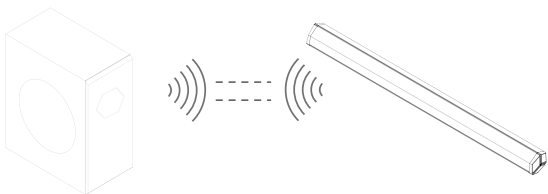

## OPERATE INSTRUCTIONS

 
### Setting the Soundbar

 
1. Plug in the power cord and the display will light up (Standby mode)
2. Switch on the soundbar by using power button on soundbar or by using STANDBY button on remote.
3. Input mode can be changed by pressing the INPUT button on remote
4. Below are input mode names appearing in the soundbar display:

bt	: BT Mode		AUX	: AUX Mode
Hd	: HDMI (ARC) Mode		OP	: Optical mode
US	: USB Mode			

### Powering On/Off

1. When you connect with the soundbar to the power ,the screen goes into standby mode. Press the Power/Standby key and the soundbar will enter the mode selection.The LED light sources on both sides light up. Press the INPUT key to select the mode you want.
2. Short press the breathing LED light button on the remote control and choose the colour to you like.



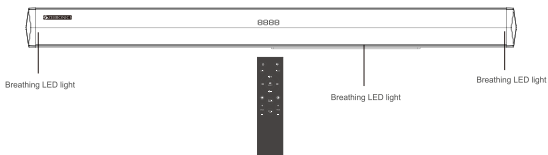

	<p><b>MODE 1:</b> Constant lighting/Constant red on/Constant green on/Constant blue on/Constant white on/Constant yellow on/Constant purple on/Constant pink on/Constant orange on, 7 colors auto-loop (each color for 2 secs)</p>
	<p><b>MODE 2:</b> Breathing light mode/Red breathing light/Green breathing light/Blue breathing light/White breathing light/Yellow breathing light/Purple breathing light/Pink breathing light/Orange breathing light, colors breathing mode auto-loop</p>
	<p><b>MODE 3:</b> Colorful running mode / Red / Green / Blue / White / Yellow / Purple / Pink / Orange, Colorful running mode auto-loop</p>
	<p><b>MODE 4:</b> Monochromatic waves mode/L red &amp; R green /L green &amp; R blue/L white &amp; R purple /pink &amp; R orange/L yellow &amp; R pink/L purple &amp; R white.</p>
	<p><b>MODE 5:</b> Rippling mode / Red / Green / Blue / White / Yellow / Purple / Pink / Orange, kinds rippling auto-loop</p>
	<p><b>MODE 6:</b> Colorful fluctuation</p>
	<p><b>MODE 7:</b> Colorful rippling</p>
	<p><b>MODE 8:</b> Colorful rolling mode---- frequency flashing lamp (flashing with music frequency)</p>
	<p><b>MODE 9:</b> Colorful flashing from middle to sides</p>
	<p><b>MODE 10:</b> Colorful flashing from sides to middle</p>



## Playing Audio via BT Connection

- 1 Turn on the sound bar and then short-press the "INPUT" button on sound bar or remote controller to switch it to BT mode and LED display on the sound bar will flicker in the Bluetooth pairing mode.
2. Activate the pairing function on your phone or other compatible device and select "**ZEB-JUKE BAR 6100 DWS PRO**" by BT connection.
3. When successfully paired, you will hear a tone and LED display will turn on "bt" and stop flickering. Then music that you selected can be played on the sound bar.
4. The remote controller includes BT mode playback controls.

### Notes:

- *If your pairing device switched off or manual disconnected, the sound bar will automatically enter pairing mode.*
- *If the connected device is switched off or manual disconnected, the sound bar will automatically enter pairing successfully connected device will be re-established once you re-enter wireless range (10 meters). to connect to other devices, repeat the above pairing steps*



## Playing Audio via USB Port

The sound bar automatically switches to USB input mode with the LED display “U5” when a USB flash drive is inserted (this mode isn't selectable on the sound bar or remote control unless a USB flash drive is connected).

1. Ensure that your USB flash drive contains MP3 audio files (other file types not supported)
2. Connect the USB flash drive to the USB port on the sound bar (or your own USB extension cable connected to the USB port); music will automatically play.
3. The remote control includes USB input mode playback controls.

## Audio Input (AUX) Connection

Connect the sound bar to your PC, tablet, smartphone, TV, or other device using the included audio cable short-press the multi-function button to switch to audio input mode with the LED Display lit up (AU)

1. In this mode, playback can only be controlled on your connected device

**Note:** For some computers, you may need to access the audio control panel to manually set the sound bar as below picture.



 
## **HDMI (ARC) Mode**

1. The soundbar supports HDMI (ARC) with audio return channel (ARC). You can hear the TV audio through your soundbar by using a single HDMI (ARC) cable. But on condition that your TV is ARC compliant.
2. Using a high speed HDMI (ARC) cable, connect the HDMI (ARC) connector on the soundbar to the HDMI (ARC) connector on the TV. The HDMI (ARC) connector on the TV might be labeled differently. For details, see the user manual of your TV.
3. When HDMI (ARC) is connected, TV sound setting in "sound output" mode should be set as <external PCM Stereo>, in addition, digital audio output mode should be set as <automatic> or <decoded output as PCM state>. When the HDMI (ARC) cable is connected, the TV digital audio output is set as PCM format. Then start playing music on the TV.
4. Press "INPUT" button on the remote control or "STANDBY" button on soundbar to select Hd-HDMI (ARC) mode. Different TV might be different setting, please refer to your TV User Manual.
5. Use the volume buttons to adjust the volume to your requirements.
6. You can also change the audio settings by using the relevant buttons on the remote control.

**Note:** 1. When connecting a device such as a TV/Set-top box/DVD/ game console with HDMI (ARC) cable, set the audio output mode of the device to PCM mode <digital HDMI (ARC) output>.

2. The TV is connected to a HDMI (ARC) port with sound bar. Different TVs might have different setup menus, but the operation approach is the same.

3. If needs to connect set-up box meanwhile, please firstly connect the HDMI (ARC) connector and paired to the soundbar. Then connect the set-top box.

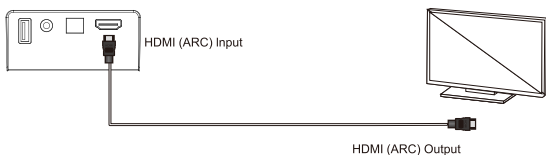

## Optical Mode

Check the direction of the plug. Connect the soundbar and TV with the optical cable.

In TV sound settings, select the soundbar optical connection (output for audio). When the optical cable is connected, the TV audio output is set to PCM format.

The TV must have an optical digital output. Use the supplied optical cable to make the connection as follows:

1. Connect the optical cable to the optical digital output of your TV.

2. Connect the optical cable to the optical digital input of your soundbar.

3. Switch on the TV set and the soundbar. Set the connected TV to "PCM Stereo". Set the audio output mode as <automatic> or <decoded output as PCM state>.

4. Start playing on the TV.

 
5. Press "INPUT" button on the remote control to select  - OPTICAL mode.

6. Use the volume buttons to adjust the volume to your requirements.

7. You can also change the audio settings by using the relevant buttons on the remote control.

**Note :** 1. When connecting a device such as a TV/Set-top box/ DVD/ game console with optical cable, set the audio output mode of the device to PCM mode (digital optical output).

2. Do not bend the optical cable, otherwise the cable inside will be damaged.

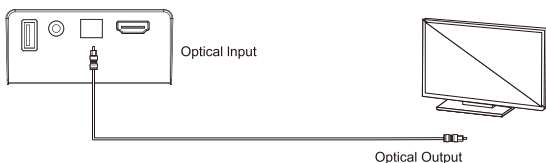

## Features:

Wireless BT / USB / AUX / Optical / HDMI (ARC)

16.51 cm Subwoofer

Remote Control

Wireless Subwoofer

LED Display

Wall Mountable

Volume/Media Control

Virtual 5.1

RGB LED Lights

## Specifications

Output Power (RMS)

Subwoofer : 170 watts

Soundbar : 170 watts

Total : 340 watts

Driver Size

Subwoofer : 16.51 cm x 1

Soundbar : (5.5 x 8.5 cm) x 4

Impedance

Subwoofer : 3Ω

Soundbar : 3Ω

Frequency response : 20Hz-20kHz

S/N Ratio : ≥65dB

Separation : ≥45dB

File format support : MP3 (USB)

Line input : 3.5mm, Optical IN,  
HDMI (ARC)

Max supported

memory size (USB) : 32 GB

BT name : ZEB-JUKE BAR 6100  
DWS PRO

BT version : 5.0

Product Dimension (W x D x H)

Subwoofer : 19 x 30.6 x 36.7 cm

Soundbar : 96 x 7.8 x 8.8 cm

Net. Weight

Subwoofer : 4.25 kg

Soundbar : 2.25 kg

Total : 6.5 kg

## Troubleshooting

PROBLEM/TROUBLE	POSSIBLE CAUSE	SOLUTION
There is no sound output from sound bar.	Another input source is selected.	Select an appropriate input source.
	The mute function is activated.	Cancel the mute function.
	The volume of sound bar or TV/other device is adjusted too low.	Increase the volume level on sound bar or by remote control or on TV.
	The power cable of the unit is not connected properly.	Make sure that the power cable of the unit is connected to an AC wall outlet securely.
	Input jacks on a playback device are connected.	Connect the input jack on the sound bar and the output jack on the playback device.
The sound is distorted or echoed.	TV volume is not muted.	If you play audio from TV through the sound bar, make sure that the TV is muted.
The sound is distorted or echoed.	TV volume is not muted.	If you play audio from TV through the sound bar, make sure that the TV is muted.
The volume decreases when the unit is turned on.	The automatic volume adjustment function is activated. To prevent excessive loudness, the unit automatically controls its volume within a certain level when the unit is turned on.	Turn up the volume as required.
Noise is heard.	The sound bar is too close to another digital or high-frequency device.	Move those devices away from the sound bar.
The unit cannot be operated by using the remote control.	The unit is out of the operating range.	Use the remote control within the operating range.
	The batteries are weak.	Replace with new batteries.
	The remote control sensor of the sound bar is exposed to direct sunlight or strong lighting.	Adjust the lighting angle or reposition the sound bar. Make sure our product cannot be used in sunlight.
The TV cannot be operated by using the TV's remote control.	The unit is blocking the TV's remote control sensor.	Position the unit so that it does not obstruct the TV's remote control sensor.
A device cannot connect the sound bar or the unit cannot be connected to a Bluetooth device.	Bluetooth function of the device is not activated, not paired or connected correctly.	Restart the sound bar and try pairing again. You have not enabled the Bluetooth function of the device; see the user manual of the device on how to enable the function and correctly connected the device. The sound bar is already connected with another Bluetooth device. Disconnect the connected device, and then try again.
	Bluetooth is not selected as the input source.	Select Bluetooth as the input source.
	The unit is connected to a different Bluetooth device.	Un-pair the Bluetooth device that is currently connected and pair with the desired Bluetooth device.
	The unit is too far away from the Bluetooth device.	Move the Bluetooth device closer to this unit.
	A device emitting electromagnetic waves (such as a microwave oven, a wireless device and so on) may be placed nearby.	Do not use this unit near devices that emit electromagnetic waves.
	The Bluetooth device that you are using may not support the protocol.	Use a Bluetooth device that supports the protocol.

PROBLEM/TROUBLE	POSSIBLE CAUSE	SOLUTION
	The connection profile registered in the Bluetooth device may not be functioning correctly for some reason.	Delete the connection profile in the Bluetooth device and then connect the Bluetooth device to this unit.
Sound quality of audio play from a connected Bluetooth device is poor and connection is not stable.	The Bluetooth reception is poor.	Move the device closer to the sound bar, or remove any obstacle between the device and the sound bar.
No sound can be heard or sound breaks (Bluetooth mode)	The volume on the Bluetooth device may be too low.	Raise the volume on the Bluetooth device.
	Bluetooth is not selected as the input source.	Select the Bluetooth as the input source.
	Playback on the device has not been performed.	Perform playback on the device.
	The sound output on the Bluetooth device may not be set to this unit.	Select this unit as the output device on the Bluetooth device.
	The connection to the Bluetooth device was cut off.	Connect with the Bluetooth device one more time.
	The unit may be too far away from the Bluetooth device.	Move the Bluetooth device near this unit.
	A device emitting electromagnetic waves (such as a microwave oven, a wireless device and so on) may be placed nearby.	Do not use this unit near device that emit electromagnetic waves.
There is no sound from sound bar - HDMI TV (ARC) Mode	No qualified HDMI TV (ARC) cable is used & No signal is input on sound bar & connection and operation method is not correct.	<ol style="list-style-type: none"> <li>1. Make sure that the user connected TV and sound bar by a 19-core HD ARC cable.</li> <li>2. The sound bar and TV are connected through TV (ARC) port output; make sure that the TV is ARC compliant.</li> <li>3. Set the TV to HDMI ARC (CEC). Set the audio output mode of TV to PCM format. (Or refer to your TV user manual)</li> </ol>
There is no sound from sound bar (OPTICAL Mode)	OPTICAL cable maybe damaged & No signal is input on sound bar & connection and operation method is not correct.	<ol style="list-style-type: none"> <li>1. Replace the OPTICAL cable with a new one to connect.</li> <li>2. Set your TV audio output to PCM format. (Pls refer to your TV user manual)</li> </ol>
There is no sound from sound bar (USB mode)	USB file type is not support & Sound bar doesn't switch to USB input mode automatically when USB is inserted.	Make sure that USB flash drive contains MP3 files because other file types are not supported. Switch the input mode once again, then playback again.
Disconnected between subwoofer and sound bar	Connection is not correct between subwoofer and sound bar	<ol style="list-style-type: none"> <li>1. Turn off sound bar and subwoofer by removing the AC plug from the socket.</li> <li>2. Make sure that sound bar and subwoofer are connected to the electricity power at the same time and switch on sound bar and subwoofer again.</li> <li>3. Press and hold the subwoofer's rear plate WPS button to reset the connection, so that the sound bar and subwoofer can be reconnected again.</li> </ol>

**ISO 9001:2015 Certified Company**  
**www.zebronics.com**

