



# Trolley Speaker

ZEB-100 MOVING MONSTER X8L



## User Manual

[www.zebronics.com](http://www.zebronics.com)

Thank you for purchasing Zebronics Speaker. Please read this user manual carefully before operation & save it for future reference.

**Note:**

- Avoid the use of this speaker at the high-temperature and high humidity environment.
- Avoid self-disassemble of speaker, or it will result in the failure of warranty.

**Features:**

Trolley speaker

Wireless BT / USB / Micro SD / FM /

AUX / Mic Input

Recording function

Karaoke function

LED display

LED lights with On/Off switch

20.3cm full range speaker

Remote control

Wireless Mic

Phone/Tablet holder

Built-in rechargeable battery

Volume & Bass controls

Karaoke function

## Specification:


Output power	: 24W
Driver size	
Full range	: 20.32cm x 1
Tweeter	: 2.5cm x 1
Impedance	
Full range	: 3Ω
Tweeter	: 6Ω
Frequency response	: 80Hz-18kHz
S/N Ratio	: ≥60dB
File format support	: MP3, WMA, WAV
Line input	: 3.5mm
Max. supported USB/mSD	
Memory size	: 32GB
FM frequency range	: 87.5 MHz-108 MHz
Charging time	: 3h
Playback time	: 6h*
BT name	: ZEB-100 MOVING MONSTER X8L
BT version	: 4.2
Product dimension	
(W x D x H)	: 264 x 210 x 413 mm
Net. weight	: 2.9kg

*\* at 50% volume (LED off)*

## Package Contents:


Trolley speaker	: 1 U
Remote control	: 1 U
Wireless Mic	: 1 U
Microphone Clamp	: 1 U
QR code guide	: 1 U
Input cable	: 1 U
Power cord	: 1 U

## Control Description

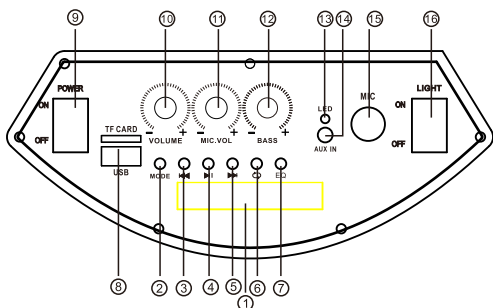

- |                                  |                           |
|----------------------------------|---------------------------|
| 1. LED display                   | 9. On-Off switch          |
| 2. Mode change key               | 10. Master Volume control |
| 3. Previous Track/FM channel key | 11. Mic volume control    |
| 4. Play/Pause key                | 12. Bass control          |
| 5. Next Track/FM channel key     | 13. LED indicator         |
| 6. Repeat key                    | 14. AUX IN                |
| 7. Equalizer preset              | 15. Microphone jack       |
| 8. Micro SD & USB Slot           | 16. LED On-Off switch     |

## Remote Control

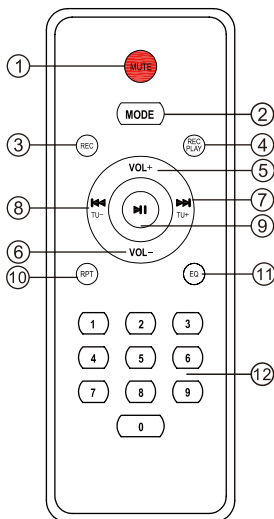

1. Mute/Unmute
2. Mode Change Key
3. Recording
4. Play Recorded File Key
5. Volume +
6. Volume -
7. Next Track/FM Channel Key
8. Previous Track/FM Channel Key
9. Play/Pause Key
10. Repeat Key
11. EQ Preset
12. Numeric Selection (0-9)

## **General Instructions**

### **BT connectivity**

Switch the speaker to BT mode, scan for nearby BT devices in your mobile. Tap on **ZEB-100 MOVING MONSTER X8L** to connect.

### **USB/Micro SD Mode**

Insert the USB/Micro SD card to the speaker. The speaker will detect the USB/Micro SD card automatically & the songs from it will be played.

### **FM Radio**

Switch the speaker to FM, In FM Mode, long Press the Play/Pause Key to scan the available FM channels. Once the scanning is done, The speaker will start playing the first scanned channel.

### **AUX-In**

The speaker can be connected to an audio device using a 3.5mm cable. Connect the one end of the cable to the speaker & connect the other end of the cable to an audio source. The songs from the audio source can be heard through the speaker.

## **Recording Function**

To record a voice, first plug-in a USB/Micro SD card into the speaker which will act as a storage device. Press the REC. key on the remote to start/stop recording. Once the song or voice is recorded through the mic, press the REC. PLAY key to play the recorded file.

*Note: Speaker can record the Mic input*

## **Charging Indication:**

Low Charge : Red LED Flashing

Full Charge : Red LED Glows

**ISO 9001:2015 Certified Company**

**[www.zebronics.com](http://www.zebronics.com)**

