



ZEBRONICS
ALWAYS AHEAD

Trolley Speaker
ZEB-101 MOVING MONSTER X8L



User Manual
www.zebronics.com

Thank you for purchasing Zebronics Speaker. Please read this user manual carefully before operation & save it for future reference.

Note:

- Avoid the use of this speaker at the high-temperature and high humidity environment.
- Avoid self-disassemble of speaker or it will result in the failure of warranty.

Features:

Wireless BT / USB /
Micro SD / FM /
AUX / Mic Input
Recording function
LED Display
LED Lights with On/Off switch
20.3cm full range speaker
Remote control
Wireless Mic
Built-in rechargeable battery
Karaoke function


Specification:

Output power	: 24W
Driver size	
Full range	: 20.3cm
Tweeter	: 2.5cm
Impedance	
Full range	: 3Ω
Tweeter	: 8Ω

Frequency response	: 80Hz-18kHz
S/N Ratio	: ≥60dB
File format support (USB/mSD)	: Mp3, WMA, WAV
Line input	: 3.5mm
Max. supported USB/mSD memory size	: 32GB
FM frequency range	: 87.5 MHz - 108 MHz
Charging time	: 5 H
Playback time	: 6 H*
BT Name	: ZE


**at 50% volume*

Control Description

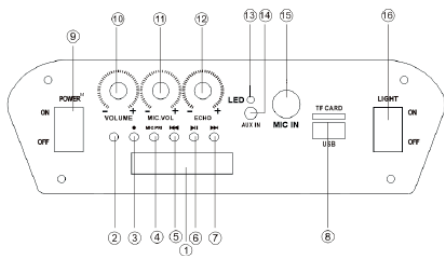

- | | |
|----------------------------------|---------------------------|
| 1. LED Display | 9. On - off Switch |
| 2. Mode Change Key | 10. Master Volume Control |
| 3. Record | 11. Mic Volume Control |
| 4. MIC Priority | 12. Echo Control |
| 5. Previous Track/FM Channel Key | 13. LED Indicator |
| 6. Play/Pause Key | 14. AUX IN |
| 7. Next Track/FM Channel Key | 15. Microphone Jack |
| 8. Micro SD & USB Slot | 16. LED On-Off Switch |

Remote Control:

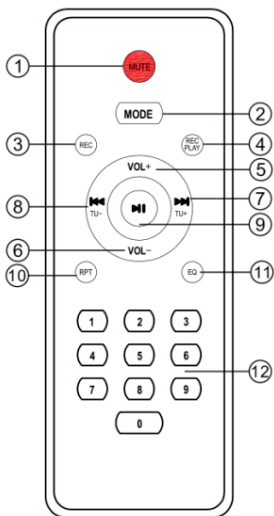

1. Mute/Unmute
2. Mode change
3. Recording
4. Play recorded file
5. Volume +
6. Volume -
7. Next Track/FM channel
8. Previous Track/FM channel
9. Play/Pause key
10. Repeat key
11. EQ Preset
12. Numeric selection (0-9)

General Instruction

BT connectivity

Switch the Speaker to BT mode, Scan for nearby BT devices in your mobile. Tap on ZEB-101 MOVING MONSTER X8L to connect.

USB/Micro SD Mode

Insert the USB/Micro SD Card to the speaker. The speaker will detect the USB/Micro SD Card automatically & the songs from it will be played.

FM Radio

Switch the Speaker to FM, In FM Mode, Long press the Play/Pause Key to scan the available FM channels. Once the scanning is done, The Speaker will start playing the first scanned channel.

AUX-In

The Speaker can be connected to an audio device using a 3.5mm Cable. Connect the one end of the Cable to the speaker & connect the other end of the cable to an audio source. The songs from the audio source can be heard through the speaker.

Recording Function

To record a voice, first plug-in a USB/Micro SD card into the speaker which will act as a storage device. Press the REC. key on the remote to start/stop recording. Once the song or voice is recorded through the Mic, press the REC. PLAY key to play the recorded file.

Note: Speaker can record the Mic input only.

Charging instruction:

Charging of the speaker can be done with the help of the power cord that is included with the package contents

Note:

Charging Indication: Red LED Blinks

Full Charging Indication: Red LED Glows

ISO 9001:2015 Certified Company

www.zebronics.com

