



Trolley DJ Speaker

ZEB **DAZZIO**



User Manual

www.zebronics.com

Thank you for purchasing the **“ZEB-DAZZIO”** Trolley DJ Speaker. Please read this user manual carefully before operation & save it for future reference.

Note:

- Avoid the use of this product at the high-temperature and high humidity environment.
- Avoid the self-disassembling of the product or it will result in voiding the Product's warranty.
- To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

Features:

- Multi-connectivity (BT v5.0 | USB | mSD | FM | AUX)
- 6.3mm Microphone Input
- Karaoke Maker
- LED Display
- RGB Lights
- Full Range 38.1cm
- Remote Control
- Dual Voice Changing Wireless MIC
- Built-in Rechargeable Battery
- TWS Function
- Volume, Treble, Bass, MIC Vol, Echo Control
- Tripod Mount Support

Specifications:

Output Power (RMS)	: 130W
Driver Size	
Full Range	: 38.1 cm
Tweeter	: 2.54 cm
Impedance	
Full Range	: 3Ω
Tweeter	: 8.5Ω
Frequency Response	: 20Hz-20kHz
S/N Ratio	: ≥50dB
File Format Support	
(USB/mSD)	: MP3, WMA
Line Input	: 3.5mm
Max Supported	
USB/mSD Memory Size	: 32GB
FM Frequency Range	: 87 MHz - 108 MHz
Charging Time	: 9h
Playback Time	: 7h*
BT Name	: ZEB-DAZZIO
BT Version	: v5.0
Product Dimension	
(W x D x H)	: 45 x 37.6 x 67.8 cm
Net. Weight	: 8.85 kg


** at 50% volume(LED off)*

Package Contents:

Speaker	: 1 U
Remote	: 1 U
Wireless Mic	: 2 U
Power Cord	: 1 U
Type-C Cable	: 2 U
DC Cable	: 1 U
Input Cable	: 1 U
QR Code Guide	: 1 U

Product Description:


Control Panel Description:

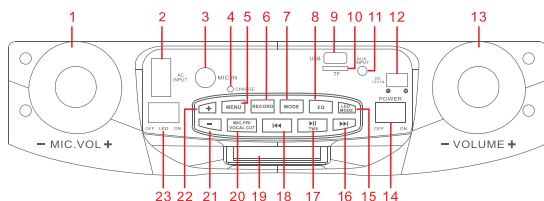

1. MIC Volume Knob
2. AC 220-240V Port
3. 6.3 mm MIC IN
4. Charging Indicator
5. Menu Button
6. Record Button
7. Mode Button
8. EQ Button

- 9. USB Port
- 10. Micro SD Slot
- 11. AUX
- 12. DC 12V IN
- 13. Master Volume Knob
- 14. Power Button
- 15. LED Mode
- 16. Next Track / FM Channel
- 17. Play/Pause / TWS Button
- 18. Previous Track / FM Channel
- 19. LED Display
- 20. MIC Priority / Vocal Cut Button
- 21. Volume Decrease
- 22. Volume Increase
- 23. LED Switch

Remote Control:

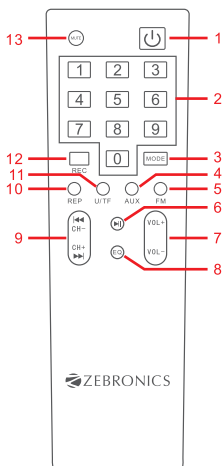

1. Power Button
2. Numeric Buttons (0-9)
3. Mode
4. AUX
5. FM
6. Play / Pause
7. Volume Increase / Decrease
8. EQ
9. Previous / Next Track or FM Channel
10. Repeat
11. USB / mSD Card
12. Record
13. Mute / Unmute

General Instructions

BT Connectivity:

- Switch the source to BT mode using Mode Button.
- Turn on BT on your mobile and scan for nearby BT devices.
- Tap on “**ZEB-DAZZIO**” to connect.

USB/mSD Mode:

- Insert the USB/mSD card into the slot provided on the speaker.
- The speaker will automatically detect the USB/mSD card and the supported audio content will be played from it.

Note: This mode isn't selectable on the speaker or remote control unless a USB/SD flash card is connected.

FM Radio:

- Switch the source to FM mode using Mode Button.
- Long press the Play/Pause button to scan the available FM channels.
- Once the scanning is done, the first scanned channel will start playing.

AUX-IN:

- The speaker can be connected to an audio source using a 3.5mm cable.

- Connect one end of the cable to the AUX-In port on the speaker and the other end an audio source.
- The audio from the source can be Played through the speaker.

TWS Function:

- Turn on both **“ZEB-DAZZIO”** speakers in BT mode Press and hold the Play/Pause button for 3-5 seconds in any one of the speaker to initiate TWS pairing.
- After few seconds both speakers will get connected successfully.
- Now search for nearby BT device in you mobile phone or other source device and tap on BT name **“ZEB-DAZZIO”** to connect. To exit TWS mode, press and hold the Play/Pause button for 3-5 seconds

Recording Function:

- To Record MiC Input, first plug-in a USB/mSD card into the speaker, it will act as a storage device.
- Press the REC key on the remote or the Record Button of the Speaker to Start / Stop Recording.

- Once the voice is recorded through the Mic, press the Record to play the recorded file.

Charging Instruction:

- Connect the pre-included charger to the speaker & connect the other end to 230V power supply.

Charging Indication:

Low Charge : Red LED Flashing

Full Charge : Red LED Glows