

ZEBRONICS

Trolley DJ Speaker

ZEB **GINOX** *Plus*



User Manual

www.zebronics.com

Thank you for purchasing Zebronics Speaker. Please read this user manual carefully before operation & save it for future reference.

Note:

- Avoid the use of this speaker at the high temperature and in high humid environment.
- Avoid self-dismantling of speaker. If you do so the warranty will be void.

Features:

- BT v5.0 | USB | mSD | FM | AUX IN | MIC IN x 2 | GUITAR IN x 2
- AUX OUT
- Volume, Bass & Treble Controls
- Mic Volume, Mic Bass & Mic Treble Controls
- Echo/ Delay /Guitar volume controls
- Dual UHF wireless mic
- LED Display
- TWS Function
- Supports External Battery
- 4 Castor Wheels with Retractable Handle

Specification:


Output Power (RMS)	: 160W
Driver Size	: Full range -30.48cm : Tweeter - 2.54cm
Impedance	: Full range - 4Ω : Tweeter - 6Ω
Frequency response	: 35Hz-15kHz
S/N Ratio	: ≥72dB
File format support (USB/mSD)	: MP3, WMA, WAV
Line input	: RCA
Max supported USB/mSD memory size:	64GB
FM frequency range	: 87 MHz - 108 MHz
Charging time	: 6.5h
Playback time	: 10h*
BT name	: ZEB-GINOX PLUS
BT version	: v5.0
Product Dimension (W x D x H)	:39.5 x 39 x 72.5 cm
Net.Weight	: 17.85 kg

* at 50% volume (LED OFF)

Package Contents:


Trolley DJ Speaker	: 1 U
Remote	: 1 U
Wireless Mic	: 2 U
QR Code Guide	: 1 U
Input cable	: 1 U
DC cable	: 1 U
Power Cord	: 1 U

Control Description

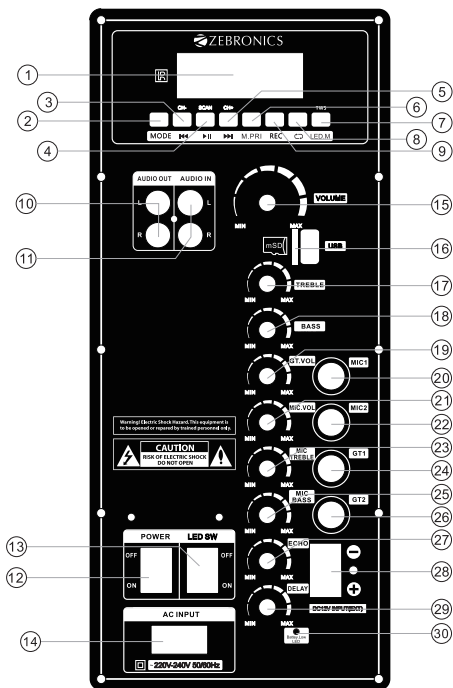

1. LED Display
2. Mode
3. Previous/Channel-
4. Play/Pause&FM Scan
5. Next/Channel+
6. Microphone Priority
7. Short press TWS & Long press for change LED Modes
8. Repeat Button
9. Mic Recording(Long press)
10. Audio out
11. Audio in
12. Power Switch
13. LED Switch
14. AC Input
15. Master volume control
16. mSD/USB
17. Treble volume control
18. Bass volume control
19. Guitar volume control
20. Microphone input port 1
21. Microphone volume control
22. Microphone input port 2
23. Microphone treble volume control
24. Guitar input 1
25. Microphone bass volume control
26. Guitar input 2
27. Echo volume control
28. DC 12V input(Ext)
29. Delay volume control
30. Battery Low indicate light

Remote Control

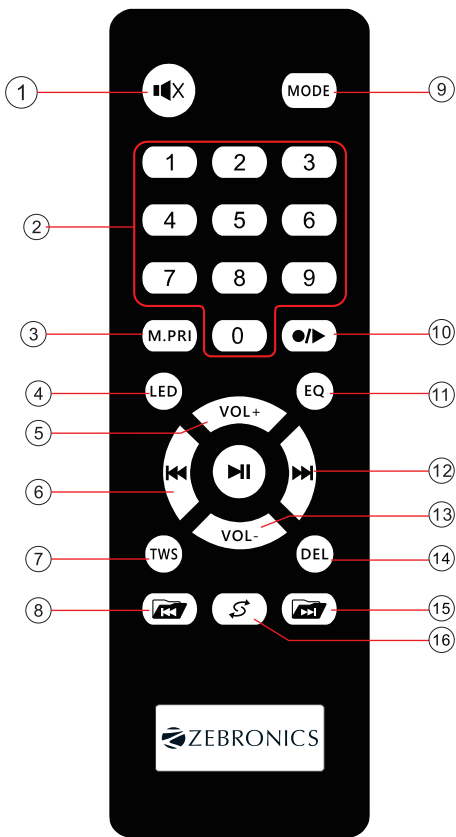

1. Mute / Unmute
2. 0-9 Numeric buttons for selecting MP3 tracks in USB & mSD or channels in FM.
3. Single press for MIC PRIORITY & Long press for karaoke maker
4. LED Modes
5. VOL+
6. Previous track in USB, mSD & BT / Previous channel in FM
7. TWS
8. Previous folder
9. MODE
10. Record/Stop
11. EQ
12. Next track in USB, mSD & BT / Next channel in FM
13. VOL-
14. DEL
15. Next folder
16. REPEAT

General Instructions

BT connectivity

- Switch the source to BT mode
- Turn on BT on your mobile and scan for nearby BT devices.
- Tap on **“ZEB-GINOX PLUS”** to connect.

USB/Micro SD Mode

- Insert the USB/Micro SD card into the slot provided on the speaker
- The speaker will automatically detect the USB/Micro SD card and the supported audio content will be played from it.

Note: This mode isn't selectable on the speaker or remote control unless a USB/mSD flash card is connected

FM Radio

- Switch the speaker to FM mode
- Long press the Play/Pause button to scan the available FM channels.
- Once the scanning is done, the first scanned channel will start playing

Audio IN

- The speaker can be connected to an audio source using a RCA to 3.5mm cable.
- Connect one end of the cable to the Audio IN port on the speaker and the other end an audio source.

- The audio from the source can be heard through the speaker.

Audio OUT

- The speaker can be connected to another speaker using a RCA to 3.5mm cable.
- Connect one end of the cable to a speaker and the other end to another speaker.
- The audio can be heard through both the speaker.

TWS Mode

- Switch on two “ZEB-GINOX PLUS” speakers you want to pair & enter BT mode on both the speakers. (don't connect to any of the BT source device)
- Now in any one of the speaker press the TWS button on panel or single press on remote to initiate the TWS pairing where the display of that speaker shows “**bt st**” & it automatically gets connected to the secondary speaker.
- Now open the BT settings on your mobile phone or other source device, search for BT name **ZEB-GINOX PLUS** and tap to connect.

Recording Function

- First plug-in a USB/mSD flash card which will act as a storage device into the slot provided on the speaker.
- Long press the **REC.** button on the remote to start the recording.
- Press the **REC.** button again to stop the recording.
- Press the **REC.PLAY** button to play the recorded file.

Indication:

Charging indication : 3 Level indicator on display Flashes

Full Charge indication : 3 Level indicator on display Glow

ISO 9001:2015 Certified Company

www.zebronics.com

