

Trolley DJ Speaker
GINOX^{Pro}
ZEB

User Manual

www.zebronics.com

Thank you for purchasing **ZEB-GINOX PRO Trolley DJ Speaker**. Please read this user manual carefully before operation & save it for future reference.

Note:

- *Avoid the usage of this product at the high temperature and high humidity environment.*
- *Avoid the self-disassembly of the products or it results in the voiding the product's warranty.*
- *To know more about terms and conditions for warranty policy, please visit*

<https://zebronics.com/pages/warranty-policy>

Features:

38.1cm Full Range Driver

Dual UHF Wireless Mic

Dual 6.3mm Mic Input

Dual 6.3mm Guitar Input

TWS Function

Karaoke & Recording

BT v5.1 | USB x 2 | mSD | FM | AUX IN | AUX OUT

Volume, Bass & Treble Controls

Supports External Battery

LED Display

RGB Lights

Retractable Handle

With 4 Castor Wheels

Remote Control

Built in Rechargeable Battery

Specification:

Output Power (RMS) : 240W

Driver Size

Full range : 38.1cm

Tweeter : 8cm

Impedance

Full range : 4Ω

Tweeter : 6Ω

Frequency response : 35Hz-6kHz

S/N Ratio : ≥75dB

File format support

(USB/mSD) : MP3

Line input : RCA

Max supported USB/

mSD memory size : 32GB

FM frequency range : 87 MHz - 108 MHz

BT name : ZEB-GINOX PRO

BT version : v5.1

Product Dimension

(W x D x H) : 45.5 x 47 x 86.5 cm

Net.Weight : 23.8 kg

Country of origin : PRC

Package Contents:

Trolley DJ Speaker : 1 U

Remote : 1 U

Wireless Mic : 2 U

QR Code Guide : 1 U


Input Cable : 1 U

DC Cable : 1 U

Power Cord : 1 U

**at 50% Volume (LED Off)*


Control Description

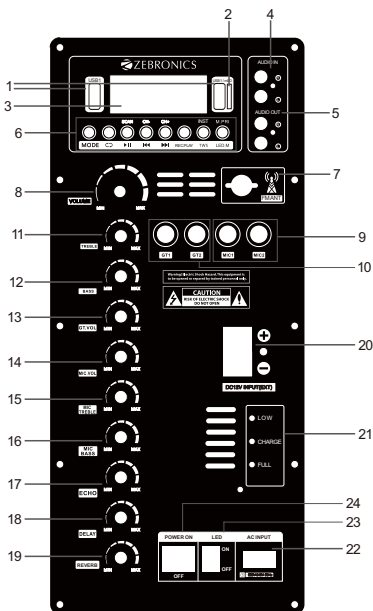

1. USB 1 & USB 2
2. mSD CARD SLOT
3. LED DISPLAY
4. AUDIO IN
5. AUDIO OUT
6. Mode
 - 6.1. REPEAT BUTTON
 - 6.2. PLAY/PAUSE/SCAN
 - 6.3. PREVIOUS/CH-
 - 6.4. NEXT/CH+
 - 6.5. MIC RECORDING/PLAY
 - 6.6. TWS
 - 6.7. MIC PRIORITY/LED MODES SWITCHING BUTTON
7. FM ANTENNA
8. MASTER VOLUME CONTROL
9. MIC INPUT 1 & 2
10. GUITAR INPUT 1 & GUITAR INPUT 2

11. TREBLE VOLUME CONTROL
12. BASS VOLUME CONTROL
13. GUITAR VOLUME CONTROL
14. MIC VOLUME CONTROL
15. MIC TREBLE VOLUME CONTROL
16. MIC BASS VOLUME CONTROL
17. ECHO VOLUME CONTROL
18. DELAY VOLUME CONTROL
19. REVERB VOLUME CONTROL
20. DC 12V INPUT(EXT)
21. BATTERY LOW LIGHT
- 21.1 BATTERY CHARGING LIGHT
- 21.2 BATTERY FULL LIGHT
22. AC INPUT
23. LED ON/OFF SWITCH
24. POWER SWITCH

Remote Control

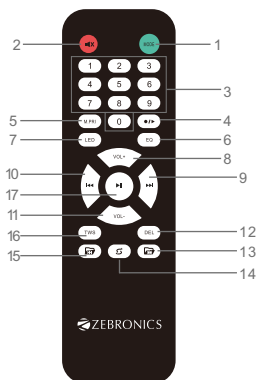

1. MODE
2. MUTE/UNMUTE
3. NUMERIC PAD (0-9)
4. REC/PLAY
5. MIC PRIORITY
6. EQ
7. LED

8. VOL +
9. NEXT
10. PREVIOUS
11. VOL-
12. DEL
13. NEXT FOLDER
14. REPEAT CONTROL BUTTON
15. PREVIOUS FOLDER
16. TWS
17. PLAY/PAUSE/SCAN

General Instructions

BT connectivity

- Switch the source to BT mode
- Turn on BT on your mobile and scan for nearby BT devices.
- Tap on "**ZEB-GINOX PRO**" to connect.

USB/mSD Mode

- Insert the USB/Micro SD card into the slot provided on the speaker
- The speaker will automatically detect the USB/Micro SD card and the supported audio content will be played from it.

***Note:** This mode isn't selectable on the speaker or remote control unless a USB/mSD flash card is connected*

FM Radio

- Switch the speaker to FM mode
- Long press the Play/Pause button to scan the available FM channels.
- Once the scanning is done, the first scanned channel will start playing

Audio IN

- The speaker can be connected to an audio source using a RCA to 3.5mm cable.
- Connect one end of the cable to the Audio IN port on the speaker and the other end an audio source.
- The audio from the source can be heard through the speaker.

Audio OUT

- The speaker can be connected to another speaker using a RCA to 3.5mm cable.
- Connect one end of the cable to a speaker and the other end to another speaker.

The audio can be heard through both the speaker.

TWS Function:

Switch on two "**ZEB-GINOX PRO**" speakers you want to pair & enter BT mode on both the speakers. (don't connect to any of the BT source device).

Now in any one of the speaker press the TWS button on panel or single press on remote to initiate the TWS pairing where the display of that speaker shows "bt st" & it automatically gets connected to the secondary speaker.

Now open the BT settings on your mobile phone or other source device, search for BT name **ZEB-GINOX PRO** and tap to connect.

Recording Function

First plug-in a USB/mSD flash card which will act as a storage device into the slot provided on the speaker.

Long press the REC. button on the remote to start the recording.

Press the REC. button again to stop the recording.

Press the REC.PLAY button to play the recorded file.

Indication:

Charging indication

3 Level indicator on display Flashes

Full Charge indication:

3 Level indicator on display Glow

ISO 9001:2015 Certified Company

www.zebronics.com

