



Trolley DJ Speaker

ZEB JOLT 100



User Manual

www.zebronics.com

Thank you for purchasing the **“ZEB-JOLT 100”** Trolley DJ Speaker. Please read this user manual carefully before operation & save it for future reference.

Note:

- Avoid the use of this product at the high-temperature and high humidity environment.
- Avoid the self-disassembling of the product or it will result in voiding the Product's warranty.
- To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

Features:

- BT v5.0 | USB | mSD | AUX
- Dual Wireless MIC
- Karaoke function
- Recording
- TWS Function
- FM Radio
- Dual 6.3mm Microphone input
- LED Display
- LED Lights
- Mic Volume & Echo Controls
- Volume, Bass & Treble Controls
- Remote Control
- Retractable Handle with Wheels

- Tripod Mount
- Trolley design
- Built-in rechargeable battery

Specifications:

BT name	: ZEB-JOLT 100
BT version	: v5.0
Output Power (RMS)	: 120W
Driver Size	
Full range	: 38.1cm
Tweeter	: 2.54 cm
Impedance	
Full range	: 4Ω
Tweeter	: 8Ω
Frequency Response	: 65Hz-18kHz
S/N Ratio	: ≥60dB
File format support	
(USB/mSD)	: MP3, WAV
Line input	: 3.5mm
Max Supported	
USB/mSD memory size	: 32GB
FM frequency range	: 87.5 MHz - 108 MHz
Charging time	: 9.8h
Playback time	: 5h*
Product Dimension	
(W x D x H)	: 41 x 31.3 x 60.4 cm
Net. Weight	: 8.7 kg


** at 50% volume(LED off)*

Package Contents:

Speaker	: 1 U
Remote	: 1 U
Wireless Mic	: 2 U
Power Cord	: 1 U
Input cable	: 1 U
QR Code Guide	: 1 U

Product Description:


Control Panel Description:

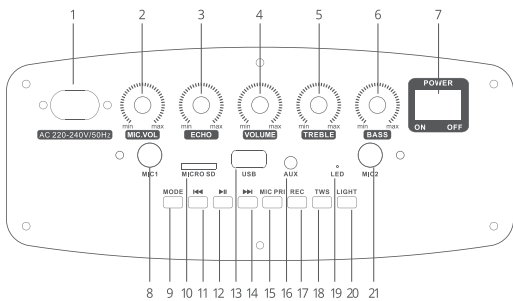

- 1. CHARGING PORT
- 2. MIC VOLUME CONTROL KNOB
- 3. ECHO KNOB
- 4. VOLUME CONTROL KNOB
- 5. TREBLE CONTROL KNOB
- 6. BASS CONTROL KNOB
- 7. POWER SWITCH

8. MIC INPUT 1
9. MODE
10. mSD CARD SLOT
11. PREVIOUS
12. PLAY/PAUSE/SCAN
13. USB PORT
14. NEXT
15. MIC PRIORITY
16. AUX PORT
17. RECORD
18. TWS
19. LED INDICATOR
20. LED CONTROL BUTTON
21. MIC INPUT 2

REMOTE CONTROL:

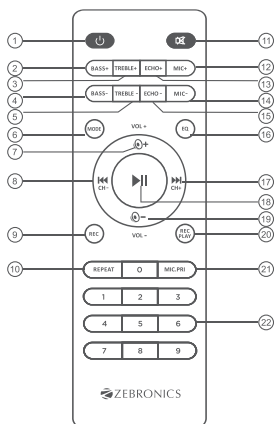

1. POWER BUTTON
2. BASS +
3. TREBLE +
4. BASS -
5. TREBLE -
6. MODE
7. VOL +
8. PREVIOUS
9. RECORDING
10. REPEAT
11. MUTE/UNMUTE
12. MIC +
13. ECHO +
14. MIC -
15. ECHO -
16. EQ
17. NEXT
18. PLAY/PAUSE/SCAN
19. VOL -
20. REC PLAY
21. MIC PRIORITY
22. NUMERIC BUTTONS (0-9)

General Instructions

BT Connectivity:

- Switch the source to BT mode.
- Turn on BT on your mobile and scan for nearby BT devices.
- Tap on **"ZEB-JOLT 100"** to connect.

USB/mSD Mode:

- Insert the USB/mSD card into the slot provided on the speaker.
- The speaker will automatically detect the USB/mSD card and the supported audio content will be played from it.

Note:

This mode isn't selectable on the speaker or remote control unless a USB/SD flash card is connected.

FM Radio:

- Switch the speaker to FM mode
- Long press the Play/Pause button to scan the available FM channels.
- Once the scanning is done, the first scanned channel will start playing.

AUX-IN:

- The speaker can be connected to an audio source using a 3.5mm cable.

- Connect one end of the cable to the AUX-In port on the speaker and the other end an audio source.
- The audio from the source can be Played through the speaker.

TWS Function:

- Turn on both "**ZEB-JOLT 100**" speakers in BT mode Press and hold the TWS button for 3-5 seconds in any one of the speaker to initiate TWS pairing.
- After few seconds both speakers will get connected successfully.
- Now search for nearby BT device in you mobile phone or other source device and tap on BT name "**ZEB-JOLT 100**" to connect. To exit TWS mode, press and hold the TWS button for 3-5 seconds

Recording Function:

- To record mic input, first plug-in a USB/mSD card into the speaker, it will act as a storage device.
- Press the REC key on the remote to start/stop recording.

- Once the voice is recorded through the Mic, press the REC PLAY key to play the recorded file.

Charging Instruction:

- Connect the pre-included charger to the speaker & connect the other end to 230V power supply.

Charging Indication:

Charging Indication: Red LED Flashing

Full Charging Indication: Red LED Glows

