

 ZEBRONICS

Trolley DJ Speaker

ZEB **JOLT** *plus*



User Manual

www.zebronic.com

Thank you for purchasing the **ZEB-JOLT PLUS** Trolley DJ Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this speaker at the high temperature and high humidity environment.
- Avoid the self-disassembly of the product as it results in the failure of Warranty.

Features

Trolley speaker

BT v5.0 / USB / mSD / FM /AUX / MIC Input x 2

Karaoke function

LED display

LED lights

Dual Full range 25.4 cm

Remote control

Dual Wireless mic

Built-in rechargeable battery

TWS Function

Volume, Treble, Bass, MIC Volume, Echo

Control

Supports external battery

Specifications

Output power (RMS) : 100W (50W x 2)

Driver size

Full range : 25.4cm x 2

Tweeter : 2.54cm


Impedance	
Full range	: 4Ω
Tweeter	: 8Ω
Frequency response	: 65Hz-18kHz
S/N Ratio	: ≥60dB
File format	
support (USB/mSD)	: MP3, WAV, WMA
Line input	: 3.5mm
Max. supported	
memory size	: 32GB (USB/mSD)
FM frequency range	: 87.5 MHz-108 Mhz
Charging time	: 5h
Playback time	: 7.5h*
BT name	: ZEB-Jolt plus
BT version	: v5.0
Product dimension	: 33.5 x 30 x 72 cm
(W x D x H)	
Net. weight	: 9.6 kg

Package Content

DJ Speaker	: 1 U
Remote	: 1 U
Wireless Mic	: 2 U
Power Cord	: 1 U
Input cable	: 1 U
QR Code Guide	: 1 U
Microphone clamp	: 2 U


**at 50% Volume (LED OFF)*

Control Panel Description

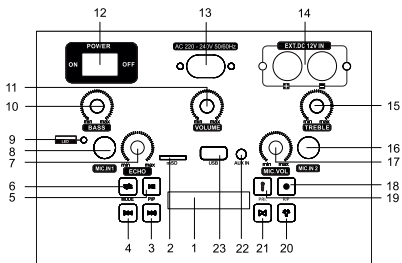

1. LED display
2. Micro SD card port
3. Next Track/FM channel key
4. Previous Track/FM channel key
5. Play/Pause key
6. Mode change Key
7. Echo control
8. Microphone 1 input jack
9. LED indicator
10. Bass control
11. Master volume control
12. Power ON/OFF switch
13. AC input port
14. External DC12V battery Input port
15. Treble control
16. Microphone 2 input jack
17. Mic volume control
18. Recording & play record key
Long Press to Recording
Short Press to Play Recorded File
19. Mic Priority On-Off key
20. Press this button to switch between 3 different lighting modes and on/off.
21. TWS Connection key
22. AUX IN
23. USB port

Remote Control

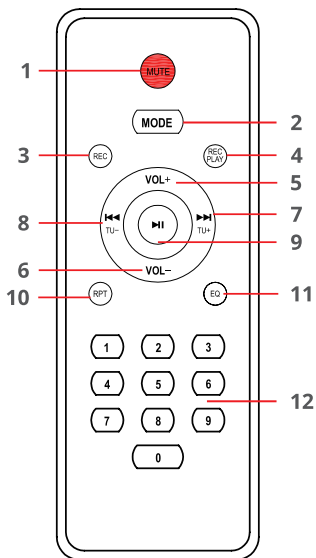

1. Mute / Unmute
2. Mode change key
3. Recording key
4. Play recorded file
5. Volume +
6. Volume-
7. Next Track / FM channel + / Tune +
8. Previous Track / FM channel - / Tune -
9. Play / Pause key
10. Repeat key
11. EQ preset
12. Numeric selection (0-9)

General Instructions

BT Mode:

Switch the speaker to BT mode, Scan for nearby BT devices in your device. Tap on "ZEB-Jolt plus" to connect.

USB/mSD Mode:

Insert the USB Drive/mSD Card to the speaker. The speaker will detect the USB Drive/mSD Card and the audio files from drive will be played automatically.

FM Radio:

Switch the speaker to FM, In FM Mode, long Press the Play/Pause Key to scan the available FM channels. Once the scanning is done, The speaker will start playing the first scanned channel.

AUX-IN:

The speaker can be connected to an audio device using a 3.5mm cable. Connect the one end of the cable to the speaker & connect the other end of the cable to an audio source. The tracks from the audio source can be heard through the speaker.

TWS Connectivity:

Turn on both ZEB-Jolt plus speakers in BT (wireless) mode. Connect one of two speakers (it says A) to the BT device (cell phone,

tablet, computer, etc.) Long press the TWS button on the speaker (A) 3S, ZEB-JOLT PLUS A and B are ready for TWS playing. The TWS function will be activated and the pairing will be automatic the next time. (if A and B).

Recording Function:

To record a voice, first plug-in a USB/mSD card into the speaker which will act as a storage device. Press the REC. key on the remote to start/stop recording. Once the song or voice is recorded through the Mic, press the REC. PLAY key to play the recorded file.

Note: Speaker can record the Mic input.

Charging Indication:

Charging Indication : Red LED Flashing
Full Charging Indication : Red LED Glows

ISO 9001:2015 Certified Company
www.zebronics.com

