



ZEBRONICS
ALWAYS AHEAD

Trolley DJ Speaker

ZEB JOLT



User Manual

www.zebronics.com

Thank you for purchasing **ZEB-JOLT** Trolley DJ Speaker. Please read this user manual carefully before operation & save it for future reference.

Note:

- Avoid the use of this product at the high-temperature and high humidity environment.
- Avoid self-disassemble of product, or it will result in the failure of warranty.

Features:

Trolley Speaker

BT v 5.0 / USB / Micro SD / FM / AUX / Mic Input x 2

Karaoke Function / Recording

LED Display

LED Lights

30.48cm Full Range Speaker

Remote Control

Wireless Mic

Built-in Rechargeable Battery

TWS Function

LED ON/OFF Switch

Volume, Treble, Bass, Mic Vol, Echo Control

Specifications:

Output Power (RMS) : 50W

Driver Size

Full range : 30.48cm

Tweeter : 2.54cm


Impedance	
Full range	: 4Ω
Tweeter	: 8Ω
Frequency response	: 65Hz-18kHz
S/N Ratio	: ≥60dB
File format support (USB/mSD)	: MP3, WAV, WMA
Line input	: 3.5mm
Max supported USB/mSD memory size	: 32GB
FM frequency range	: 87.5 MHz-108 MHz
Charging time	: 5h
Playback time	: 7.5h*
BT name	: ZEB-JOLT
BT version	: 5.0
Product Dimension	: 35 x 33 x 53 cm (W x D x H)
Net. Weight	: 7kg

Package Content

DJ Speaker	: 1 U
Remote	: 1 U
Wireless Mic	: 1 U
Power Cord	: 1 U
Input Cable	: 1 U
QR Code Guide	: 1 U


**at 50% volume (LED Off)*

Button Description

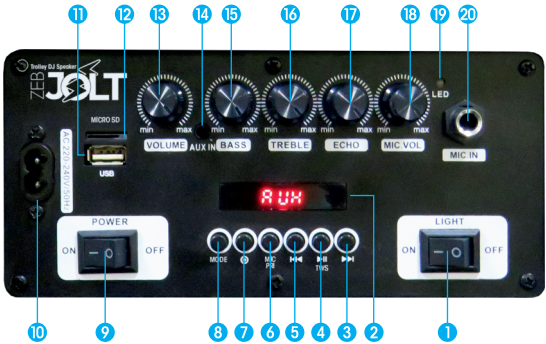

1. LED ON/OFF Switch
2. LED Display
3. Next Track/FM Channel Key
4. Play/Pause/TWS Connection Key
5. Previous Track/FM Channel
6. Mic Priority ON/OFF Key
7. Recording & Play Record Key
Long Press to Record
Short Press to Play Recorded File
8. Input Mode (BT v5.0/USB/Micro SD/FM/AUX)
9. Power On/Off Switch
10. AC Input Port
11. USB Port
12. Micro SD Card Port
13. Volume Control
14. AUX In
15. Bass Control
16. Treble Control
17. Echo Control
18. Mic Volume Control
19. LED Indicator
20. Microphone Input Jack

Remote Control

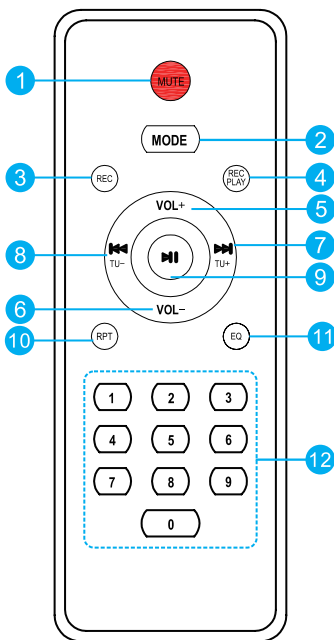

1. Mute/Unmute
2. Mode Change Key
3. Recording Key
4. Play Recorded File
5. Volume +
6. Volume -
7. Next Track/FM Channel +
8. Previous Track/FM Channel
9. Play/Pause Key
10. Repeat Key
11. EQ Preset
12. Numeric Selection(0-9)

General Instructions

BT Mode

Power ON the speaker, Change to input mode. It will enter into BT pairing mode, open Bluetooth settings in your phone and search for the BT name "**ZEB-JOLT**" and tap to connect it.

TWS Connectivity

- Switch ON two "**ZEB-JOLT**" speakers you want to pair.
- Press & hold the **Play/Pause TWS** button for 5-10 seconds in any one speaker to activate TWS mode.
- After few seconds, both the speakers will be connected successfully.
- Now, search for nearby BT device in your mobile and Tap on the BT name "**ZEB-JOLT**" to connect
- To exit TWS mode, press & hold **Play/Pause TWS** button for 5-10 seconds in any one speaker.

USB/Micro SD Mode

Insert the USB/Micro SD card to the speaker. The speaker will detect the USB/Micro SD card automatically and the songs from it will be played.

FM Radio Mode

Switch the speaker to FM. In FM Mode, long

press the Play/Pause key to scan the available FM channels. Once the scanning is done, the speaker will start playing the first scanned channel.

Note: Please use Micro USB cable as antenna for better FM signal reception.

AUX-In

The speaker can be connected to an audio device using a 3.5mm cable. Connect the one end of the cable to the speaker & connect the other end of the cable to an audio source. The songs from the audio source can be heard through the speaker.

Recording function

To record a voice, first plug-in a USB/Micro SD card into the speaker which will act as a storage device. Press the REC. key on the remote to start/stop recording. Once the song or voice is recorded through the MIC, press the REC. PLAY key to play the recorded file.

Note: Speaker can record the Mic input.

Charging Indication:

Charging indication: Red LED Flashing

Full Charging indication: Red LED Glows

ISO 9001:2015 Certified Company

www.zebronics.com

