



Trolley DJ Speaker
ZEB PARTY Fyre 990



User Manual

www.zebronics.com

Dear Customer

Thank you for purchasing the **ZEB-PARTY FYRE 990** DJ Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- *Avoid the usage of this product at high temperature environments and high-humidity*
- *Avoid the self-disassembling of the product or it will result in voiding the Product's warranty.*
- *Turn off the speaker when the speaker is not in use.*
- *To know more about Terms and conditions for warranty policy, please visit:*

<https://zebronics.com/pages/warranty-policy>

Features

- Up to 8h* backup
- 3-Way Speaker
- Dual 30.48cm Full Range Drivers
- TWS function
- OTG Live Stream (Type-C)
- Dual UHF Mic
- Karaoke | Mic Recording
- 2 x 6.3mm Mic Input
- 6.3mm Guitar Input
- BT v5.3 | USB | AUX IN
- Volume, Bass & Treble Controls
- Mic Volume, Echo, Bass & Treble Controls
- Guitar Volume Control

- Retractable Handle with Wheels
- Built in Battery
- RGB Lights
- LED Display
- Remote Control
- Supports External Battery

Specifications

 
Model No	: ZEB-DPSPK 103
Driver Size	
Full range	: 30.48cm x 2
Mid Range	: 13.33 cm
Tweeter	: 2.54 cm
Speaker Impedance	
Full Range	: 4Ω x 2
Mid Range	: 4Ω
Tweeter	: 6Ω
Frequency Response	: 40Hz-20kHz
S/N Ratio	: ≥88dB
File format support	: Mp3
Line input	: 3.5mm RCA
Max supported USB memory size	: 32GB
Charging time	: 8 h
Playback time	: 8h*
BT name	: ZEB-PartyFyre 990
BT version	: v5.3
Product Dimension	: 36 x 38 x 96.5cm (W x D x H)
Net. Weight	: 24.5 kg

*at 50% Volume (LED Off)

Package Contents

DJ Speaker	: 1 U
Remote	: 1 U
Wireless Mic	: 2 U
Mic Battery	: 2 U
Type-C Cable	: 1 U
Power Cord	: 1 U
Input cable	: 1 U
DC Cable	: 1 U
QR Code Guide	: 1 U

Top Panel Description :

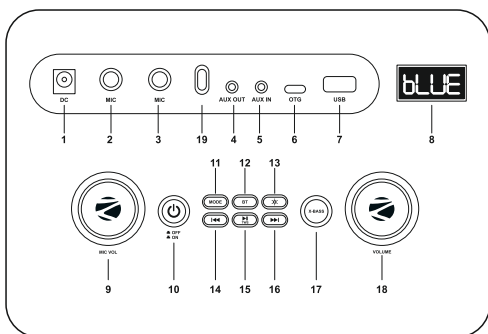


**at 50% Volume (LED Off)*

- 1.DC 15V Input.
- 2.Microphone 1 Input.
- 3.Microphone 2 Input.
- 4.AUX OUT.
- 5.AUX IN.
- 6.OTG Input.
- 7.USB Input.
- 8.LED Display.
- 9.Mic Function Knob.
- 10.Power Switch ON/OFF.
- 11.Mode Key.
- 12.Bluetooth key.
- 13.LED Mode Button.
- 14.Previous and radio channel- Key.
- 15.Play/Pause/TWS Button.
- 16.Next and radio channel- Key.
- 17.X-Bass Button.
- 18.Volume Control Knob
19. OTG Port (Type - C)

Back Panel Description :

 - 1.Guitar IN.
- 2.Guitar Volume Knob.
- 3.Audio OUT.
- 4.Audio IN.
- 5.External DC Input.
- 6.AC Power Input

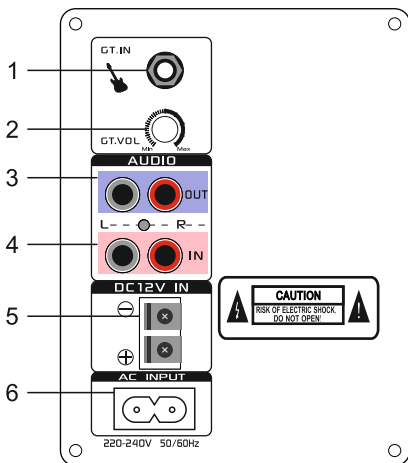

Button Description :

Volume control Knob

- * Rotate the VOLUME knob to adjust the music volume.
- * Press once to enter Bass/Treble mode, then rotate the knob to adjust the Bass or Treble level

Mic functional Knob

Turn the knobs to adjust the microphone volume/Bass/Echo to your preferred sound settings.

Power Switch

- * Short Press to ON the Speaker.
- * Short Press to OFF the Speaker.

Mode Key

* Short Press to shift the mode BT/ AUX IN / USB / FM.

Bluetooth key

* Short Press the BT button to switch directly to BT mode.

RGB Light Button

* Short press to shift 7 types of RGB LED Light effects.

* Long Press to turn ON/OFF RGB LED Light.

Next/Previous

* Short press the Next/Previous button to switch to the next or previous track.

Play/Pause Button

* Short-press the Play/Pause button to play or pause the current track.

 
* Long-press the Play/Pause button to turn ON/OFF the TWS Function.

X-BASS Button

* Press once to enter X-Bass mode, then rotate the VOL knob to adjust the X-Bass level.


* Press again to exit X-Bass mode.

Remote Description:

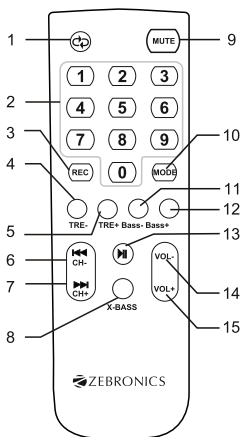

- 1.Repeat Track Key.
- 2.Numeric Track.
- 3.Recording Function Key.
- 4.Treble Decrease Key.
- 5.Treble Increase Key.
- 6.Prervious Key (-).
- 7.Next Key (+).
- 8.X-Bass Key.
- 9.Mute Key.
- 10.Mode Key.
- 11.Bass Decrease (-).
- 12.Bass Increase (+).
- 13.Play/Pasuse Key.
- 14.Volume Decrease.
- 15.Volume Increase.

 Mic Description :

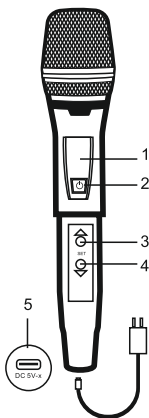

1. LED Display : Indicates Power ON/OFF, Channel, volume, battery level, and pairing status.

2. Power : Long Press to turn the wireless microphone ON/OFF.

3. Mic Volume + : Press to increase the microphone volume. Press and hold for 3 seconds to switch to the next channel.

4. Mic Volume - : Press to decrease the microphone volume. Press and hold for 3 seconds to switch to the previous channel.

5. Mic Type-C charging Port .

Connect with BT

Instructions :

1. Press "MODE" button on the top control panel or press "MODE" button on the remote control to switch to BT mode.
2. Open the BT settings on your external device and search for **ZEB-Party fyre 990** and connect.

Note : *No password needed for connecting.*

Connect with AUX in

Instructions :

1. Press "MODE" button on the top control panel or press "MODE" button on the remote control to switch to AUX mode.
2. (AUH) will be displayed on the display screen.
3. Connect the audio source/external device with the supplied AUX-in cable.

Caution : Please reduce the volume before connecting the AUX cable to avoid unexpected noise.

Play from USB :

1. Insert the USB device into the USB INPUT slot on the top panel.

2. Press "MODE" button on the top control panel or "MODE" button on the remote control to switch to USB mode when in another mode.

TWS Function :

If you have two **ZEB-Party fyre 990** speakers, you can use them together enjoy stereo sound effect.

Instructions :

1. Power on and switch both speakers to BT mode, don't connect.

2. Long Press the TWS button on both speakers to activate TWS pairing mode, the button light will keep flashing.

3. The TWS will pair automatically and you will hear the tone indicating pairing successfully.

FM Radio :

Instructions :

1. Insert the AUX Cable into the AUX input jack on the top panel.

2. Press "MODE" button on the top control panel or press "MODE" button on the remote control to switch to FM mode.

3. Press the PLAY/PAUSE button on the top panel or the remote control to search and save the FM stations automatically.

4. Long Press / to select the radio stations and different frequency.

OTG Live Stream Type - C Port :

OTG Live Stream — Connect your phone via Type-C to play audio and record or live stream with microphone support.

Note: *This type - C Port is not for charging.*

Charging Instruction :

1. Charging - Connect the speaker to an AC power outlet (220–240 V, 50/60 Hz). The battery level will be shown on the LED display while charging.

2. Fully Charged - When charging is complete, the LED display shows a full battery. A full charge from a low battery takes about **8–10 hours**.

ISO 9001:2015 Certified Company
www.zebronics.com

