



Trolley DJ Speaker  
**SHEEN**



## User Manual

[www.zebronics.com](http://www.zebronics.com)

Thank you for purchasing the **ZEB-SHEEN** Trolley DJ Speaker. Please read the user manual carefully before operation & save it for future reference.

**Note:**

- Avoid the usage of this speaker at the high temperature and high humidity environment.
- Avoid the self-disassembly of the product as it results in the failure of Warranty.
- To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

**Features**

BT v5.0 | USB | mSD | AUX | MIC IN x 2

LED Display

TWS Function

Media/Volume control

Volume, Bass & Treble Control

Mic Volume / Echo Control Knob

Wireless MIC

RGB Lights with control switch

Karaoke/Recording

Handle with Wheels

## Specifications

Model No.	: ZEB-DSPK 107
Output power (RMS)	: 140W
BT Version	: 5.0
Driver size	: (20.32cm x 2) + 4cm
Speaker Impedance	: $4\Omega + 8\Omega$
Frequency response	: 60Hz-20kHz
S/N Ratio	: $\geq 85\text{dB}$
Max Supported USB/ mSD memory size	: 32GB
Supported Audio formats	: MP3 / WAV / WMA
Charging time	: 6h
Playback time	: 10h*
Product Dimension (W x D x H)	: 29.5 x 31.1 x 83 cm
Net. Weight	: 13.5 Kg

## Package Content

Speaker	: 1 U
Input Cable	: 1 U
Remote Control	: 1 U
Wireless MIC	: 1 U
Power adapter	: 1 U
QR Code Guide	: 1 U


*\*at 50% Volume (LED OFF)*

## Control Panel Description



1. LED Display
2. Volume/Bass,Treble Vol Control
3. mSD Card Slot
4. USB Port
5. Previous
6. Play/Pause
7. Next
8. Mode/TWS
9. Rec
10. LED Mode Switching Button
11. EQ/Mic Priority
12. Power ON/OFF Button
13. Mic / Echo Volume Control
14. Aux Port
15. Mic 1
16. Mic 2
17. Charging Indicator
18. Charging Port

# Remote Control

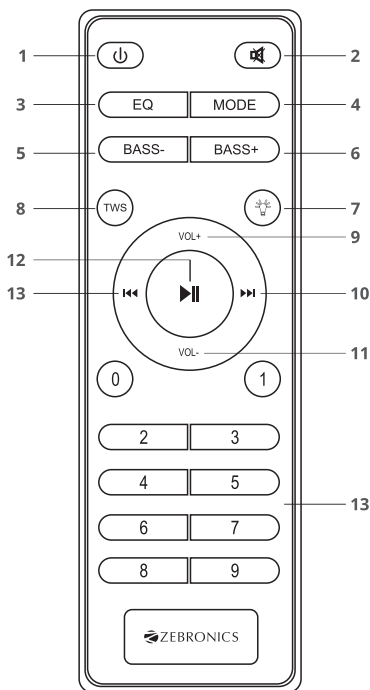

- |                 |                      |
|-----------------|----------------------|
| 1. Power Button | 8.TWS                |
| 2. Mute/Unmute  | 9.Vol +              |
| 3. EQ           | 10.Next              |
| 4. Mode         | 11.Vol -             |
| 5. Bass -       | 12.Play/Pause        |
| 6. Bass +       | 13.Previous          |
| 7. LED          | 14.Numeric Pads(0-9) |

## General Instructions

### BT connectivity

Switch the source to BT mode Turn on BT on your mobile and scan for nearby BT devices. Tap on "**ZEB-SHEEN**" to connect.

### USB/Micro SD Mode

Insert the USB/Micro SD card into the slot provided on the speaker .

The speaker will automatically detect the USB/Micro SD card and the supported audio content will be played from it.

**Note :** This mode isn't selectable on the speaker or remote control unless a USB/mSD flash card is connected.

### AUX-In :

The speaker can be connected to an audio source using a 3.5mm cable.

Connect one end of the cable to the AUX-In port on the speaker and the other end an audio source.

The audio from the source can be Played through the speaker.

### TWS Mode :

Switch on two "ZEB- SHEEN " speakers you want to pair & enter BT mode on both the speakers. (don't connect to any of the BT source device).

Now in any one of the speaker press the TWS button on panel or single press on remote to initiate the TWS pairing where the display of that speaker shows "t - on"& it automatically gets connected to the secondary speaker. Now open the BT settings on your mobile phone or other source device, search for BT name ZEB - SHEEN and tap to connect.

**Charging Indication:**

Red LED on the Top panel of the speaker glows.