



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing **ZEB - SONO 100** Trolley DJ Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid the self-disassembly of the products or it results in voiding the product's Warranty.
- Turn off the speaker when the speaker is not in use.
- To know more about Terms and conditions for warranty policy, please visit

To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

Features:

- BT v5.0 | USB | mSD | FM | AUX | MIC IN | GUITAR IN
- Multicolor LED lights with On/Off switch
- Remote control
- Wireless Mic
- Volume, Bass & Treble controls
- Mic Volume & Echo Controls
- TWS Function
- Built-in Rechargeable Battery

- Recording
- Karaoke
- Carry Handle with Wheels

Specification:


Output Power (RMS)	: 120W
Driver Size	: Full range -30.48cm : Tweeter - 2.54cm x 1
Impedance	: Full range - 2.2Ω : Tweeter - 16Ω
Frequency response	: 60Hz-18kHz
S/N Ratio	: ≥60dB
File format support (USB/mSD)	: MP3, WMA, WAV
Line input	: 3.5mm
Max supported USB/mSD memory size:	32GB
FM frequency range	: 87.5 MHz - 108 MHz
Charging time	: 8h
Playback time	: 7h*
BT name	: ZEB-SONO 100
BT version	: v5.0
Product Dimension (W x D x H)	: 36.2 x 93.5 cm
Net.Weight	: 10.1 kg

** at 50% volume (LED OFF)*

Package Contents


- Trolley DJ Speaker : 1 U
- Remote : 1 U
- Wireless MIC : 1 U
- QR Code Guide : 1 U
- Input cable : 1 U
- Power Cord : 1 U

Control Description

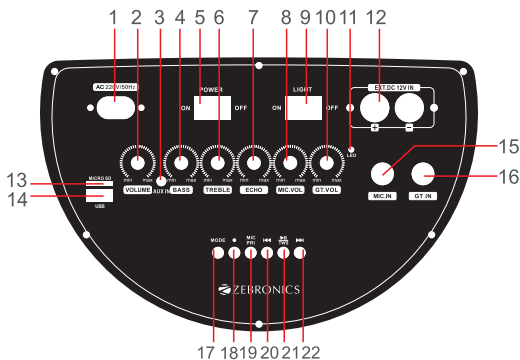

1. AC 220V/50Hz input
2. Volume knob
3. AUX IN
4. Bass knob
5. Power switch
6. Treble knob
7. Microphone Echo knob
8. Microphone Volume knob
9. Light switch
10. Guitar Volume knob
11. Charging indicator
12. External 12V input
13. mSD card port
14. USB port
15. Microphone input
16. Guitar input
17. Input mode change key
(BT/USB/mSD/FM/AUX)
18. Long press the button for 3-5 seconds to record, short press to play the recording.
19. Microphone priority button
20. Previous Track/FM channel key
21. Play/Pause/TWS Connection key
22. Next Track/FM channel key

Remote Control

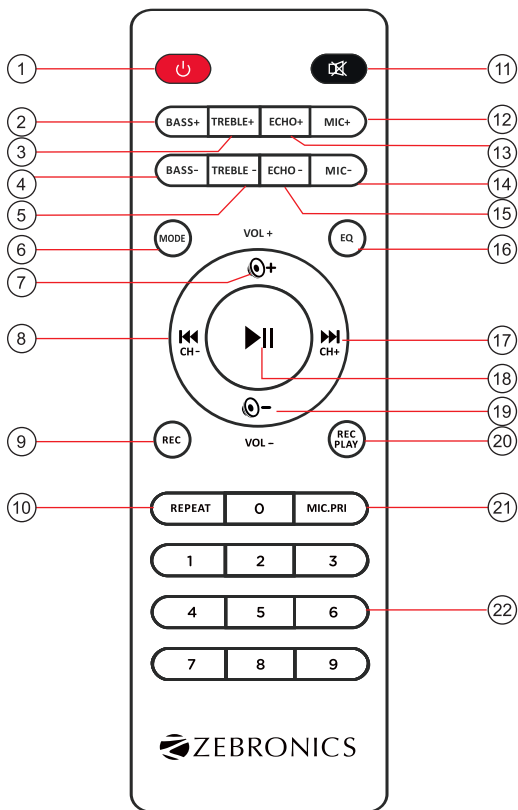

1. Power On-Off
2. Bass volume +
3. Treble volume +
4. Bass volume -
5. Treble volume -
6. Mode change key (BT/AUX/USB/mSD/FM)
7. Volume +
8. Previous track / FM Channel key / Music
Rewind
9. Recording key
10. Repeat key
11. Mute/Unmute key
12. Mic Volume +
13. Echo volume +
14. Mic Volume -
15. Echo volume -
16. Equalizer preset
17. Next track/FM channel key / Music
Forward
18. Play/Pause key
19. Volume -
20. Play recorded file
21. Mic Priority On-Off key
22. Numeric selection key (0-9)

General Instructions

BT Mode

- Switch the speaker to BT mode, Scan for nearby BT devices.
- Tap on BT Name "**ZEB-SONO 100**" to connect.

USB/mSD Mode

- Insert the USB Drive/mSD Card to the speaker it will detect the USB Drive/mSD Card and the audio files from drive will be played automatically.

FM Radio

- Switch the speaker to FM, Now long Press the Play/Pause Key to scan the available FM channels.
- Once the scanning is done the speaker will start playing the first scanned channel.

AUX-IN

- The speaker can be connected to an audio device using a 3.5mm cable.
- Connect the one end of the cable to the speaker & connect the other end of the cable to an audio source.
- The songs from the audio source can be heard through the speaker.

TWS Connectivity:

- Turn on both "ZEB-SONO 100" speakers in BT mode
- Press and hold the Play/Pause button for 3-5 seconds in any one of the speaker to initiate TWS pairing.
- After few seconds both speakers will get connected successfully.
- Now search for nearby BT device in you mobile phone or other source device and tap on BT name ZEB-SONO 100 to connect.
- To exit TWS mode, press and hold the Play/Pause button for 3-5 seconds

Recording Function:

- To record mic input, first plug-in a USB/mSD card into the speaker, it will act as a storage device.
- Press the REC key on the remote to start/stop recording.
- Once the voice is recorded through the Mic, press the REC PLAY key to play the recorded file.

ISO 9001:2015 Certified Company

www.zebronics.com

