

 ZEBRONICS

Trolley DJ Speaker

ZEB **SONO**



**User Manual**

[www.zebronics.com](http://www.zebronics.com)

## **Dear Customer,**

Thank you for purchasing **ZEB - SONO** Trolley DJ Speaker. Please read the user manual carefully before usage & save it for future reference.

### **Note:**

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid the self-disassembly of the products or it results in voiding the product's Warranty.
- Turn off the speaker when the speaker is not in use.

To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

### **Features:**

- BT v5.0 | USB | mSD | FM | AUX | MIC IN x 2
- Multicolor LED lights with On/Off switch
- Remote control
- Wireless Mic
- Volume, Bass & Treble controls
- Mic Volume & Echo Controls
- TWS Function
- Built-in Rechargeable Battery
- Recording
- Karaoke
- Carry Handle with Wheels

## Specification:


Output Power (RMS)	: 80W
Driver Size	: Full range -25.4cm x 2 : Tweeter - 2.54cm x 1
Impedance	: Full range - 4Ω : Tweeter - 16Ω
Frequency response	: 60Hz-18kHz
S/N Ratio	: ≥60dB
File format support (USB/mSD)	: MP3, WAV
Line input	: 3.5mm
Max supported USB/mSD memory size:	32GB
FM frequency range	: 87.5 MHz - 108 MHz
Charging time	: 7h
Playback time	: 7h*
BT name	: ZEB-SONO
BT version	: v5.0
Product Dimension (Dia x H)	: 29.4 x 86.7 cm
Net.Weight	: 7.7 kg

*\* at 50% volume (LED OFF)*

## Package Contents


- Trolley DJ Speaker : 1 U
- Remote : 1 U
- Wireless MIC : 1 U
- QR Code Guide : 1 U
- Input cable : 1 U
- Power Cord : 1 U

## Control Description

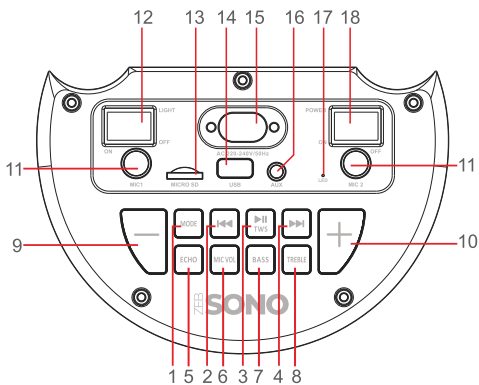

1. Input mode change  
Key(BT/USB/mSD/FM/AUX)
2. Previous Track/FM channel key
3. Play/Pause/TWS Connection key
4. Next Track/FM channel key
5. Short press the key and then press Volume +/- to adjust the microphone echo.
6. Short press the key and then press the volume +/- key to adjust the microphone volume.
7. Short press the button and then press the volume +/- button to adjust the music bass.
8. Short press the key and then press the volume +/- key to adjust the music treble.
9. volume -
10. volume +
11. Microphone input port 1 and port 2
12. Light switch
13. mSD card port
14. USB port
15. AC 220-240V/50Hz input
16. AUX IN
17. Charging indicator
18. Power switch

# Remote Control

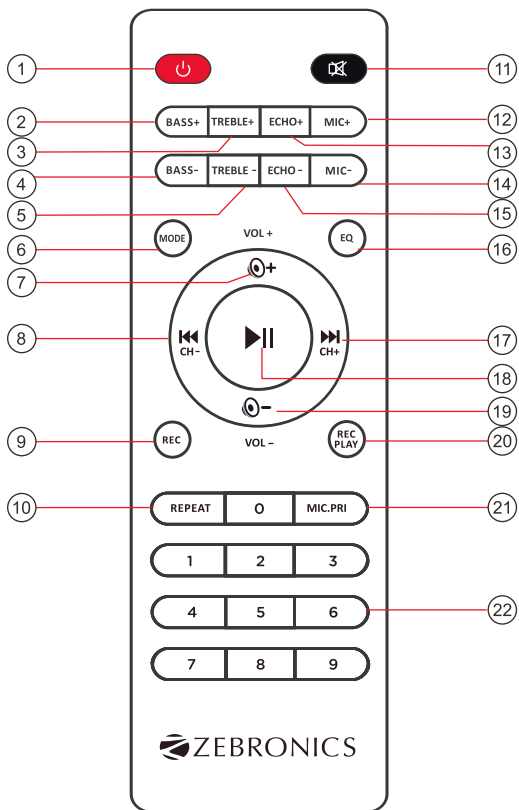

1. Power On-Off
2. Bass volume +
3. Treble volume +
4. Bass volume -
5. Treble volume -
6. Mode change key (BT/AUX/USB/mSD/FM)
7. Volume +
8. Previous track / FM Channel key / Music  
Rewind
9. Recording key
10. Repeat key
11. Mute/Unmute key
12. Mic Volume +
13. Echo volume +
14. Mic Volume -
15. Echo volume -
16. Equalizer preset
17. Next track/FM channel key / Music  
Forward
18. Play/Pause key
19. Volume -
20. Play recorded file
21. Mic Priority On-Off key
22. Numeric selection key (0-9)

## **General Instructions**

### **BT Mode**

- Switch the speaker to BT mode, Scan for nearby BT devices in your device
- Tap on BT Name "**ZEB-SONO**" to connect.

### **USB/mSD Mode**

- Insert the USB Drive/mSD Card to the speaker it will detect the USB Drive/mSD Card and the audio files from drive will be played automatically.

### **FM Radio**

- Switch the speaker to FM, In FM Mode, and long Press the Play/Pause Key to scan the Available FM channels.
- Once the scanning is done, the speaker will start playing the first scanned Channel

### **AUX-IN**

- The speaker can be connected to an audio device using a 3.5mm cable.
- Connect the one end of the cable to the speaker & connect the other end of the cable to an audio source the songs from the audio source can be heard through the speaker.



### **TWS Connectivity:**

- To link the speakers follow the steps below:
- Turn on both “ZEB-SONO” speakers in BT mode.
- Connect the speaker (A) to the cell phone or BT device.
- Press and hold the PLAY/PAUSE button for 3-5 seconds.

### **To unlink them:**

- Press and hold the PLAY/PAUSE button for 3-5 seconds on either.

### **Recording Function:**

- To record a voice, first plug-in a USB/mSD card into the speaker which will act as a storage device.
- Press the REC key on the remote to start/stop recording.
- Once the voice is recorded through the Mic, press the REC PLAY key to play the recorded file

