



Trolley DJ Speaker

ZEB **THUMP111**



User Manual

www.zebronic.com

Dear Customer,

Thank you for purchasing **ZEB-THUMP 111** (Trolley DJ Speaker). Please read this user manual carefully before operation & save this user manual for further reference.

Note:

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid the self-disassembly of the products or it results in voiding the product's Warranty.
- Charge the speaker with included power cable.

To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

Features:

- BT v5.3 | USB | mSD | AUX
- Dual 6.3mm Microphone input
- Wireless MIC
- Karaoke
- TWS Function
- Built-in Rechargeable Battery
- Retractable Handle with Wheels
- Type-C Charging

Specification:

Output Power (RMS)	: 72W
BT Version	: 5.3
Driver Size	: 30.48cm + 2.54cm
Speaker Impedance	: $2.2\Omega + 16\Omega$
Frequency Response	: 65Hz-18kHz
S/N Ratio	: $\geq 58\text{dB}$
Max Supported USB/mSD memory size	: 32GB
FM Frequency range	: 87.5MHz - 108MHz
Supported Audio formats:	MP3 / WAV / WMA
Charging time	: 5h
Playback time	: 7h*
Product Dimension (W x D x H)	: 33 x 27.5 x 51 cm
Net. Weight	: 5.1 kg

Package Contents:


Speaker	: 1 U
Remote	: 1 U
Wireless Mic	: 1 U
MIC Clamp	: 1 U
Charging Cable	: 1 U
Input cable	: 1 U
QR Code Guide	: 1 U

** at 50% volume (LED OFF)*

Charging the Speaker:

- Connect the Type-C charging cable to DC 5V port of the speaker and insert the other end to the adapter.
- Red LED glows indicating that the battery is being charged.
- Red LED goes OFF after speaker gets fully charged.


Control Panel Description

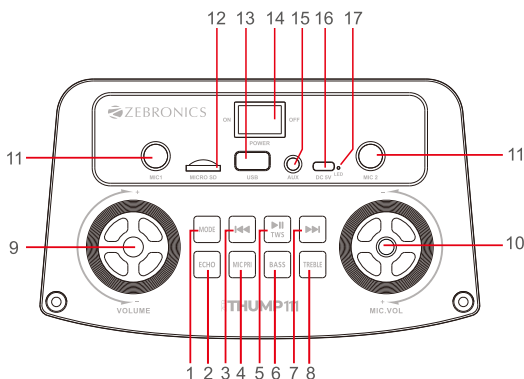

1. Input mode change button & Long press to LED Light control
2. Short press this button and then rotate volume knob to adjust the Mic echo
3. Previous track/FM channel
4. Short press this button to enable the Mic. priority

5. Play/Pause in USB, mSD & BT / Long press for TWS connection
6. Short press this button and then rotate volume knob to adjust the Music bass
7. Next track/FM channel
8. Short press this button and then rotate volume knob to adjust the Music treble
9. Volume knob
10. Mic volume knob
11. Microphone input port 1 and 2
12. mSD slot
13. USB port
14. Power ON/OFF switch
15. AUX IN
16. Type-C Charging
17. Charging indicator

Remote Control

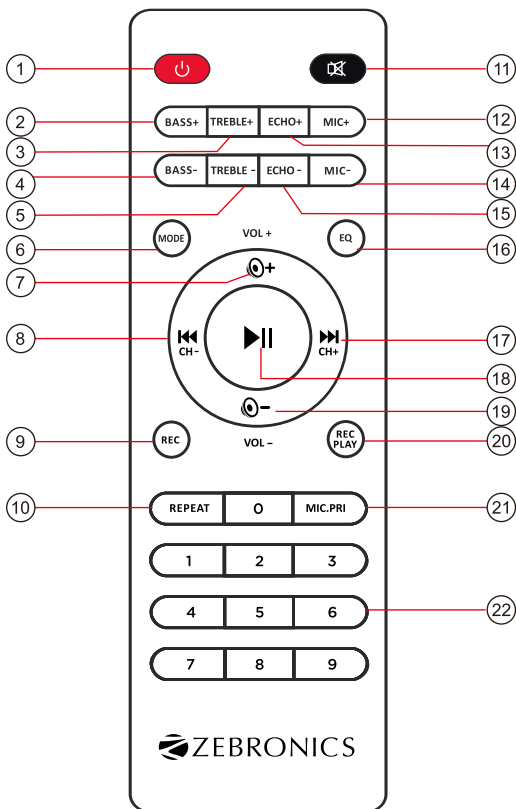

1. Standby/Awake
2. Music bass +
3. Music treble +
4. Music bass -
5. Music treble -
6. Input modes
7. Volume +
8. Previous track/FM channel & Long press for music rewind.
9. Recording
10. Repeat music (works under USB / mSD modes)
11. Mute
12. Mic volume +
13. Mic echo +
14. Mic volume -
15. Mic echo -
16. EQ
17. Next track/FM channel & Long press for music forward.
18. Play/Pause
19. Volume -
20. Play the recorded file
21. Mic priority ON/OFF
22. Numeric keys (0-9) for selecting tracks in USB/mSD & channels in FM

General Instructions

BT Mode

Switch the speaker to BT mode, Scan for nearby BT devices . Tap on BT Name **"ZEB-THUMP 111"** to connect.

USB/mSD Mode

Insert the USB Drive/mSD Card to the speaker it will detect the USB Drive/mSD Card and the audio files from drive will be played automatically.

FM Radio

Switch the speaker to FM, Now long Press the Play/Pause Key to scan the available FM channels. Once the scanning is done the speaker will start playing the first scanned channel.

AUX-IN

The speaker can be connected to an audio device using a 3.5mm cable. Connect the one end of the cable to the speaker & connect the other end of the cable to an audio source. The songs from the audio source can be heard through the speaker.

Note: Bass, Treble & EQ controls cannot be adjusted in AUX mode

TWS Connectivity:

- Turn on both “ZEB-THUMP 111” speakers in BT mode.
- Press and hold the Play/Pause button for 3-5 seconds in any one of the speaker to initiate TWS pairing.
- After few seconds both speakers will get connected successfully.
- Now search for nearby BT device in you mobile phone or other source device and tap on BT name **ZEB-THUMP 111** to connect.

***Note:** To exit TWS mode, press and hold the Play/Pause button for 3-5 seconds*

Recording Function:

To record mic input, first plug-in a USB/mSD card into the speaker, it will act as a storage device. Press the REC key on the remote to start/stop recording. Once the song or voice is recorded through the Mic, press the REC PLAY key to play the recorded file.

