



ZEBRONICS  
ALWAYS AHEAD

Trolley Speaker

ZEB **THUMP**  
**150**



User Manual

[www.zebronics.com](http://www.zebronics.com)

## Dear Consumer,

Thank you for purchasing **"ZEB-THUMP 150"** Trolley Speaker. Please read the user manual carefully before usage & save it for future reference.

### **Note:**

- *Avoid the usage of this product at the high temperature and high humidity environment.*
- *Avoid the self-disassemble of the product or it results in voiding the Warranty.*
- *Turn off the speaker if the speaker is not being used for a long period of time..*

### **Features :**

BT v5.0 / USB / mSD / AUX / FM / Mic In  
LED Display  
TWS Function  
6.5mm Microphone input  
Media / Volume control  
Mic Volume / Echo Control Knob  
Built-in Rechargeable battery  
Wireless MIC  
Retractable Handle with Wheels  
RGB Lights with control button

### **Specifications :**

Output power (RMS) : 24W  
BT Version : v5.0  
Driver size : 20.32cm +2.52cm


Speaker impedance	: 3Ω + 8Ω
Frequency response	: 65Hz-108kHz
S/N Ratio	: ≥60dB
Max. Supported USB / mSD memory size	: 32GB
Supported Audio FM Frequency range	: 87.5MHz - 108MHz
formats	: MP3 / WAV
Charging time	: 3h
Playback time	: 5h*
Product dimension (W x D x H)	: 25.3 x 21.5 x 41.5 cm
Net. weight	: 2.8kg

### **Package contents :**

Speaker	: 1 U
Input Cable	: 1 U
Wireless Mic	: 1 U
Microphone Clamp	: 1 U
Power Cord	: 1 U
QR Code guide	: 1 U

*\*at 50% volume (LED OFF)*

## Buttons Descriptions :

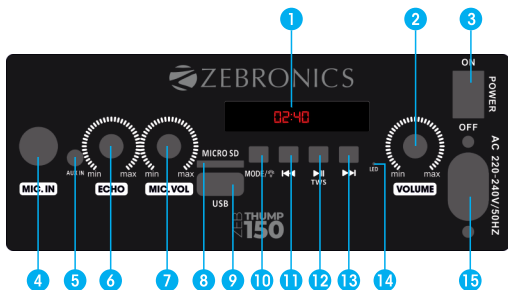

- |   |                    |    |                         |
|---|--------------------|----|-------------------------|
| 1 | LED Display        | 8  | Micro SD Slot           |
| 2 | Volume Control     | 9  | USB Port                |
| 3 | Power On/Off       | 10 | Input Mode / LED Lights |
| 4 | Microphone - Input | 11 | Previous                |
| 5 | AUX INPUT          | 12 | Play/Pause/TWS          |
| 6 | Echo Control       | 13 | Next                    |
| 7 | Mic Volume Control | 14 | LED Indicator           |
|   |                    | 15 | Power supply            |

- **Mode :**  
Short press the MODE button to switch modes between USB/mSD,BT, AUX and FM modes, Long Press the MODE button to change LED modes.
- **Previous Button :**  
Short press the PREVIOUS Button to switch to previous audio track in BT, USB/mSD and FM mode.
- **Play / Pause / TWS :**  
Short press the Play /Pause/TWS button to Play or Pause the speaker.  
Long press the Play /Pause/TWS button to enable TWS function.

- **Next Button :**  
Short press the NEXT Button to switch to previous audio track in BT, USB/mSD and FM mode.
- **Volume / Power knob :**  
Adjust the volume/power knob to adjust the Master volume of the speaker or to turn ON/OFF the speaker
- **AUX input :**  
Auxiliary audio input jack
- **Microphone volume :**
- **Echo :**  
Adjust the echo level of the microphone input.
- **Microphone input :**  
Wired microphone input jack.
- **mSD Port**
- **USB Port**
- **LED Indicator**
- **LED display**
- **Power On/OFF switch**
  
- **Charging instruction :**  
Give Power supply AC 220-240V 50-60Hz to speaker for charging.
  
- **LED Indication :**  
Led is turned off when the battery is full charged.  
Led is lighting when the battery is charging.

- **Multi Connectivity description :**

- **BT Connectivity**

- Once the speaker is on, please make sure that the speaker is in BT mode.
- Now, search for nearby BT device in your mobile and tap on the BT name **"ZEB - THUMP 150"** to connect.
- Short-press "Prev" or "Next" Button to control the media playback.
- Use the Master Volume knob to control the Volume of the speaker.
- Short press "Play/Pause" to Play/Pause the music.

- **USB / Micro SD card Mode :**

- Once the speaker is ON, Insert a USB pen drive / Micro SD card to the respective port of the speaker.
- The speaker will automatically detect the songs from the pen drive / Micro SD card and starts playing it.
- Short-press "Prev" or "Next" Button to control the media playback.
- Use the Master Volume knob to control the Volume of the speaker.
- Short-press "Play/Pause" to Play/Pause the music.

- **FM Radio :**

- Once the speaker is turned ON, Please switch the speaker to FM mode using the Mode button.
- Press the "Play/Pause" key to auto scan the available FM channels.
- Short-press "Prev" or "Next" Button to change the scanned FM channels.
- Use the Master Volume knob to control the volume of the speaker.

- **TWS Function :**

- Turn on both "**ZEB - THUMP 150**" speakers in BT (wireless) mode.
- Connect one of two speakers(it says A) to the Bluetooth device (cell phone, tablet, computer, etc.)
- Press and hold the TWS button on the speaker (A) for 3-5 seconds, "**ZEB - THUMP 150**" A and B are ready for TWS playing.
- The TWS function will be activated and the pairing will be automatic the next time.(if A and B are be linked in TWS).
- To unlink them you must press and hold the button on either of the two speakers (A or B) for 3-5 seconds.

- **AUX-IN :**

Switch the speaker to AUX Mode, Connect one end of the AUX Cable to the speaker & connect the other end to an audio source. The songs played from the audio source can be heard through the speaker.

**ISO 9001:2015 Certified Company**  
**[www.zebronics.com](http://www.zebronics.com)**

