



ZEBRONICS
ALWAYS AHEAD

Portable Trolley Speaker

NEW **THUMP**
200



User Manual

www.zebronics.com

Dear Consumer,

Thank you for purchasing ZEB-THUMP 200 Portable Trolley Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- *Avoid the usage of this product at the high temperature and high humidity environment.*
- *Avoid the self-disassemble of the product as it results in the failure of Warranty.*
- *Turn off the speaker if the speaker is not being used for a long period of time.*

Features

Wireless BT

Supports USB & mSD card

Built-in FM Radio

AUX Input

TWS Function

Media / Volume control

Microphone input jack

Volume, Bass, treble adjustment

RGB Light

Built-in Rechargeable battery

Specifications


Output power (RMS)	: 28W
BT Version	: v5.0
Driver size	: 20.32cm + 5.08cm
Speaker impedance	: 3Ω + 8Ω
Frequency response	: 100Hz-20kHz
S/N Ratio	: ≥80dB
Max. Supported USB / mSD memory size	: 32GB
Supported Audio formats	: Mp3
Charging time	: 4h
Playback time	: 3h*
Product dimension	: 270 x 250 x 470 mm (W x D x H)
Net weight	: 3.5kg

Package contents

Speaker	: 1 U
Wireless Mic	: 1 U
Charging cable	: 1 U
AUX Cable	: 1 U
QR Code Guide	: 1 U

**at 50% volume (LED OFF)*

Buttons Descriptions

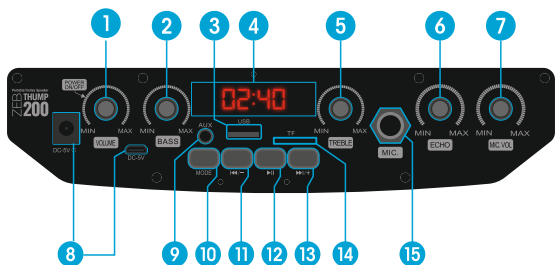

- | | | | |
|---|-------------------------------|----|----------------------|
| 1 | Power On/Off & Volume Control | 9 | Aux |
| 2 | Bass Control | 10 | Mode |
| 3 | USB | 11 | Previous/Volume Down |
| 4 | Display | 12 | Play/Pause |
| 5 | Treble Control | 13 | Next/Volume Up |
| 6 | Echo Control | 14 | Micro SD |
| 7 | Mic Volume Control | 15 | Mic. - In |
| 8 | DC - 5V Input | | |

Button Function:

Power On/off

Turn the volume Knob to Switch On/Off the speaker and it is used for controlling the master volume.

BT Connectivity

- Once the speaker is on, please make sure that the speaker is in BT mode.
- Now, search for nearby BT device in your mobile and tap on the BT name "ZEB-THUMP200" to connect.
- Short-press " ⏮ " or " ⏭ " to control the media.
- Use the Master Volume knob to control the Volume of the speaker.
- Short press "Play/Pause" to Play/Pause the music.

USB / Micro SD card Mode

- Once the speaker is ON, Insert a USB pen drive / Micro SD card to the respective port of the speaker.
- The speaker will automatically detect the songs from the pen drive / Micro SD card and play.
- Short-press " ⏮ " or " ⏭ " to control the media.
- Use the Master Volume knob to control the Volume of the speaker.
- Short-press "Play/Pause" to Play/Pause the music.

FM Radio

- Once the speaker is turned ON, Please switch the speaker to FM mode using the Mode button.

- Press the "Play/Pause" key to auto scan the available FM channels.
- Short-press " ⏪ " or " ⏩ " to change the scanned FM channels.
- Use the Master Volume knob to control the volume of the speaker.

TWS Function

- Turn on two "ZEB-THUMP 200" speakers you want to pair
- Long press the "Mode" button on any one speaker to activate TWS mode.
- After few seconds, both the speakers will be connected successfully.
- Now, search for nearby BT device in your mobile and Tap on the BT name "ZEB-THUMP200" to connect.
- To exit TWS mode, long Press "MODE" button.

Note: Users need to make TWS connection first, then make BT connection with the mobile phone.

AUX-IN:

Switch the speaker to AUX Mode, Connect one end of the AUX Cable to the speaker & connect the other end to an audio source. The songs played from the audio source can be heard through the speaker.

Note:

- Don't keep the speaker near places which are at high temperature.
- Don't open the speaker in order to avoid electrical shock & other accidents
- Turn off the speaker if the speaker is not being used for a long period of time

Charging instruction

Connect the Charging cable/Micro USB cable to the speaker & connect the other end of the cable to a DC 5V adapter.

ISO 9001:2015 Certified Company

www.zebronics.com

