



ZEBRONICS
ALWAYS AHEAD

Trolley Speaker

NEB THUMP
250



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing **ZEB - THUMP 250** Trolley Speaker. Please read the manual carefully before using it and save this user manual for further reference.

Note:

- *Avoid the usage of this product at the high temperature and high humidity environment.*
- *Avoid the self disassembly of the product or it results in voiding your warranty.*
- *Turn off the speaker if the speaker is not being used for a long period of time.*

Features:

- BT v5.0 / USB / mSD / AUX / FM / Mic In
- LED Display
- TWS Function
- 6.5mm Microphone input
- Media / Volume control
- Mic Volume / Echo Control Knob
- Built-in Rechargeable battery
- Wireless MIC
- Retractable Handle with Wheels
- RGB Lights with control button

Specifications:

Output Power (RMS)	: 24W
BT Version	: 5.0
Driver Size	: 20.32cm + 2.52cm
Speaker Impedance	: 3Ω + 8Ω
Frequency Response	: 65Hz-18kHz


S/N Ratio	: ≥60dB
Max Supported USB/mSD memory size	: 32GB
FM Frequency range	: 87.5MHz - 108MHz
Supported Audio formats	: MP3 / WAV
Charging time	: 3h
Playback time	: 5h*
Product Dimension (W x D x H)	: 25.5 x 22 x 41.5 cm
Net. Weight	: 2.85 Kg

Package Content

Speaker	: 1 U
Input Cable	: 1 U
Wireless MIC	: 1 U
Microphone Clamp	: 1 U
Power Cord	: 1 U
QR Code Guide	: 1 U

** at 50% volume (with LED off)*

Button Description

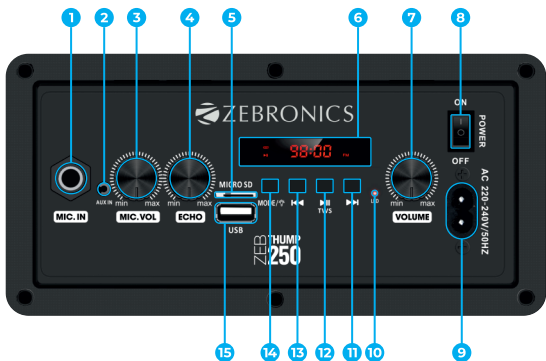

- 1 MIC In
- 2 AUX In
- 3 MIC Volume Control
- 4 Echo Control
- 5 Micro SD Slot
- 6 LED Display
- 7 Volume Control
- 8 Power ON/OFF Switch
- 9 AC Power Input
- 10 LED Indicator
- 11 Next Track
- 12 Play/Pause/TWS
- 13 Previous
- 14 Mode/LED control
- 15 USB

BT Mode

- Once the speaker is on, please make sure that the speaker is in BT mode.
- Now, search for nearby BT device in your mobile and tap on the BT name "ZEB-THUMP 250" to connect.
- Short-press "⏮" or "⏭" to control the media.
- Use the Master Volume knob to control the Volume of the speaker.
- Short press "⏮" to Play/Pause the music.

USB / Micro SD card Mode

- Once the speaker is ON, Insert a USB pen drive /Micro SD card to the respective port of the speaker.
- The speaker will automatically detect the songs from the pen drive / Micro SD card & play.
- Short-press "⏮" or "⏭" to control the media.
- Use the Master Volume knob to control the Volume of the speaker.
- Short-press "⏮" to Play/Pause the music.

FM Radio

- Once the speaker is turned ON, Please switch the speaker to FM mode using the Mode button.
- Press the "⏮" key to auto scan the available FM channels.
- Short-press "⏮" or "⏭" to change the scanned FM channels.
- Use the Master Volume knob to control the volume of the speaker.

TWS Function

- Turn on two ZEB-THUMP 250 speakers you want to pair
- Long press the “▶||” button on any one speaker to activate TWS mode.
- After few seconds, both the speakers will be connected successfully.
- Now, search for nearby BT device in your mobile and Tap on the BT name “ZEB-THUMP 250” to connect.
- To exit TWS mode, long Press “▶||” button.

Note: *Users need to make TWS connection first, then make BT connection with the mobile phone.*

AUX-In

Switch the speaker to AUX Mode, Connect one end of the AUX Cable to the speaker & connect the other end to an audio source. The songs played from the audio source can be heard through the speaker.

Charging instruction

Connect the Charging cable cable to the speaker & connect the other end of the cable to a AC 220-240 50/60Hz power outlet.

ISO 9001:2015 Certified Company

www.zebrionics.com

