

 ZEBRONICS

Portable Trolley Speaker

 **THUMP**
500



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing **ZEB-THUMP 500** Portable BT Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid the self-disassemble of the product as it results in the failure of Warranty.
- Turn off the speaker if the speaker is not being used for a long period of time.
- Please charge the product with power adapter output rated voltage DC 5V.

To know more about Terms and conditions for warranty policy, please visit:

<https://zebronics.com/pages/warranty-policy>

Features

Wireless BT

Supports USB & mSD

AUX

Built-in FM Radio

LED Display

TWS Function

6.3mm Microphone Input


Media/Volume Control
Volume, Bass & Treble Control
Built-in Rechargeable Battery
Wireless MIC
RGB Lights with Control Switch

Specifications

Output Power (RMS)	: 45W
BT Version	: v5.0
BT Name	: ZEB-THUMP 500
Driver Size	: 30.48 cm + 2.54 cm
Speaker Impedance	: 3Ω + 10Ω
Frequency Response	: 100Hz-20kHz
S/N Ratio	: ≥ 80dB
Max Supported	
USB/mSD memory size	: 32GB
FM Frequency range	: 87.5 MHz - 108 MHz
Supported	
Audio formats	: Mp3
Charging time	: 6H
Playback time	: 3H*
Product Dimension	: 36 x 32 x 53 cm
(W x D x H)	
Net. Weight	: 5.4kg

* at 50% volume (with LED off)

Buttons Description

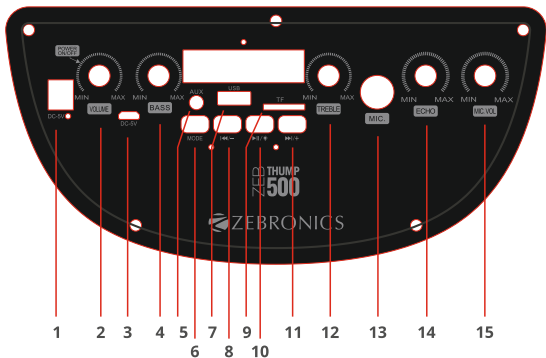

- | | |
|---------------------------------|-------------------------|
| 1. DC 5V | 10. Play/Pause & RGB |
| 2. Master Volume / Power ON/OFF | 11. Next / Vol + |
| 3. mUSB DC 5V | 12. Treble Control |
| 4. Bass Control | 13. Mic. Port |
| 5. AUX | 14. Echo control |
| 6. Mode Button | 15. Mic. Volume Control |
| 7. USB port | |
| 8. Prev. / Vol - | |
| 9. mSD Port | |

Instruction for Use:

Button Function:

1. Turn the speaker ON/OFF using the power switch.
2. Press mode button to change it to BT mode.
3. Use Master volume control knob to increase / decrease the volume.
4. Use MIC volume control knob to increase / decrease the MIC volume.
5. Press Prev/Next button to control the media.
6. Press Play-Pause button to play song or pause song being played.
7. Press & Hold the Play/Pause to change the RGB Light.

Pairing with the Bluetooth speaker:

1. Power ON the Speaker and you will hear the indication tone for the BT mode.
2. Turn ON BT on your phone or tablet and search for the nearby BT compatible devices.
3. Search for the BT name "**ZEB-THUMP 500**" and tap to connect it.

Micro SD / USB Mode:

Once the speaker is ON, insert the micro SD card / USB drive to the respective ports of the "**ZEB-THUMP 500**" and the speaker will automatically detect the songs from the USB drive/Micro SD card and play.

Press Prev/Next button to control the media.

Use the Master volume knob to control the volume of the speaker.

FM Radio:

Once the speaker is turned ON, please switch the speaker to FM mode using the Mode button, Press Play-Pause button to auto scan the available FM channels.

Use Prev/Next button to change the FM channels.

***Note:** For better FM reception, Please use the provided AUX Cable.*

TWS Function:

- Switch ON two **“ZEB-THUMP 500”** speakers you want to pair.
- Press & hold the Mode button for 5-10 seconds in any one speaker to activate TWS mode.
- After few seconds, both the speakers will be connected successfully.
- Now, search for nearby BT device in your mobile and Tap on the BT name **“ZEB-THUMP 500”** to connect.
- To exit TWS mode, Press & hold mode button for 5-10 seconds in any one speaker to exit from TWS mode.

Charging the Speaker:

1. Connect the charging cable to DC 5V port of the speaker and insert the other end into a DC 5V charging power source/adaptor.
2. Red LED glows indicating that the battery is being charged.
3. Red LED goes OFF after speaker gets fully charged.

