

 ZEBRONICS

Trolley DJ Speaker

ZEB **THUMP**
650



User Manual

www.zebronics.com

Thank you for purchasing the **ZEB-THUMP 650** Trolley DJ Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this speaker at the high temperature and high humidity environment.
- Avoid the self-disassembly of the product as it results in the failure of Warranty.

Features

BT v5.0 / USB / mSD / AUX / FM / Mic In

LED Display

TWS Function

6.3mm Microphone input

Media/Volume control

Volume, Bass & Treble Control

Mic Volume / Echo Control Knob

Wireless MIC

RGB Lights with control switch

Karaoke/Recording

Handle with Wheels

Supports external battery

Specifications

Output power (RMS) : 40W

BT Version : 5.0

Driver size : (20.32cm x 2) +
2.52cm

Speaker Impedance : 4Ω + 16Ω


Frequency response	: 65Hz-18kHz
S/N Ratio	: ≥65dB
Max Supported USB/ mSD memory size	: 32GB
FM Frequency range	: 87.5MHz - 108MHz
Supported Audio formats	: MP3 / WAV / WMA
Charging time	: 8h
Playback time	: 15h*
Product Dimension (Dia x H)	: 28.5 x 81 cm
Net. Weight	: 6.3 Kg

Package Content

Speaker	: 1 U
Input Cable	: 1 U
Remote Control	: 1 U
Wireless MIC	: 1 U
Microphone Clamp	: 1 U
Power Cord	: 1 U
QR Code Guide	: 1 U


**at 50% Volume (LED OFF)*

Control Panel Description

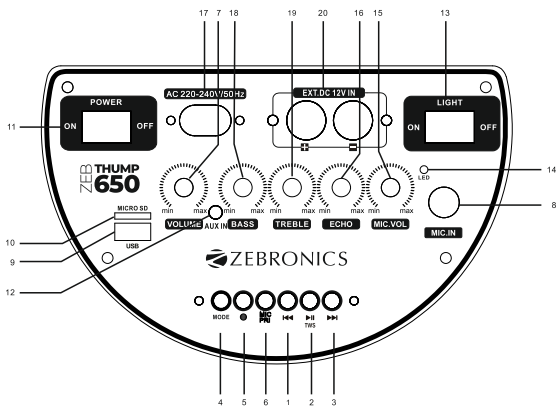

1. Previous Track/FM Channel Key
2. Play/Pause Key/TWS
3. Next Track/FM Channel Key
4. Mode Change Key
5. Start Recording Key
Long Press to Recording
Short Press to Play Recorded File.
6. Mic Priority On-Off Key
7. Master Volume Control
8. Microphone Input Jack
9. USB Port
10. Micro SD Card Port
11. Power Switch
12. AUX IN
13. Light Switch
14. LED Indicator
15. Mic Volume Control
16. Echo Control
17. AC Input
18. Bass Control
19. Treble Control
20. External 12V
Battery Terminals

Remote Control

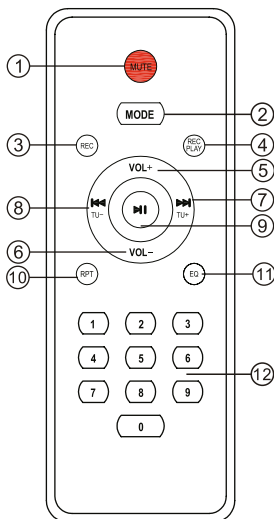

1. Mute/Unmute
2. Mode Change Key
3. Recording Key
4. Play Recorded File
5. Volume +
6. Volume -
7. Next Track/FM Channel Key
8. Previous Track/FM Channel Key
9. Play/Pause Key
10. Repeat Key
11. EQ Preset
12. Numeric Selection (0-9)

General Instructions

BT connectivity

Switch the speaker to BT mode, scan for nearby BT devices in your mobile. Tap on **ZEB-THUMP 650** to connect.

TWS Connectivity

- Switch ON two "**ZEB-THUMP 650**" speakers you want to pair.
- Press & hold the **Play/Pause TWS** button for 5-10 seconds in any one speaker to activate TWS mode.
- After few seconds, both the speakers will be connected successfully.
- Now, search for nearby BT device in your mobile and Tap on the BT name "**ZEB-THUMP 650**" to connect
- To exit TWS mode, press & hold **Play/Pause TWS** button for 5-10 seconds in any one speaker.

USB/Micro SD Mode

Insert the USB/Micro SD card to the speaker. The speaker will detect the USB/Micro SD card automatically & the songs from it will be played.

FM Radio

Switch the speaker to FM, In FM Mode,

long Press the Play/Pause Key to scan the available FM channels. Once the scanning is done, The speaker will start playing the first scanned channel.

AUX-In

The speaker can be connected to an audio device using a 3.5mm cable. Connect the one end of the cable to the speaker & connect the other end of the cable to an audio source. The songs from the audio source can be heard through the speaker.

Recording Function

To record a voice, first plug-in a USB/Micro SD card into the speaker which will act as a storage device. Press the REC. key on the remote to start/stop recording. Once the song or voice is recorded through the mic, press the REC. PLAY key to play the recorded file.

Note: Speaker can record the Mic input

Charging Indication:

Low Charge : Red LED Flashing

Full Charge : Red LED Glows

ISO 9001:2015 Certified Company

www.zebronics.com

