 




Trolley DJ Speaker

**ZEB** **VIGORPLUS**

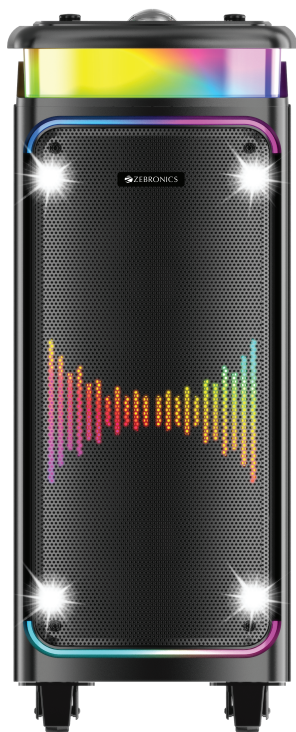

**User Manual**

[www.zebronics.com](http://www.zebronics.com)

Thank you for purchasing the **“ZEB-VIGOR PLUS”** Trolley DJ Speaker. Please read this user manual carefully before operation & save it for future reference.

**Note:**

- Avoid the use of this product at the high-temperature and high humidity environment.
- Avoid the self-disassembling of the product or it will result in voiding the Product's warranty.
- To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

**Features:**

- Dual 20.32 cm Full Range
- TWS Function
- Karaoke & Recording Function
- Dual Wireless MIC
- Multiconnectivity (BT v5.0 | USB | mSD | AUX | FM )
- LED Display
- Built-in Rechargeable Battery
- Remote control
- Carry Handle & Wheels
- RGB Lights
- Dual 6.3mm Microphone input
- Dedicated Control Buttons



- Mic Volume & Echo controls
- Volume, Bass & Treble controls
- Mic priority

### **Specifications:**

BT name : ZEB-VIGOR PLUS

BT version : v5.0

Output Power (RMS) : 140W

Driver Size

Full range : 20.32cm x 2

Tweeter : 2.54 cm

Impedance

Full range : 4Ω

Tweeter : 8Ω

Frequency Response : 65Hz-18kHz

S/N Ratio : ≥60dB

File format support

(USB/mSD) : MP3

Line input : 3.5mm

Max Supported

USB/mSD memory size : 32GB

FM frequency range : 87.5 MHz - 108 MHz

Charging time : 9.8h

Playback time : 5h\*

Product Dimension

(W x D x H) : 30.5 x 33.7 x 78.7 cm

Net. Weight : 12 kg

 
*\* at 50% volume(LED off)*

## Package Contents:

Speaker	: 1 U
Remote	: 1 U
Wireless Mic	: 2 U
Power Cord	: 1 U
Input cable	: 1 U
QR Code Guide	: 1 U
Microphone Clamp	: 2 U

## Product Description:


## Control Panel Description:

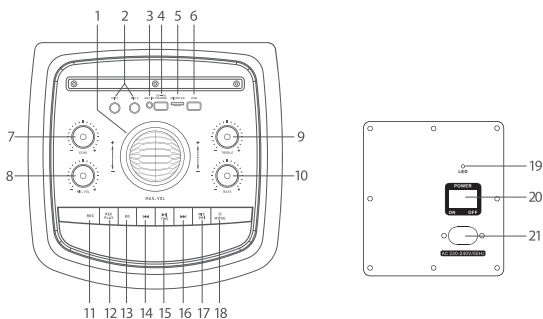

1. Master Volume Control
2. 6.3mm MIC Input
3. AUX input

4. DC 5V Charging output
5. mSD Port
6. USB Port
7. MIC Echo Control
8. MIC Volume Control
9. Treble Control
10. Bass Control
11. Recording
12. Record Play
13. EQ
14. Previous Track / Previous Channel
15. Play/Pause
16. Next Track / Next Channel
17. MIC Priority
18. Mode
19. Charging Indicator
20. Power Switch
21. AC Input

## REMOTE CONTROL:

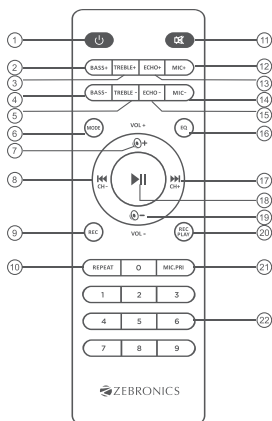 

1. Power On-Off
2. Bass volume +
3. Treble volume +
4. Bass volume -
5. Treble volume -
6. Mode change key (BT/AUX/USB/mSD/FM)
7. Volume +
8. Previous track / FM Channel key / Music Rewind
9. Recording key
10. Repeat key
11. Mute / Unmute key
12. Mic Volume +
13. Echo volume +

14. Mic Volume -
15. Echo volume -
16. Equalizer preset
17. Next track / FM channel key / Music Forward
18. Play / Pause key
19. Volume -
20. Play recorded file
21. Mic Priority On-Off key
22. Numeric selection key (0-9)

## **General Instructions**

### **BT Connectivity:**

- Switch the speaker to BT mode, scan for nearby BT devices in your source device (Mobile/ Tablet).
- Tap on **“ZEB-VIGOR PLUS”** to connect.

### **USB/mSD Mode:**

- Insert the USB/mSD card to the speaker. The speaker will detect the USB Drive/mSD card and the audio Files from drive will be played automatically.

### **FM Radio:**

- Switch the speaker to FM, In FM mode, Long press the Play/pause key to scan the available FM channels. Once the scanning is done, The speaker will start playing the first scanned channel.

### **AUX-IN:**

- The speaker can be connected to an audio Device using a 3.5mm cable.
- Connect the one end of the cable to the speaker and Connect the other end of the cable to an audio source. The songs from the audio source can be heard through the speaker.

### **TWS Function:**

- Turn on both **"ZEB-VIGOR PLUS"** Speakers in BT mode.
- Press and hold the Play/Pause Button for 3-5 Seconds in any one the speaker to initiate TWS pairing.
- After Few seconds both speakers will get connected Successfully.
- Now Search for nearby BT Devices in your Mobile phone or other source device and tap on BT name **"ZEB-VIGOR PLUS"** to Connect

*Note: Requires two "ZEB-VIGOR PLUS" speakers for using TWS feature. To unlink them Press and hold the PLAY/PAUSE button for 3-5 seconds on either.*

### **Recording Function:**

- First Plug-in a USB/SD Flash card which will act as a storage device into the slot provided in the speaker.
- Press the REC button on the speaker or REC on the remote to Start /Stop the Recording.
- Press the REC PLAY button on the speaker or REC PLAY on the remote to play the Recorded file.

### **Charging the speaker:**

- Connect the AC cord to charge the speaker.
- RED LED Will be Flash while Charging.
- Once the speaker is Fully Charged, The RED LED Glows.

