



ZEBRONICS
ALWAYS AHEAD

2.1 Speaker ZEB BT2121RUCF



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing the **ZEB-BT2121RUCF** 2.1 Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this speaker at the high temperature and high humidity environment.
- Avoid the self-disassembly of the product as it results in the failure of Warranty.
- Please turn off the power and pull out the plug, when the speaker is not in use.

Features

2.1 channel speaker

Wireless BT/USB/mSD/AUX/FM

LED Display

10.16cm subwoofer

Remote control

LED Power indicator

Volume and bass control

Specifications

Output power (RMS)

Subwoofer : 15W

Satellite : 10W x 2

Total : 35W

Driver size

Subwoofer : 10.16 cm

Satellite : 7.62 cm x 2

Impedance

Subwoofer : 8Ω

Satellite : 4Ω

Frequency response : 40Hz - 20kHz

S/N Ratio : ≥80dB

Separation : ≥45dB

File format

support (USB/mSD) : MP3

Line input : 2ch RCA

Max. supported

memory size

(USB/mSD) : 32GB

FM frequency range : 87 MHz-108 MHz

BT name : Zebronics

BT version : 5.1

Product dimension (W x D x H)

Subwoofer : 150 x 250 x 205 mm

Satellite : 96 x 90 x 135 mm

Net. weight

Subwoofer : 1.4 Kg

Satellite : 290 g

Total : 1.98 Kg

Package Content

Subwoofer : 1 U

Satellite : 2 U

Remote : 1 U

Input Cable : 1 U


QR Code Guide : 1 U

Control Description



- Mode button
- Volume control
- Previous track/FM channel-
- Play/Pause
- Next Song/FM channel+
- Bass control
- USB/mSD slot
- LED display

Remote control

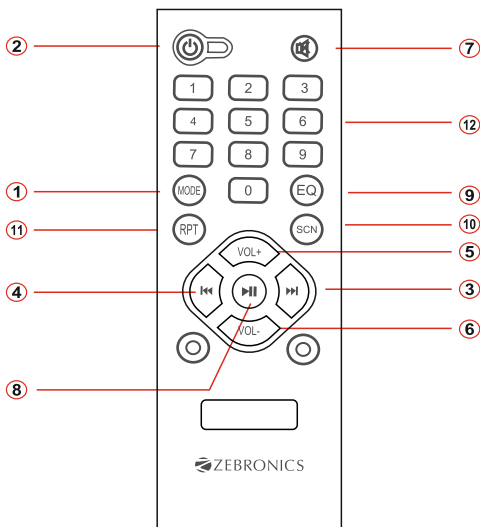

- Mode button
- Power Button
- Next Track / Channel Button
- Prev. Track / Channel Button
- Vol+ Button
- Vol- Button
- Mute ON/OFF Button
- Play / Pause
- EQ Select Button
- Scan Button
- Repeat Select Button
- Numeric Select Button

Instructions for Use:

Button functions

1. Press the **“Input”** button to change the input mode (BT/ USB/ FM/AUX) of the speaker.
2. Short press the **“Next/Prev”** button to change the Prev/ Next track or channel when in BT/USB mode or FM mode respectively.
3. Long press the **“Next/Prev”** button to increase/decrease the speaker volume.
4. Short press the **“PP/SCAN”** button to Play/Pause the track being played or Mute/Unmute when in BT/USB mode or FM/AUX mode respectively.
5. Press and Hold the **“PP/SCAN”** button to Scan for the available FM channels.

General Instructions

BT Mode:

Switch the Speaker to BT mode, Scan for nearby BT devices in your mobile. Tap on **“Zebronics”** to connect.

USB Mode:

Insert the USB/Micro SD card to the speaker. The speaker will detect the USB/Micro SD & audio from it will be played automatically.

FM radio:

Switch the speaker to FM mode. In FM Mode, long press the Play/Pause key to scan the available FM channels. Once the scanning is done, the speaker will start playing the first scanned channel. The next and prev. buttons can be used to change the FM channels.

AUX-IN:

The speaker can be connected to an audio device using audio cable. Connect the one end of the cable to the speaker & connect the other end of the cable to an audio source. The songs from the audio source can be heard through the speaker.

