



mini sound bar

ZEB **Juke Bar**  
ZEB **1500**



**User Manual**

[www.zebronics.com](http://www.zebronics.com)



## Important Safety Instruction

Thank you for purchasing the **ZEB-JUKE BAR 1500** mini soundbar. Please read this user manual carefully and keep for future reference.

### Note:

Avoid the use of this product at the high temperature and high humidity environment.

Avoid self-disassemble of product, or it will result in the failure of warranty.

Please charge the product with power adapter output rated voltage DC 5V 2A.

### Features:

Multi Connectivity (BT v5.0 | mSD | AUX)

LED indicator

Compact Sound Bar with Dual Drivers

Glossy Finish

Built-in Rechargeable battery

### Specification

Output Power (RMS) : 20W (10W + 10W)

Driver Size : 5.71cm x 2

Impedance :  $3\Omega \times 2$

Frequency response : 20Hz-20kHz

S/N Ratio :  $\geq 65\text{dB}$

Separation :  $\geq 40\text{dB}$

File format support (mSD): Mp3

Line input : 3.5mm

Max supported

memory size (mSD) : 16GB

BT name : ZEB-JUKE BAR 1500


BT version : v5.0

Product Dimension

(W x D x H) : 41 x 8.5 x 6.5 cm

Net.Weight : 825g

## Product Diagram:

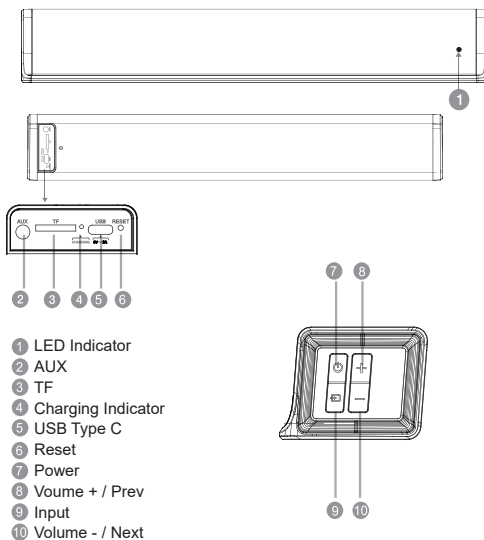

## **BUTTON FUNCTIONS:**

1. Press the INPUT button to change the input mode of the speaker.
2. Long press the Volume- button to change the Next track when in BT / mSD mode. Short press the button to decrease the speaker volume.
3. Long press the Volume + button to go to the Previous track in BT / mSD mode. Short press the button to increase the speaker volume.
4. Double Press the Power button to Play/Pause the track being played.

## **Operate Instructions**

### **Setting the speaker**

1. Switch the soundbar on/off by pressing the power button on the mini soundbar.
2. Select the input mode by pressing the INPUT button on the mini soundbar.
3. The indicator can change to different colors , representing different states.

Blue = BT Mode

Green = AUX

Pink = TF Mode

## **Instructions for Use:**

### **Charging the Speaker**

1. Connect the USB charging cable to the Type-C USB Charging port of the speaker and insert the other end into a USB Power source/adaptor (5V, 2A).
2. Red LED glows indicating that the battery is being charged. The Green LED will turn on once it is fully charged.

## Pairing your device with Bluetooth of the Speaker.

1. Power ON the speaker until you hear the indication tone for Bluetooth mode.
2. Switch ON BT in your phone or tablet and search for near by BT devices.
3. Search for the BT name **ZEB-JUKEBAR 1500** and tap to connect it.

## Micro SD mode

Insert the Micro SD card to the respective port of ZEB-JUKEBAR 1500" and the speaker would automatically start playing songs from the Micro SD card.

## AUX mode

Connect the speaker to an audio source (Phone/Laptop) using a 3.5mm to 3.5mm AUX cable. Once connected, speaker automatically changes to AUX mode and there after audio can be streamed via the speaker from the connected source.



AUX: Green



ISO 9001:2015 Certified Company

[www.zebronics.com](http://www.zebronics.com)