



Mini Soundbar
NEB JUKE BAR
NEB1600



User Manual

www.zebronics.com

Thank you for purchasing the **ZEB-JUKE BAR 1600** Mini Soundbar. Please read this user manual carefully and keep for future reference.

Note:

- Avoid the use of this product at the high temperature and high humidity environment.
- Avoid self-disassemble of product, or it will result in the failure of warranty.
- Please charge the product with power adapter output rated voltage DC 5V 2A.

Features:

Multi Connectivity (BT v5.0 | mSD | AUX)

LED Indicator

Compact Sound Bar with Dual Drivers

Glossy Finish

Built-in Rechargeable Battery

Type-C Charging

Specification

Output Power (RMS) : 30W (15W + 15W)

Driver Size : 5.71cm x 2

Impedance : $3\Omega \times 2$

Frequency Response : 90Hz-18kHz

S/N Ratio : $\geq 65\text{dB}$

Separation : $\geq 40\text{dB}$

File Format Support : MP3 (mSD)

Line Input : 3.5mm

Max Supported


Memory Size (mSD) : 16GB

BT Name : ZEB-JUKE BAR 1600

BT Version : v5.0

Product Dimension : 50 x 7.7 x 6.6 cm
(W x D x H)
Net. Weight : 815g

Product Diagram:

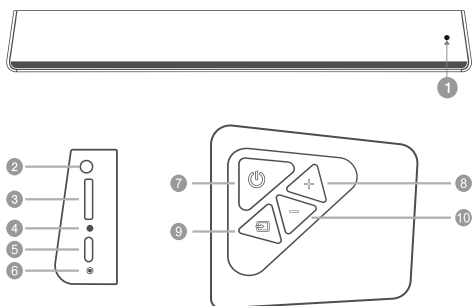

- ① LED Indicator
- ② AUX
- ③ TF
- ④ Charging Indicator
- ⑤ USB Type C
- ⑥ Reset
- ⑦ Power
- ⑧ Volume + / Next
- ⑨ Input
- ⑩ Volume - / Previous

Button Functions:

1. Press the INPUT button to change the input mode of the speaker.
2. Long press the Volume- button to change the Previous track when in BT / mSD mode. Short press the button to decrease the speaker volume.
3. Long press the Volume+ button to go to the Next track in BT / mSD mode. Short press the button to increase the speaker volume.
4. Double Press the Power button to Play/Pause the track being played.

Operate Instructions

Setting the speaker

1. Switch the soundbar on/off by pressing the power button on the mini soundbar.
2. Select the input mode by pressing the INPUT button on the mini soundbar.
3. The indicator can change to different colors, representing different states.

Blue :BT Mode Green :AUX

Pink :TF Mode

Instructions for Use:

Charging the Speaker

1. Connect the USB charging cable to the Type-C USB Charging port of the speaker and insert the other end into a USB Power source/adaptor (5V, 2A).
2. Red LED glows indicating that the battery

is being charged. The Green LED will turn on once it is fully charged.

Pairing your device with BT of the Speaker.

1. Power ON the speaker until you hear the indication tone for BT mode.
2. Switch ON BT in your phone or tablet and search for near by BT devices.
3. Search for the BT name **ZEB-JUKE BAR 1600** and tap to connect it.

Micro SD mode

Insert the Micro SD card to the respective port of ZEB-JUKE BAR 1600 and the speaker would automatically start playing songs from the Micro SD card.

AUX mode

Connect the speaker to an audio source (Phone/Laptop) using a 3.5mm to 3.5mm AUX cable. Once connected, speaker automatically changes to AUX mode and there after audio can be streamed via the speaker from the connected source.

ISO 9001:2015 Certified Company

www.zebronics.com

