

# Mini Soundbar



**User Manual** 

www.zebronics.com

Thank you for purchasing **Zebronics VITA 101** Mini Soundbar. Please read this user manual carefully before operation & save it for future reference.

## Note:

- Avoid the use of this product at the hightemperature and high humidity environment.
- Avoid self-disassemble of product, or it will result in the failure of warranty.
- Please charge the product with power adapter output rated voltage DC 5V.

## Features:

BT v5.0
Supports USB & mSD Card
Built-in FM Radio
AUX Input
Call Function
Media / Volume Control
Built-in Rechargeable Battery
Dual Passive Radiators
LED Lights
TWS Function

## **Specifications:**

Output power (RMS) : 10W (5W +5W)

BT version : 5.0

Driver Size : 50mm x 2

Speaker Impedance :  $3\Omega$ 

Frequency Response : 20Hz-20kHz

S/N Ratio :≥80dB

Max. Supported

USB/mSD Memory Size : 32GB

Supported

Audio Formats : MP3
Charging Time : 4h
Playback Time : 13h\*

Product Dimension : 42 x 6 x 6.2 cm

 
(Dia x H)

Net. Weight : 698g


## **Package Contents**

Speaker : 1 U
Type-C Charging/3.5mm AUX Cable : 1 U
QR Code Guide : 1 U

## **Buttons and Ports**



- 1. Volume / Previous Track / Previous Channel (FM)
- 2. Play/Pause / Call Accept / Call End / Long Press for LED Mode Change
- 3. Volume + / Next Track / Next Channel (FM)
- 4. MFB (Multi Function Button) Power On/Off / Mode / TWS

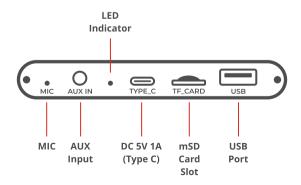

## **Button Functions**

- 1. Long press "**MFB**" button to power On/Off the speaker.
- 2. Long press the "+/-" button to change the NEXT/ PREV track or channel when in BT /USB/mSD mode or FM mode respectively.
- 3. Short press the "+/-" button to increase/ decrease the speaker volume.
- 4. Short press "**Play/Pause**" button to Play/Pause track or channel when in BT /USB/mSD mode or FM mode respectively.
- 5. During Calls, Short press the "**Play/Pause**" button to Attend /End call.
- 6. Long press the "**Play/Pause**" button to Reject the incoming call.
- 7. Double press the "**Play/Pause**" the button to redial the last dialed number.
- 8. Double press the "**MFB**" button for TWS Function

# Instructions for Use: Charging the Speaker

- 1. Connect the Type-C charging cable to the DC 5V 1A charging port of the speaker and insert the other end into a USB power adaptor.
- 2. Red LED glows indicating that the battery is being charged.

3. The Red LED will turn off once it is fully charged.

## **BT Mode**

Power on the Speaker, it will enter into BT paring mode, open Bluetooth settings in your phone and search for the BT name "ZEB VITA 101" and tap to connect it.

## **USB/Micro SD Mode**

Connect the USB/MICRO SD card device to the respective ports of **Zebronics VITA 101** and the speaker would automatically start playing from the USB/micro SD card device.

## **AUX Mode**

Connect the speaker to an audio source (Phone, TV, and PC) using 3.5mm AUX Cable. Once Connected, change the speaker to the AUX Mode and thereafter audio can be streamed via the speaker from the connected source.

## **FM Radio Mode**

Short press "MFB" button can switch to FM Mode Once the Speaker is in FM mode, short press the "Play/Pause" button once to Start Scanning for FM Channels. Once Scanning is Complete, long press the "+/-" button to change the channels.

**Note :** Connect the charging cable for better FM reception.

## TWS (True Wireless Stereo) function

When Two Speaker are in Bluetooth Mode, double press "MFB" button on one Speaker to enter TWS mode, it will search and connect with another speaker automatically, when two speakers connected successfully, you can control two speaker at the same time.

**Note:** Buy another **Zebronics VITA 101** for true wireless stereo (TWS) setup.

To know more about Terms and conditions for warranty policy, please visit

https://zebronics.com/pages/warranty-policy

ISO 9001:2015 Certified Company www.zebronics.com