



Tower Speaker
BEAST 100



User Manual

www.zebronics.com

Thank you for purchasing **ZEB-BEAST 100 TowerSpeaker** Please read this user manual carefully and keep it for future reference.

Note:

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid the self-disassembly of the products or it results in the voiding the product's Warranty.
- Turn off the speaker when the speaker is not in use.

To know more about Terms and conditions for warranty policy, please visit,

<https://zebronics.com/pages/warranty-policy>

Features

Wireless BT v5.0 / USB / FM / AUX / MIC Input
LED Display
13.33cm Subwoofer
Remote Control
Karaoke Function
6.3mm Microphone Input
Integrated Media Control for Audio & Mic

Specification

Output Power (RMS) :70W

Driver Size


Subwoofer :13.33 cm

Mid Range	: 7.62 cm
Impedance	
Subwoofer	: 8Ω
Mid Range	: 4Ω x 2
Frequency response	: 20Hz to 20kHz
S/N Ratio	: ≥ 68dB
Separation	: ≥ 45dB
File format	
support(USB)	: MP3
Line input	: 2ch RCA
Max supported	
USB memory size	: 32GB
FM frequency	
scan range	: 87.5 to 108 MHz
BT name	: ZEB-BEAST 100
BT version	: 5.0
Product Dimensions	: 27.5 x 20 x 51.5 cm
(W x D x H)	
Net. Weight	: 6.9 kg


Package Content

Speaker	: 1 U
Remote	: 1 U
Input Cable	: 1 U
Wired Microphone	: 1 U
QR Code Guide	: 1 U

Top Panel Description

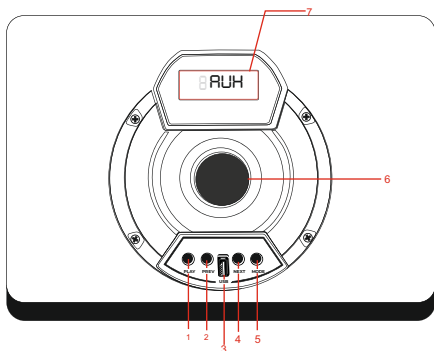


- 1. Play / Pause button
- 2. Previous Button
- 3. USB Port
- 4. Next Button
- 5. Mode Button
- 6. Volume Control Knob
- 7. LED Display

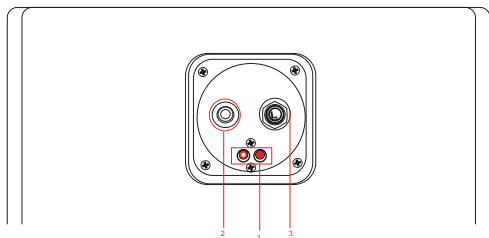

- 1. Aux input
- 2. Microphone Input
- 3. Microphone Volume

Remote Control

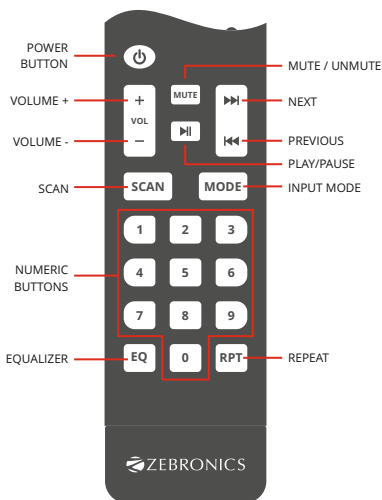

Power : standby ON/OFF

Numeric Pad (0-9) : To select particular track from USB drive directly or to enter FM Channel frequency directly

Vol+ : To increase the volume

Prev : To select the previous tracks in BT/USB or to Tune in FM mode

Vol- : To decrease the volume

RPT : To Switch between available repeat modes

Scan : To scan all FM channels available

Mode : Mode Selection (BT/AUX/USB/FM)

EQ : Short press to control BASS and short Press again to control TREBLE. Long Press to use Equalizer

Play/Pause To Play / Pause the current track. To switch next channel in FM mode

Next : To select the next tracks in BT/USB or to Tune in FM mode

Mute To Mute / Unmute

General Instructions

BT Mode:

Turn ON the speaker, press "Mode" button to switch to BT Mode. Switch ON BT on your phone or tablet and search for nearby BT devices, Search for the BT name "**ZEB-BEAST 100**" and tap to connect it.

AUX-IN:

Press the **Mode** button to select **AUX** mode. The speaker can be connected to an audio source using a RCA to 3.5mm cable. Connect the RCA connector to the speaker and the 3.5 mm Aux connector to an audio source. The songs from the audio source can be heard through the speaker.

USB:

The speaker automatically switches to **USB** input mode when a USB flash drive is inserted into the speaker. The songs from the USB audio source can be heard through the speaker (this mode cannot be selected on the speaker unless a USB flash drive is connected). Single Press The **PREV** to switch to previous audio track and Single Press the **NEXT** button to switch to next audio track.

FM Mode :

Press the **Mode** button to select **FM** mode. Long press **Play pause** button to initiate FM Scanning process. Once the scanning process is done, the Speaker automatically plays the First channel of the FM. Press **Prev** to switch to previous FM channel and Press **Next** to switch to next FM channel.

