




ZEB Tower Speaker **BOOST500**

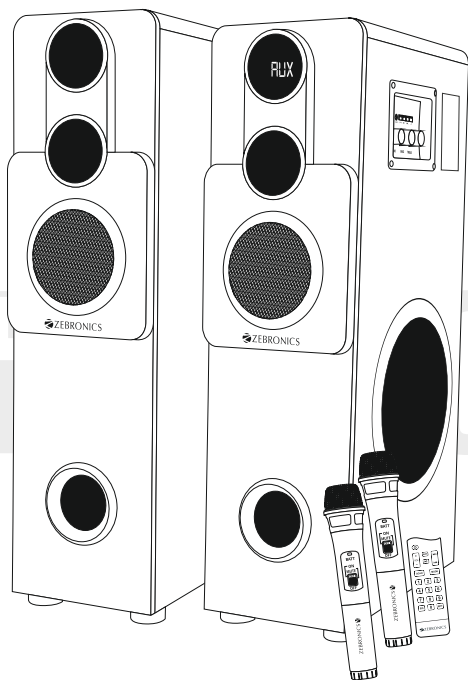

User Manual

www.zebronics.com

Thank you for purchasing **ZEB-BOOST 500** Tower Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid the self-disassembly of the product as it results in the failure of Warranty.

Features

Wireless BT/USB/FM/AUX

LED display

2 x 20.32cm Subwoofer

Remote control

Dual Wireless Microphone

Karaoke

2 way Design

Powerful Bass

Bass, Treble & Volume Control Knob

Microphone input jack

Specification

Output Power (RMS) : 120W (60W + 60W)

Driver size

Subwoofer : 20.32 cm x 2

Mid : 10.16 cm x 2

Impedance

Subwoofer : 4Ω


Mid : 6Ω

Frequency response	: 40Hz-20kHz
S/N Ratio	: ≥70dB
Separation	: ≥45dB
File format support	: MP3 (USB)
Line input	: 2ch RCA
Max. supported USB memory size	: 32GB
FM frequency scan range	: 87.5MHz - 108MHz
BT Name	: ZEB-BOOST 500
BT version	: 5.0
Product dimension (W x D x H)	: 18.5 x 32 x 62.5 cm
Net. Weight	
With Amplifier	: 8.5kg
W/O Amplifier	: 6.2kg


Package content

Speaker	: 2 U
Remote	: 1 U
Input Cable	: 1 U
Wireless Microphone	: 2 U
QR Code Guide	: 1 U

Control Panel Description:

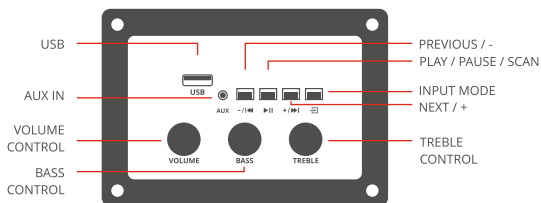

Remote Control

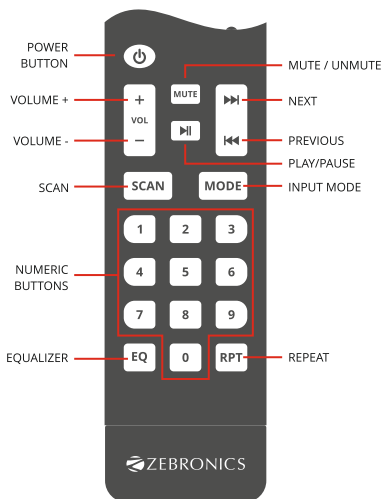

Power : standby ON/OFF

Numeric Pad(0-9) : To select particular track from USB drive directly or to enter FM Channel frequency directly

Vol+ : To increase the volume

Prev : To select the previous tracks in BT/USB or to Tune in FM mode

Vol- : To decrease the volume

RPT : To Switch between available repeat modes

Scan : To scan all FM channels available

Mode : Mode Selection (BT/AUX/USB/FM)

EQ : Short press to control BASS and short Press again to control TREBLE. Long Press to use Equalizer

Play/Pause To Play / Pause the current track. To switch next channel in FM mode

Next : To select the next tracks in BT/USB or to Tune in FM mode

Mute To Mute / Unmute

Instruction for MIC Volume / MIC Echo / MIC priority of the wired or wireless microphone with Remote control.



- ① → Long press button 1 to increase the MIC Echo
- ④ → Long press button 4 to decrease the MIC Echo
- ③ → Long press button 3 to increase the MIC volume
- ⑥ → Long press button 6 to decrease the MIC volume
- ② → Long press button 2 to increase the background music during karaoke
- ⑤ → Long press button 5 to decrease the background music during karaoke

Instructions for Use:

Button functions

- Press the **"Mode"** button to change the input mode (BT/AUX/USB/FM) of the speaker.
- Short press the **"Next/Prev"** button to change the Prev/ Next track or channel when in BT/USB mode or FM mode respectively.
- Long press the **"Next/Prev"** button to increase/decrease the speaker volume.
- Short press the **"Play/Pause"** button to Play/Pause the track being played
- Long press the **"Play/Pause"** button to Scan the available FM channels

General Instructions:

BT Mode:

Power ON the speaker, press the **"Mode"** button to switch to BT Mode. Switch ON BT on your phone or tablet and search for nearby BT devices, Search for the BT name **"ZEB-BOOST 500"** and tap to connect it.

USB Mode:

The speaker automatically switches to USB input mode, when a USB flash drive is inserted (this mode isn't selectable on the speaker or remote control unless a USB flash drive is connected).

Ensure that your USB flash drive contains MP3 audio files (other file types not supported).

FM Radio:

Switch the speaker to FM mode. In FM mode, use the **Play/Pause** button on the control panel or remote to scan for the available FM channels. Once the scanning is done, the scanned channels will begin to play. The next button or previous button on the control panel or remote can be used to change the FM channels.

AUX-IN:

The speaker can be connected to an audio device using an RCA to 3.5mm cable. Connect the one end of the cable to the speaker and the other end to an audio source. The songs from the audio source can be heard through the speaker.

