



ZEB Tower Speaker  
**BT750RUCF**



## User Manual

[www.zebronics.com](http://www.zebronics.com)

Thank you for purchasing the **ZEB-BT7500RUCF** Tower Speaker. Please read the user manual carefully before usage & save it for future reference.

**Note:**

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid self-disassembly of the product, it results in voiding the product's warranty.
- Turn off the speaker when it is not in use.

*To know more about Terms and conditions for warranty policy, please visit*

**<https://zebronics.com/pages/warranty-policy>**

**Features:**

2.0 channel Tower speaker  
Wireless BT/USB/SD/FM/AUX  
LED display  
2 x 20.32cm Subwoofer  
3 way speaker  
Remote control  
Karaoke  
Dual microphone input jacks  
Two wireless mic

**Specification:**

Output power (RMS) : 60W (30W + 30W)

Driver size

Subwoofer : 20.32 cm x 2

 
Mid : 10.16 cm x 2

Tweeter	: 3.81 cm x 2
Impedance	
Subwoofer	: 4Ω
Mid	: 4Ω
Tweeter	: 4Ω
Frequency response	: 40Hz-20kHz
S/N Ratio	: ≥70dB
Separation	: ≥45dB
File format support	: Mp3
(USB/SD)	
Line input	: 2ch RCA
Max. supported	
USB/SD memory size	: 32GB
FM frequency	
scan range	: 87.5 MHz - 108 MHz
BT name	: ZEB-BT7500RUCF
BT version	: 5.0 + EDR
Product dimension	: 17 x 31.1 x 61.2 cm
(W x D x H)	
Net. weight	
(with amplifier)	: 8.3kg
(w/o amplifier)	: 6.5kg

### **Package contents:**


Tower speaker	: 2 U
Remote	: 1 U
Wireless Mic	: 2 U
Input cable	: 2 U
Antenna cable	: 1 U
QR Code Guide	: 1 U

# Front Panel Description:

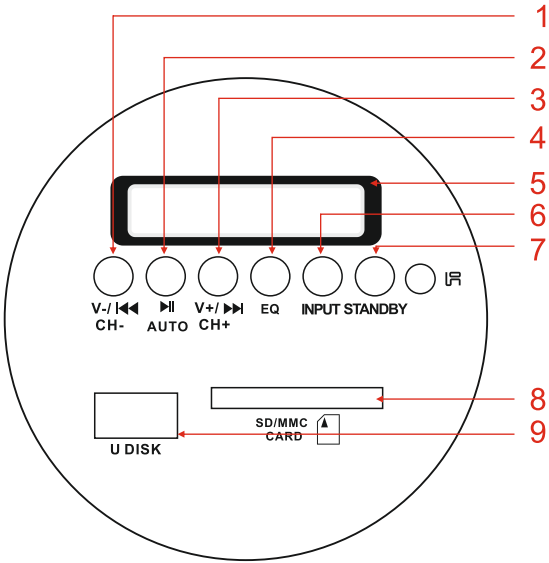


- 1. Previous Track/FM station | Volume Decrease
- 2. Play/Pause | Auto FM Scan
- 3. Next Track/FM station | Volume Increase
- 4. Equaliser Presets
- 5. LED Display
- 6. Input Mode
- 7. Standby | Awake
- 8. SD card Input
- 9. USB Input

## Remote Control Description:

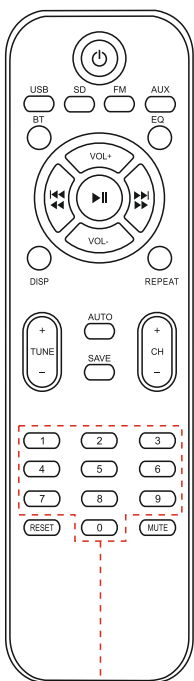 

- ⏻** Standby/Awake
- USB** USB input Mode
- SD** SD Input Mode
- FM** FM Input Mode
- AUX** AUX Input Mode
- BT** BT Input Mode
- EQ** Equalizer presets
- ⏮** Play & pause
- ⏪** Previous track
- ⏩** Next track
- ⏭** Fast forward
- VOL-/+** Master Volume
- DISP** Brightness Adjust
- REPEAT** Repeat / Shuffle / Loop
- TUNE-/+** Previous/Next FM frequency Long press to search the channel
- CH-/+** Previous /Next Radio Channel
- AUTO** Press for FM Channel Scanning
- SAVE** Save FM Channel
- RESET** EQ preset & master volume reset
- MUTE** Mute / Unmute
- ▶** Press any key to choose the track


# Speakers Connectivity Diagram:

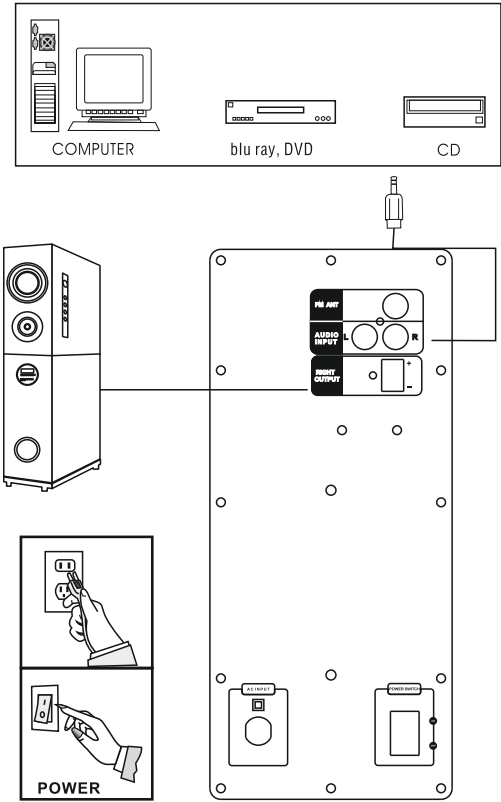 

**Note:** Insert the plugs fully into the jacks. Loose connections may produce a humming sound or other noise interference.

**Important:** Connect the speakers and all other external device and finally connect the AC power cord.

## Side Panel & Microphone Description:

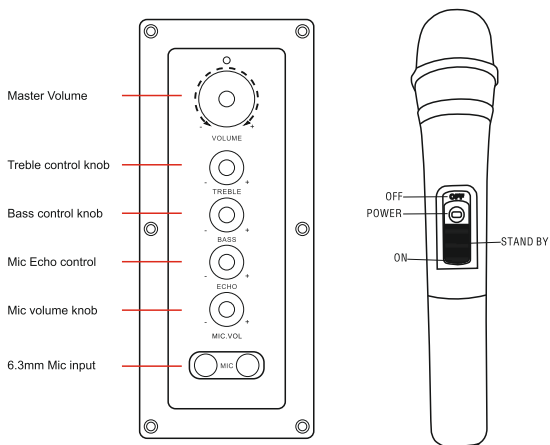 

## Instructions for Use:

### Button Functions:

- Short press the **"Input"** button to change the input mode.
- Short press the **▶▶|** button - Next track / Radio station.
- Short press the **|◀◀** button - Previous track / Radio station.
- Long press the **▶▶|** or **|◀◀** button - Increase / decrease volume.
- Short press the **▶||** button – Play / Pause / Mute the track.
- Long press the **▶||** button to auto scan the nearby available FM channels.
- Single press the **"Standby"** button - Standby / Awake.

## **General instruction**

### **Bluetooth connectivity**

Switch the speaker to BT mode, Scan for nearby BT devices in your mobile. Tap on "ZEB-BT7500RUCF" and click pair.

### **USB / SD Mode**

Insert the USB/SD card to the speaker. The speaker will detect the USB/SD card automatically & the songs from it will be played. Supports only Mp3 file format.

### **FM Radio**

Switch the speaker to FM, In FM Mode, Long press the Play/Pause Key to scan the available FM channels. Once the scanning is done, The Speaker will start playing the first scanned channel. Make sure to use the provided FM antenna for better reception.

### **AUX-In**

The speaker can be connected to an audio device using the provided audio Cable. Connect the one end of the Cable to the speaker & connect the other end of the cable to any audio source. Media functions can be controlled from the audio source device.

## **Microphone instructions:**

### **1. Wired Mic :**

- Plug the wired microphone into the



6.3mm microphone input jacks.

- Now adjust the microphone volume & echo knobs according to your preference.

## **2. Wireless Mic :**

- Unscrew the bottom base of the microphone to insert the 2 x AA batteries.
- Slide the power On/Off switch on the microphone and it gets connected to the speaker automatically.
- Adjust the Mic volume knob & echo control knobs on the speaker according to your preference.

## **Recording function**

To record a voice, plug-in a USB/SD card into the speaker which will act as a storage device. Press the REC. key on the remote to start/stop recording. Once the song or voice is recorded through the Mic, press the REC. PLAY key to play the recorded file.

*Note:* Speaker can record only the Mic input.

