



Tower Speaker
ZEB BT800RUF



User Manual

www.zebronics.com

Thank you for purchasing **ZEB-BT800RUF** Tower Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid the self-disassemble of the product as it results in the failure of Warranty.

Features

Wireless BT/USB/FM/AUX/MIC Input

LED display

13.5cm Subwoofer

Remote control

Karaoke

Wired Mic

Specification

Output Power (RMS) : 50W (26W + 12Wx2)

Driver size

Subwoofer : 13.5cm

Full range : 7.5cm

Impedance

Subwoofer : 8Ω

Full range : 4Ω

Frequency response : 40Hz-18Khz

S/N Ratio : ≥65dB

File format support


(USB) : MP3

Line input	: 3.5mm Jack
Max. supported USB memory size	: 32GB
FM frequency scan range	: 87.5MHz - 108MHz
BT Name	: ZEB-BT800RUF
BT version	: 5.0
Product dimension (W x D x H)	: 200 x 200 x 620 mm
Net. Weight	: 6.3kg


Package content

Speaker	: 1 U
Remote	: 1 U
Input Cable	: 1 U
Wired Microphone	: 1 U
QR Code Guide	: 1 U

Product details:

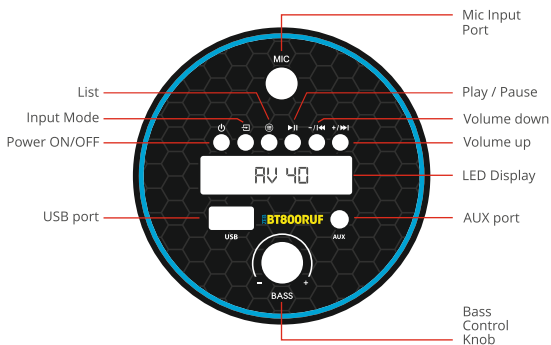

Remote Control

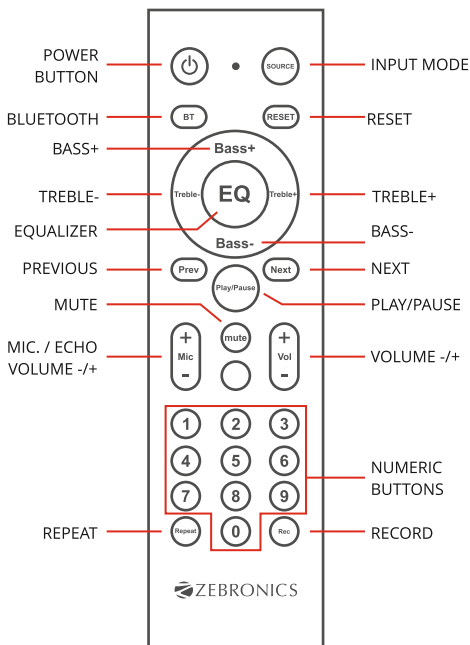


Note: Instruction for Integrated Mic/Echo Button usage in Remote control.

- Short press "Mic/Echo " button to change Mic volume.
- Long press "Mic/Echo" button to change Mic Echo volume.

Instructions for Use:


Button functions

- Short press the  button in control panel or remote to change the input mode (BT/AUX/USB/FM) of the speaker.

- Short press the **+ / ►►** button to change the Next track or channel when in BT/USB mode or FM mode respectively.
- Short press the **- / ◀◀** button to change the Previous track or channel when in BT/USB mode or FM mode respectively.
- Long press the **▶||** button to scan all FM channels available. Use Next/ Prev button to change the FM channels.

General Instructions:

BT Mode:

Power ON the speaker, press  button to switch to BT Mode. Switch ON BT on your phone or tablet and search for nearby BT devices, Search for the BT name **"ZEB-BT800RUF"** and tap to connect it.

USB Mode:

The speaker automatically switches to USB input mode with the LED display when a USB flash drive is inserted (this mode isn't selectable on the speaker or remote control unless a USB flash drive is connected). Ensure that your USB flash drive contains MP3 audio files (other file types not supported).

FM Radio:

Switch the speaker to FM mode. In FM mode, long press the Play/Pause button in the control panel or in remote control to scan for

the available FM channels. Once the scanning is done, the scanned channels will begin to play. Use Next/Previous button on the control panel or remote can be used to change the FM channels.

AUX-IN:

The speaker can be connected to an audio device using an 3.5mm to 3.5mm cable. Connect the one end of the cable to the speaker and the other end to an audio source. The songs from the audio source can be heard through the speaker.

Recording Function:

1. To record the audio content using the wired mic, kindly plug-in the USB drive for storing the recordings.

2. Press the REC button in the remote to start recording.

3. While recording, the karaoke can't be played.

4. To stop the recording, press the REC button again and the recorded content will be played.

ISO 9001:2015 Certified Company

www.zebronics.com

