 




Tower Speaker
BT9500pro

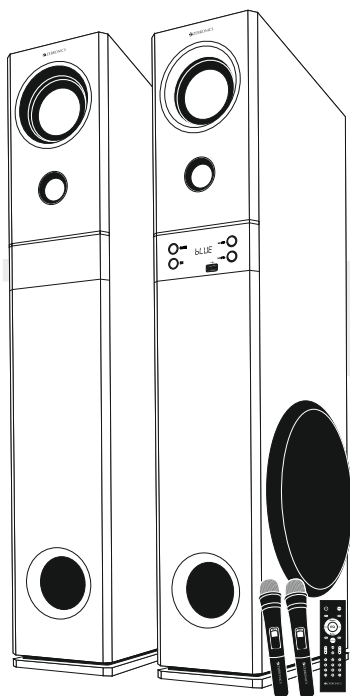

User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing the **ZEB-BT9500 PRO** Tower Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this speaker at the high temperature and high humidity environment.
- Avoid the self-disassembly of the product as it results in the failure of Warranty.
- In case of any liquid fallen into the speakers. cut off the power immediately and contact the nearby authorized service center.
- When receiving high output signal from any audio sources (USB, AUX, FM, HDMI, Optical IN) don't turn the volume to maximum to avoid sound distortion.
- Turn off the speaker, if speaker is not being used for long time. For Indoor use only.

Features:

2.0 Channel tower speaker

Wireless BT / USB / AUX / FM / Optical IN /
HDMI (ARC)

LED display

2 x 25.4cm Subwoofer

3 Way speaker

Remote control

Karaoke

Two wireless Mics

Dual microphone input jacks

Specification:

Output power (RMS) : 120W (60W + 60W)

Driver size

Subwoofer : 25.4 cm x 2

Mid : 10.16 cm x 2

Tweeter : 6.35 cm x 2

Impedance

Subwoofer : 4Ω

Mid : 8Ω

Tweeter : 6Ω

Frequency response : 20Hz-20kHz

S/N Ratio : ≥60dB

Separation : ≥35dB

File format support : MP3/WMA
(USB)

Line input : 2ch RCA, Optical IN,
HDMI (ARC)

Max. supported

USB memory size : 32GB

FM frequency

scan range : 87.5 MHz - 108 MHz

BT name : ZEB-BT9500 PRO

BT version : 5.0

Product dimension : 175 x 345 x 925 mm
(W x D x H)

Net. weight


(with amplifier) : 13.8 Kg

(w/o amplifier) : 11 Kg

Package contents:


Tower speaker	: 2 U
Remote control	: 1 U
Wireless Mic	: 2 U
Input cable	: 1 U
QR Code Guide	: 1 U

 Front Panel Description:

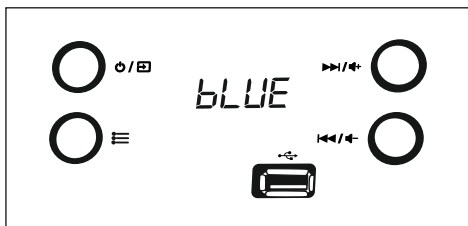

1. Long press "**Power/Input**" button to Power On/OFF the speaker.
2. After switching the speaker ON, short press the "**Power/Input**" button consecutively to change the input mode (BT/ AUX/ USB/ FM/ Optical In / HDMI (ARC)) of the speaker.
3. Long press the "**Next /Prev**" button to increase/decrease the speaker volume. The LED display shows the volume control as "U01".
4. Short press the "**Next /Prev**" button to change to Next/Prev track.
5. Integrated "**Bass/Treble/Mic/Echo**" Button settings:
 - Short press "**Bass/Treble/Mic/Echo**" button consecutive to select Bass/treble/Mic Vol/Echo Vol control . The following prefix will appear on the LED display "BS/TB/UC/EC".
 - Use "**Next/Prev**" button or in Remote control to change the Bass/Treble/MIC/ECHO volume selector.

 
Speakers Connectivity Diagram:

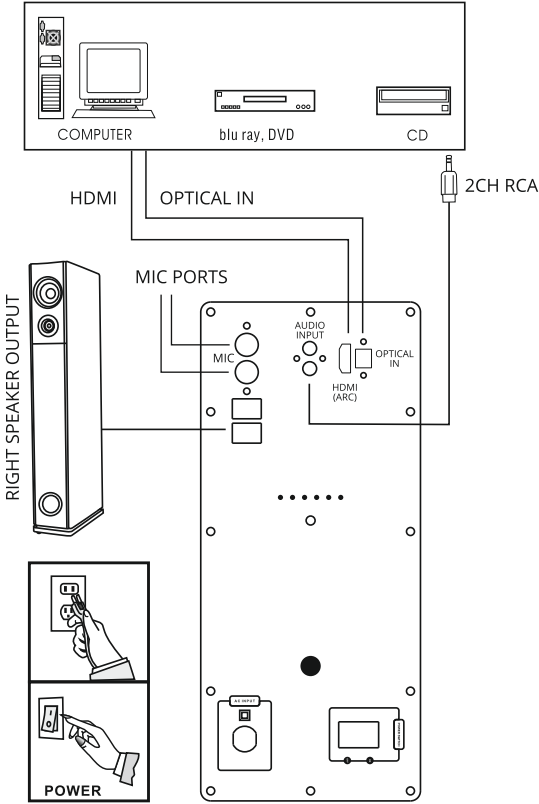

Note: Insert the plugs fully into the jacks. Loose connections may produce a humming sound or other noise interference.

Important: Connect the speakers and all other external device and finally connect the AC power cord.

 Remote Control

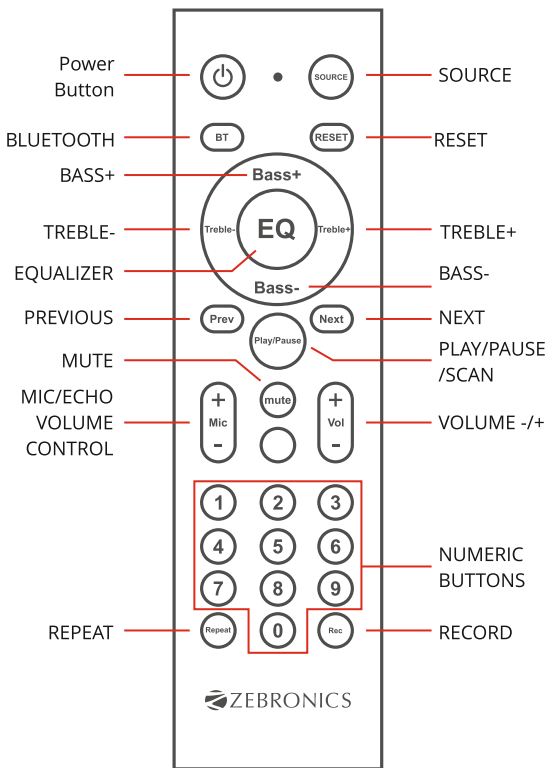

Note: Instruction for Integrated Mic/Echo Button usage.

- Short press "Mic/Echo " button to change Mic volume. The following setup will appear on the LED display "UC01"
- Long press "Mic/Echo" button to change Mic Echo volume. The following setup will appear on the LED display "EC01"

Instructions for Use:

General Instructions

BT Mode:

Power ON the speaker, short press **"Power/Input"** button on control panel or remote control to switch to BT Mode with the LED display. Switch ON BT on your phone or tablet and search for nearby BT devices, search for the BT name **"ZEB-BT9500 PRO"** and tap to connect it.

FM Mode:

Switch the speaker to FM Mode, Long press the Play/Pause button in remote control to scan the channels automatically.

Use Next/Prev buttons in remote control or front control panel to change the channels.

USB Mode:

The speaker automatically switches to USB input mode with the LED display when a USB flash drive is inserted. Ensure that your USB flash drive contains MP3 / WMA audio files.

***Note:** This mode isn't selectable on the speaker or remote control unless a USB flash drive is connected.*

AUX-IN:

Switch the speaker to AUX Mode. The speaker can be connected to an audio device using an RCA to 3.5mm cable. Connect the one

end of the cable to the speaker and the other end to an audio source. The songs from the audio source can be heard through the speaker.

HDMI (ARC) Mode:

This speaker supports HDMI(ARC) with Audio Return channel. If your TV is HDMI(ARC) compliant, you can hear the TV audio through your speaker by using a Single HDMI cable, use a high speed HDMI cable, connect the one end of HDMI connector to the speaker and the other end to the TV. The HDMI (ARC) port on the TV might be labeled differently. For details, See the TV's user manual. Use either the buttons on the speaker or the Input button on the remote control to switch to **"HDMI (ARC)"** mode. After successfully connected, the LED get display.

***Note:** Playback functions (play/pause, tracks, pair) cannot be adjusted through the speaker remote when in ARC mode.*

Optical Mode:

Use this Input mode to play music from the optical digital output for example from a TV on your speaker. The TV must have an optical digital output. Use the optical cable to make the connection.

Connect the one end of the optical cable to the optical digital output of your TV and the

other end to the optical digital input of your speaker.

Switch the TV and speaker ON. Set the connected TV to "PCM stereo" or "Stereo 2.0".

Press the "Power/Input " button on the speaker or on remote control to switch the speaker to Optical Input mode. After successfully connected, with the LED display.

Note: *Playback functions (play/pause, tracks, pair) cannot be adjusted through the speaker remote when in optical mode.*

